




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Cargo Area Protector
APPLICATION:	Rogue Third Row
PART NUMBER:	999C3 G2100 (Black) 999C3 G2101 (Beige)

KIT CONTENTS:

Item	Qty.	Part Description
A	1	Cargo Area Protector (5-Pieces)
B	24	Hook and Loop Adapter (comes attached to underside of protector)
C	1	Installation Instruction Replacement Template

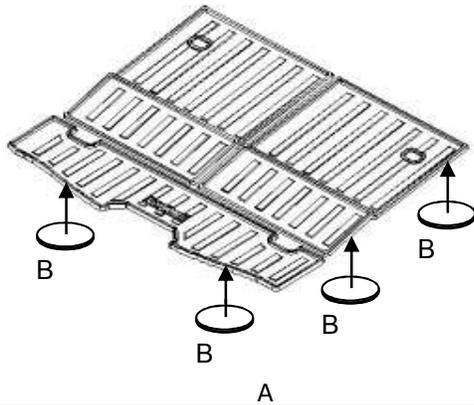

TOOLS REQUIRED:

- N/A (Unless vehicle is an early production and equipped with a center bracket - see page 4)
 - #2 Phillips screw driver
 - Saw

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:





- To maintain luster of your cargo protector, clean with a cloth as required using soap and water.

Note: Protector is equipped with very aggressive hook fasteners on underside. Do not place protector in the cargo area without due care. Hook fastener will affix itself to ANY carpet surface. Use care when placing into vehicle.

⚠ WARNING

Protector is designed to transport normal cargo contents. Flammable or dangerous materials should not be transported in your vehicle at any time.

INSTALLATION PROCEDURE:

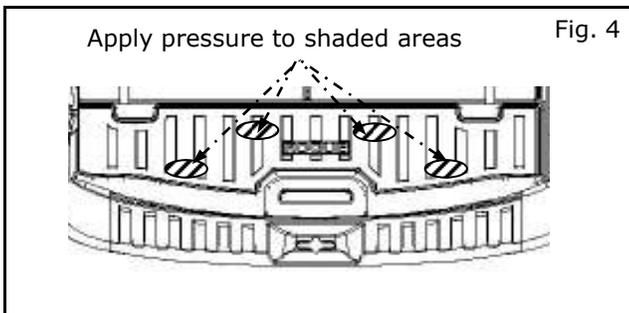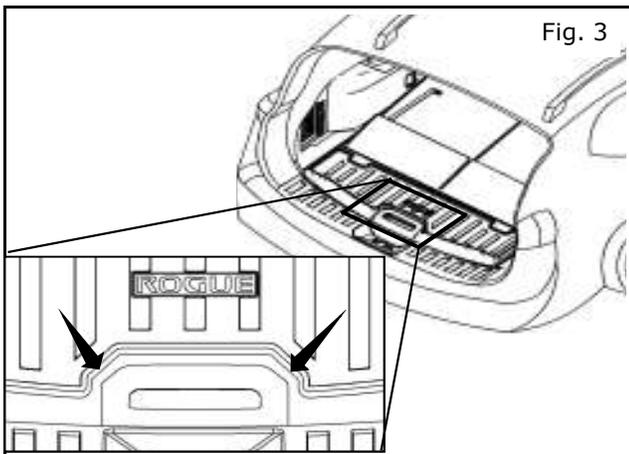
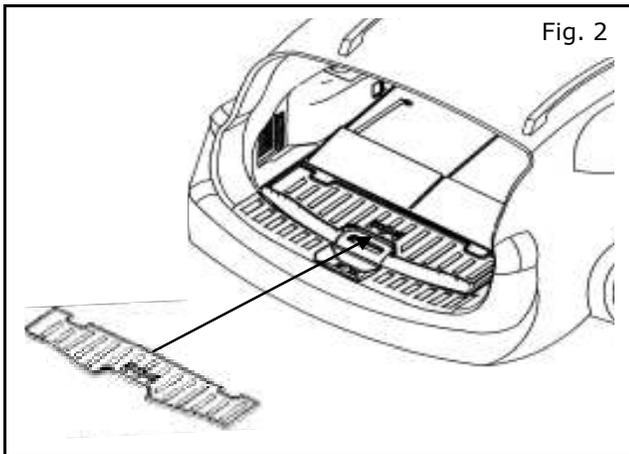
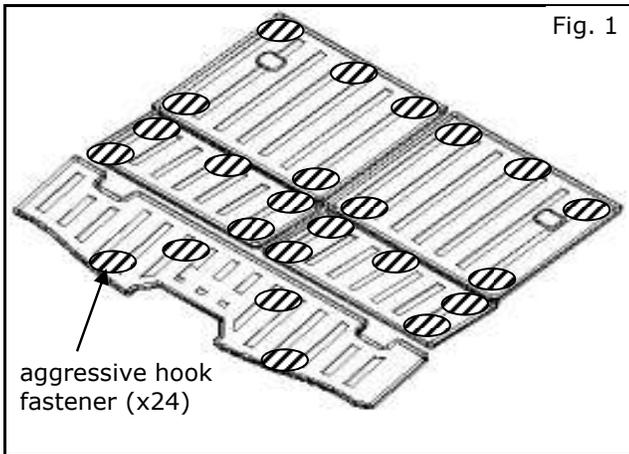


Note:

- Protector is equipped with aggressive hook fastener on underside. **DO NOT PEEL GREEN BACKING OFF UNTIL DIRECTED TO.**
- Use care when placing into vehicle.

1. Place protector onto rear cargo area.
2. Align edges of protector with even gap around handle and edges of part.
3. Hold part in place and carefully remove green backing off each aggressive hook fastener.
4. Apply pressure to shaded areas as shown to secure hook and loop fasteners.

INSTALLATION PROCEDURE:

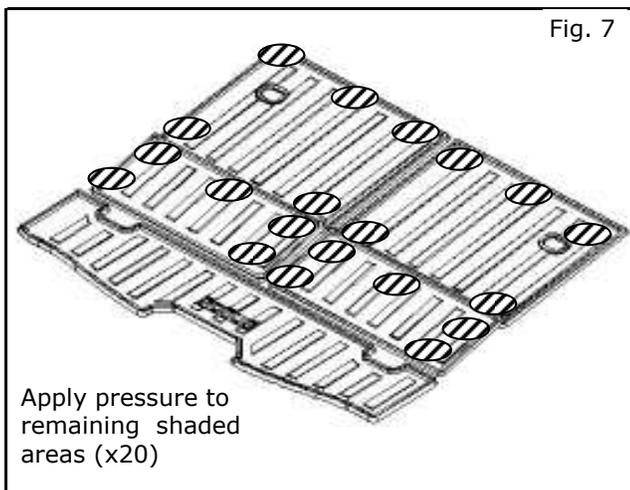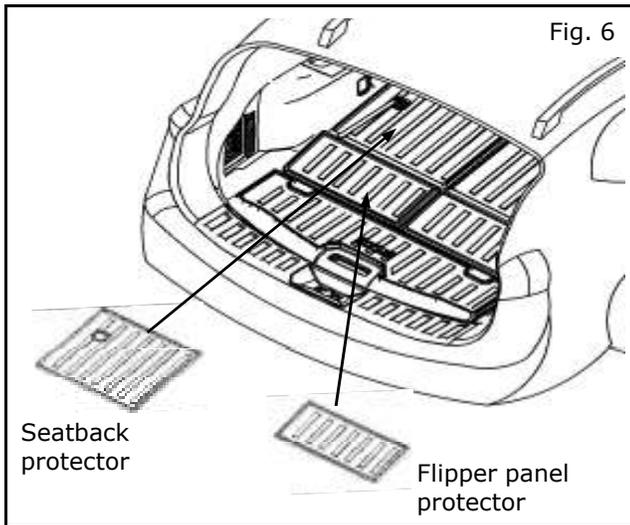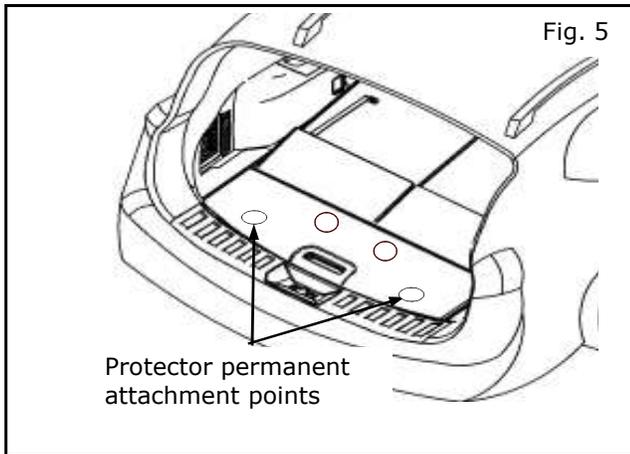

5. When protector is removed from vehicle, 2" round hook/loop discs remain attached to load floor carpet.


Note: Do not remove adapters after they have been properly installed.

6. Align protectors with even gap around seatback and flipper panel edges. Be sure to pull seat pull straps through seatback protector.
7. Hold each protector in place and carefully remove green backing off each aggressive hook fastener.
8. Apply pressure to remaining shaded areas as shown to secure hook and loop fasteners.


INSTALLATION PROCEDURE:

Note: If vehicle has center bracket (early production vehicle), proceed with steps 9-11.

9. Remove center bracket screw and plastic cover.

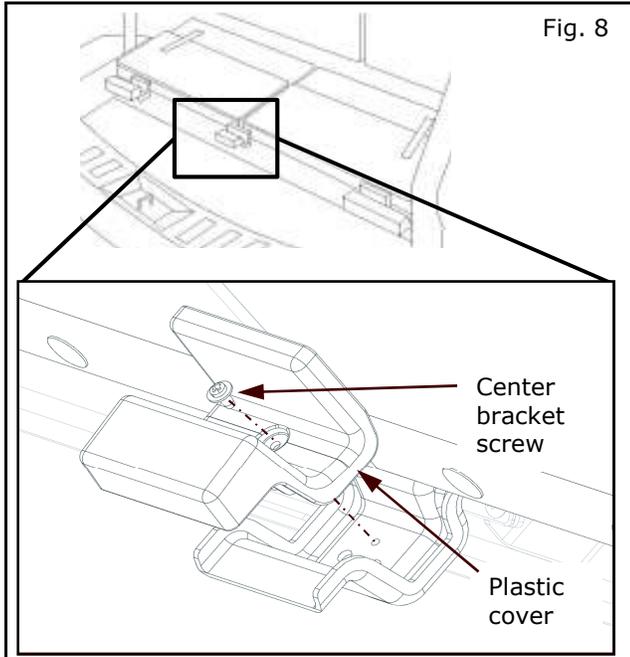

10. Cut plastic cover along dotted line at 45° as shown in Fig 9.

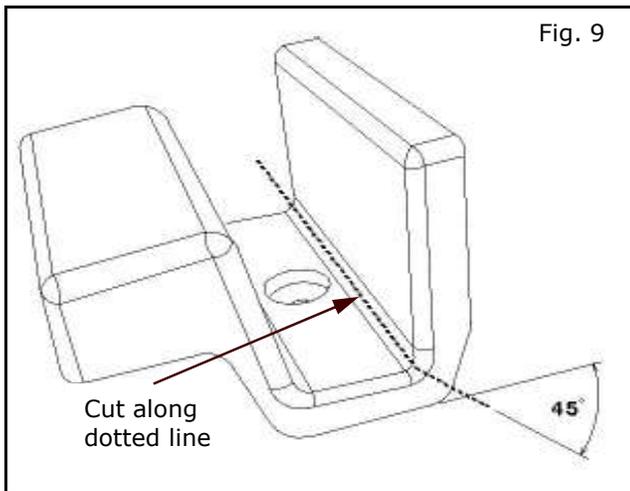

11. Re-install plastic cover onto center bracket.

