



GENUINE PARTS

INSTALLATION INSTRUCTIONS


1. **DESCRIPTION:** Accent light Kit
2. **APPLICATION:** Versa (2012)
3. **PART NUMBER:** 999F3 AW008 - Universal Accent Lighting Kit.

4. KIT CONTENTS:


Item	QTY	Description	Service Part Number
A	1	Control module	999F3 AW004
B	1	Encoder and harness assembly	999F3 AW006
C	1	Foot well lights and harness assembly	999F3 AW001
D	1	Cup holder lights and harness assembly	999F3 AW003
E	1	Harness Vehicle interface	999F3 AW005
F	1	Control Knob	999F3 AW002
G		Kit contents in back of Installation Instructions	
H	2	Tether Clips	76988 JM00A




A



B

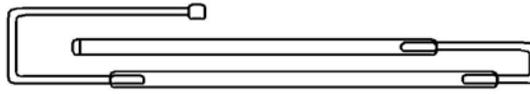

C

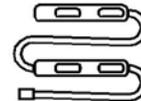


D

5. TOOLS REQUIRED

- Trim stick
- 8mm, 10mm and 11mm sockets
- #2 Phillips screwdriver
- Protective cloth
- Needle nose pliers
- Ratchet and 6" extension
- 5/16", 3/16" and 9/32" drill bits, drill, drill stops.
- T-20 Torx bit
- Scissors
- Electrical tape, masking tape.

6. PRE-INSTALLATION CAUTION/NOTES

- Dealer installation recommended. Instructions may refer to Service Manual.
- Installation may require special tools
- This part is to be installed at a surface temperature. no warmer than 65-100°F
- Remove and prepare templates located at the end of Installation Instructions.
- All electrical connectors are to be viewed from wiring side as shown.


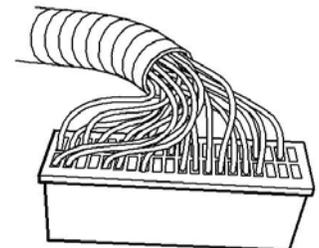


CAUTION

- This accessory must only be installed as specified in these instructions.
- Ensure at all times that parts are securely fitted and will not compromise the safe function of vehicle systems.

INSTALLATION INSTRUCTIONS - Accent lighting Kit

7. INSTALLATION OVERVIEW

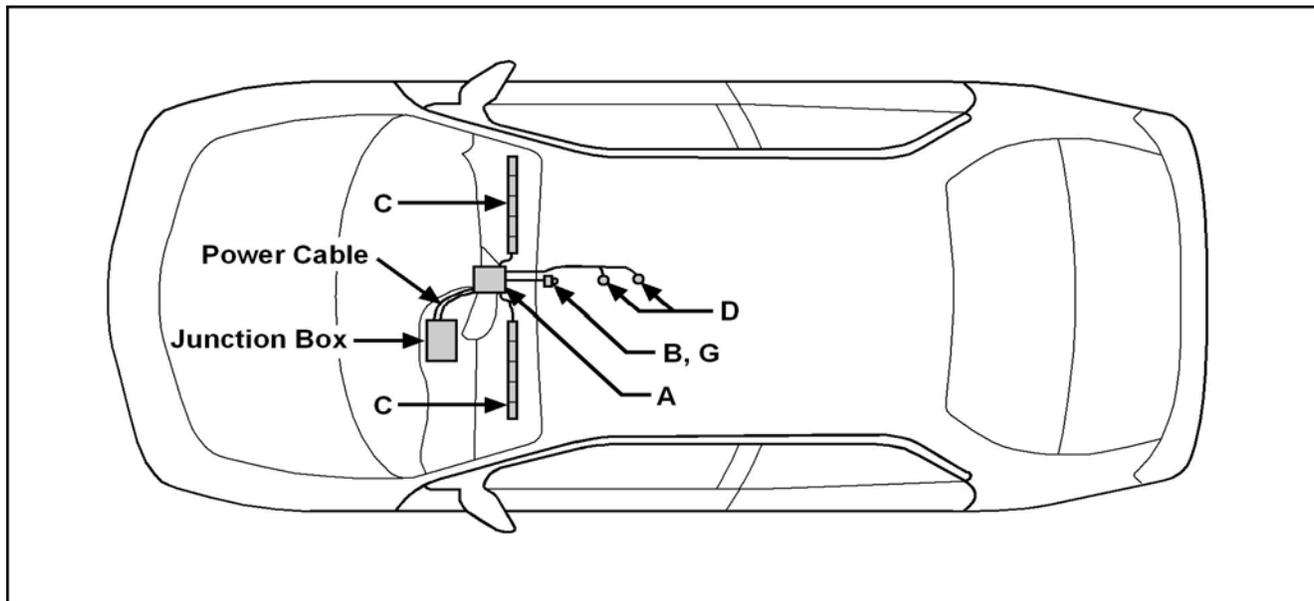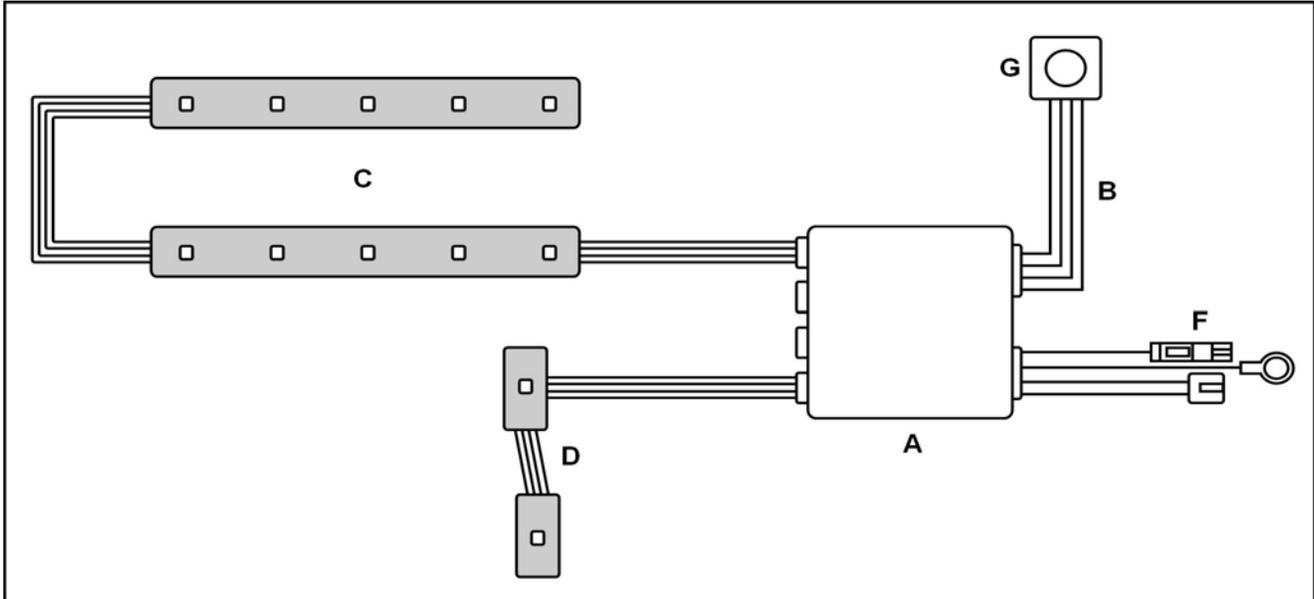

8. CRITICAL STEPS






The following steps are critical and must be performed **EXACTLY** as specified to ensure proper installation:

- Location of the lights must be followed exactly as described in this instruction.
- Posi-Tap™ instructions must be specifically followed as described.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

9. VEHICLE PREPARATION

- 1) Apply parking brake
- 2) Confirm the vehicle is no longer in the default shipping state (Extended Storage Switch Pulled Up and BCM in Transit Mode). Failure to confirm the vehicle has been removed from this state will result in the loss of normal vehicle operation. The confirmation requires two checks:
 - 2a) Locate the Extended Storage Switch in the cabin fuse block. Once located, check that it is in the "Customer" position. See below for reference.
 - 2b) Turn the ignition switch from "OFF" to "ON" position. If turn indicators illuminate for approx. 1 minute, the vehicle is in shipping mode. To exit shipping mode, return the ignition switch to "OFF" position. Simultaneously push the wiper and turn signal stalks downward and hold for 2 seconds.

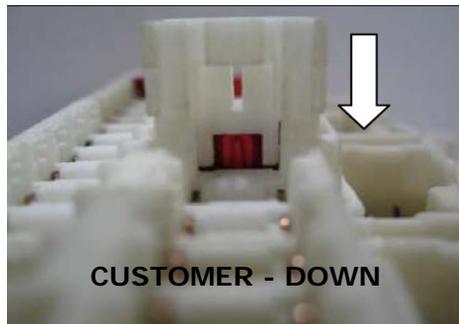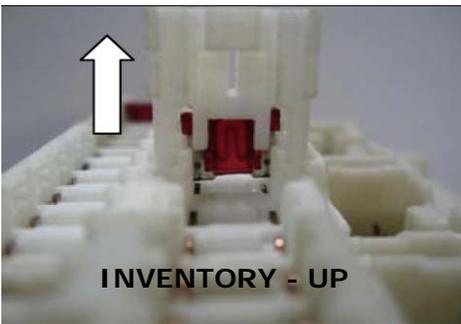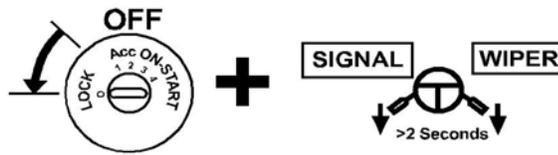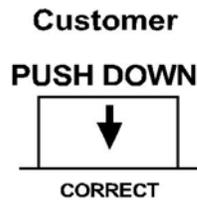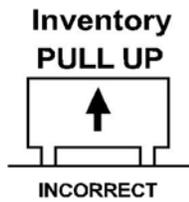

NOTE: Typical vehicle condition shown here. Switch is easily identifiable by the permanent, push-pull fuse holder. Actual position on the fuse block may vary, vehicle to vehicle.

- 3) Record customer radio presets.

	1	2	3	4	5
A					
B					
C					

NOTE: USE CAUTION WHEN REMOVING / RE-INSTALLING TRIM COMPONENTS TO AVOID DAMAGE, SCRATCHES, BREAKING OF CLIPS AND / OR INTERIOR TRIM PANELS. MOVE ALL TRIM COMPONENTS TO A PROTECTED AREA.

⚠ WARNING


The battery is left connected as various parts of the car need to be moved to enable components to be removed and replaced. Use caution when activating parts of the car.

10. ORDER OF INSTALLATION


1. Interior preparation - remove panels.
2. Install - Cup Holder installation
3. Install - Encoder.
4. Reinstall - Center Console.
5. Install - Passenger Footwell light.
6. Reinstall - Glove Box and Footwell trim.
7. Install - Vehicle interface.
8. Install - Driver Footwell light.
9. System check.
10. Reinstall - Remaining Panels.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit


11. INTERIOR PREPARATION

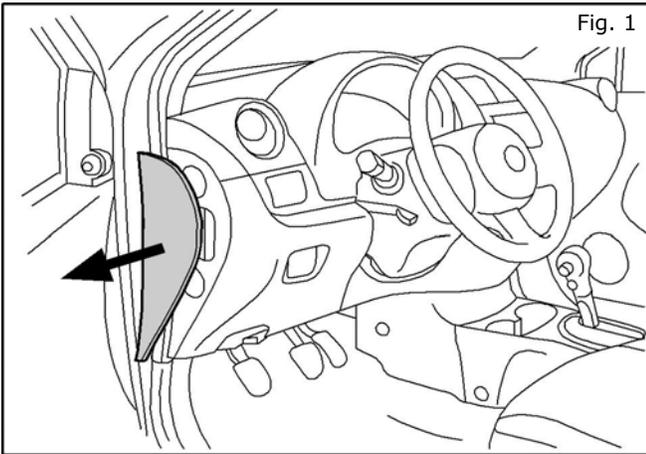

1. Carefully remove the LH Instrument side mask by the driver's door.

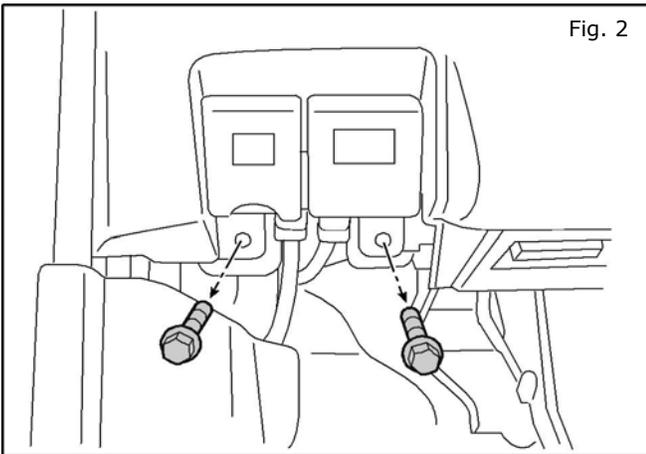

2. Remove two (2) 10mm bolts under the hood release lever. Remove the hood release lever assembly.

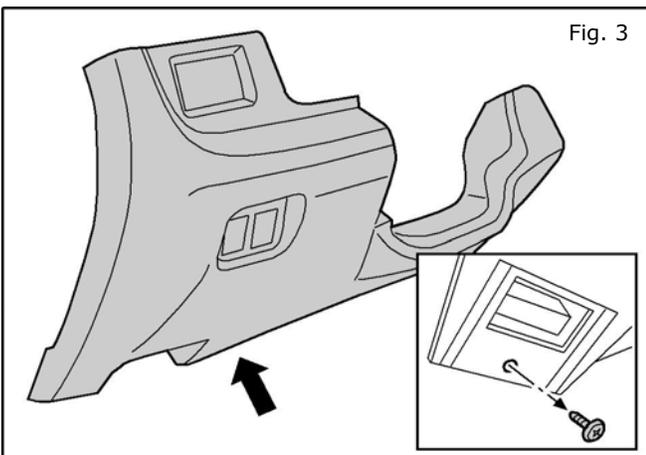


3. Remove one (1) phillips screw holding the diagnostic port to the panel.

Note: Place your hand behind the panel to hold it as it is unscrewed.


INSTALLATION INSTRUCTIONS - Accent Lighting Kit

11. INTERIOR PREPARATION

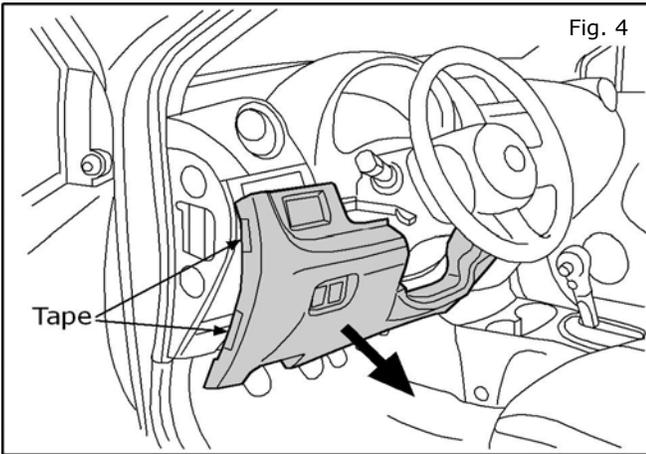


4. Carefully pull the steering finisher down away from the instrument panel. Pry the left side away first, then the right side.

NOTE: Apply masking tape as needed to surfaces to avoid scratches.

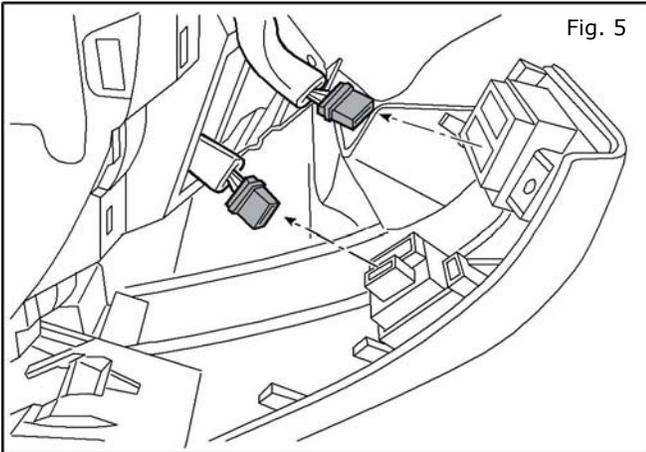


5. Disconnect two (2) electrical connectors from back of panel.

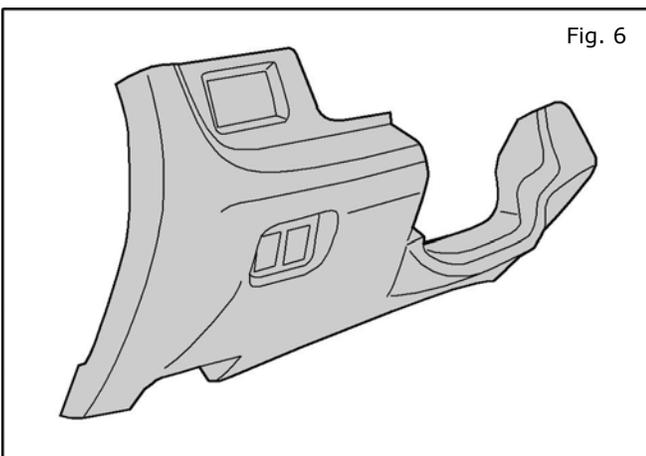

6. Remove the steering finisher and set aside.


INSTALLATION INSTRUCTIONS - Accent Lighting Kit

11. INTERIOR PREPARATION

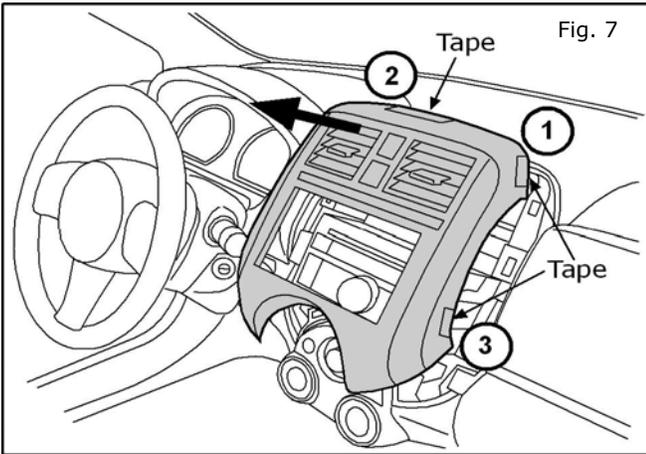


7. Carefully pry off center stack upper trim panel. Follow the pry off sequence 1, 2 and 3 as shown.

NOTE: Apply masking tape as needed to surfaces to avoid scratches.

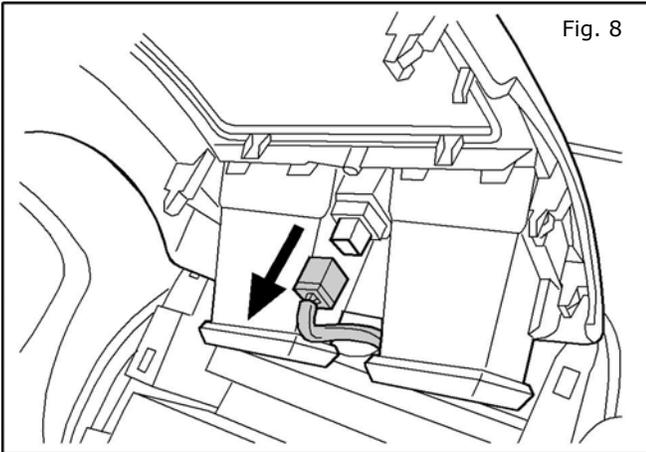

8. Disconnect two (2) electrical connectors behind trim panel and set panel aside.

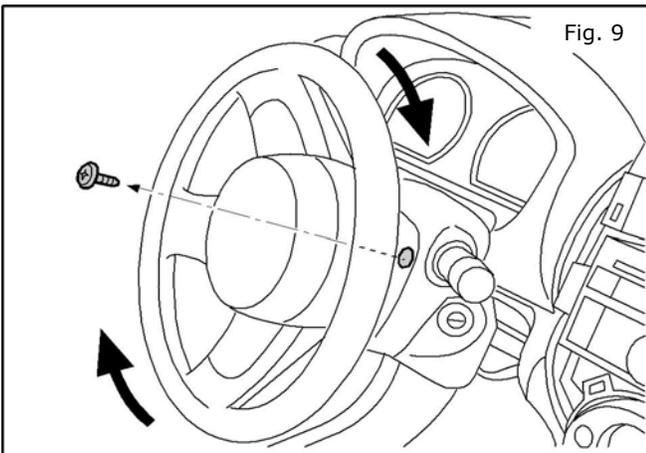


NOTE: Turn the car ignition "On" and rotate steering wheel 90 degrees to the right.

9. Remove one (1) phillips screw from behind steering wheel on the right.


INSTALLATION INSTRUCTIONS - Accent Lighting Kit

11. INTERIOR PREPARATION

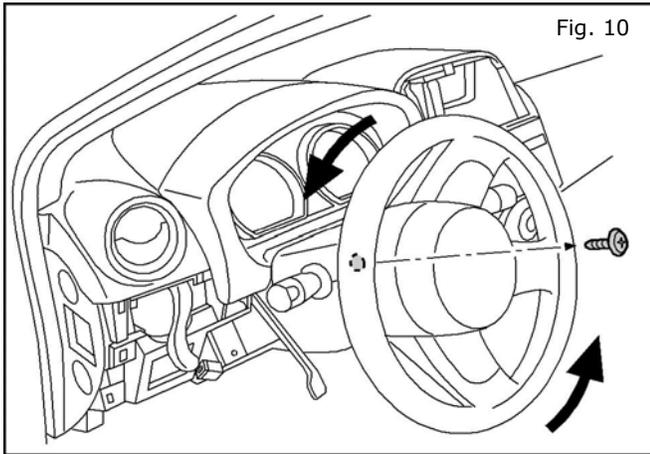

NOTE: Rotate steering wheel 180° in the opposite direction


10 Remove one (1) Phillips screw from behind steering wheel on the left.

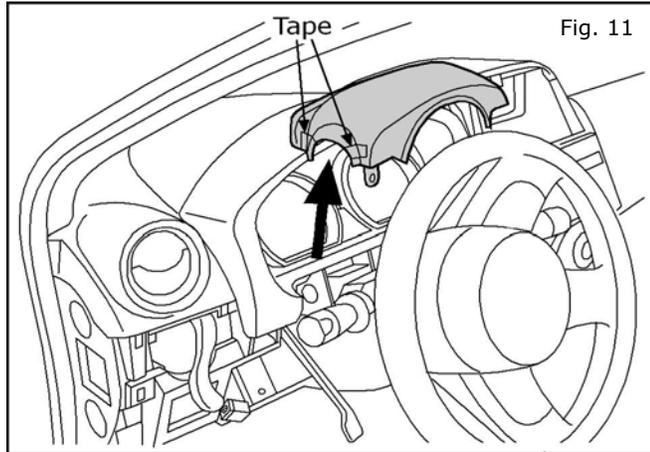

11. Turn the car ignition to "Off" position.

Carefully pry off the trim panel from the top half of the steering column and set it aside.

NOTE: Apply masking tape as needed to surfaces to avoid scratches.

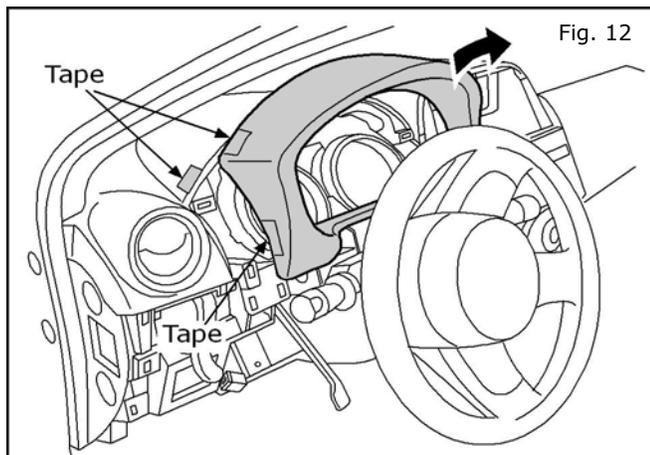


12. Carefully pry off the instrument cluster trim panel and set it aside.


NOTE: Apply masking tape as needed to surfaces to avoid scratches.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit


11. INTERIOR PREPARATION

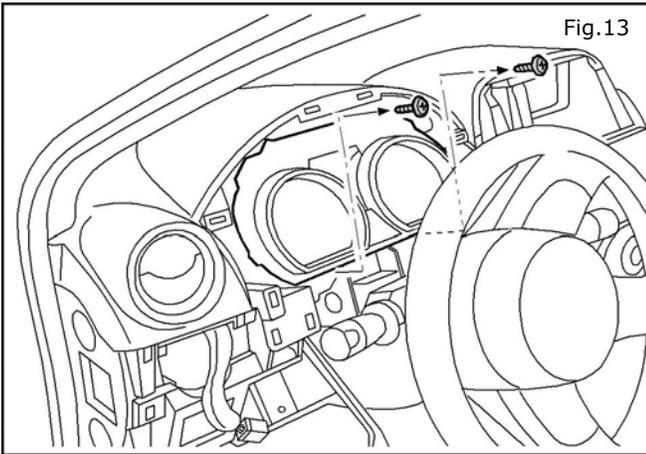

13. Remove two (2) Phillips screws at the bottom of the instrument cluster.

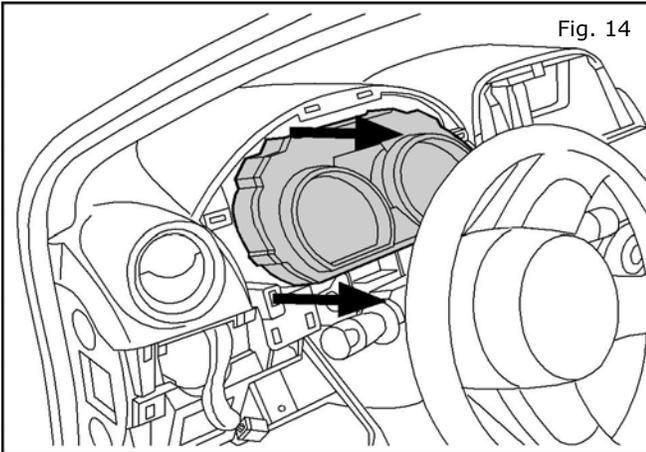


14. Remove the cluster by pulling it straight out to disconnect the clips at the top of the assembly.

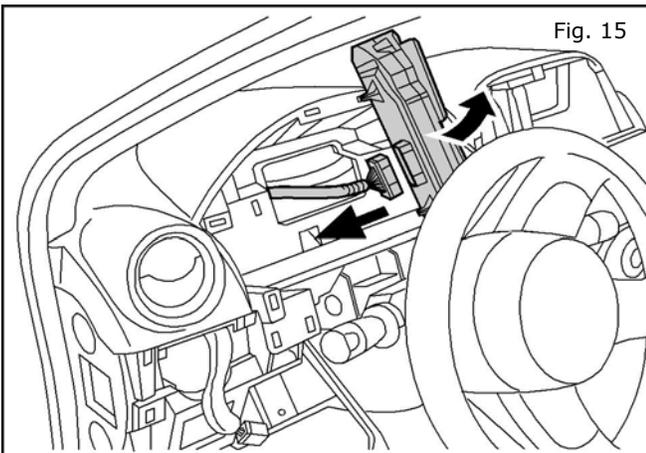


15. Rotate the instrument cluster upward and disconnect the white electrical connector from the back. Set the instrument cluster aside.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

11. INTERIOR PREPARATION

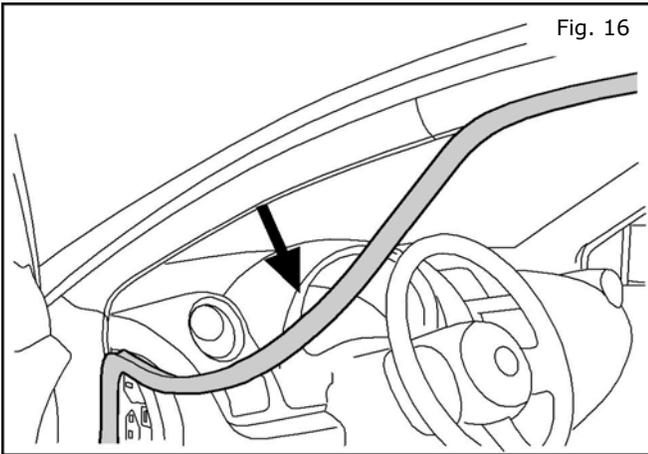

16. Carefully pull back the door seal welt from the footwell finisher to just past the A Pillar trim panel.

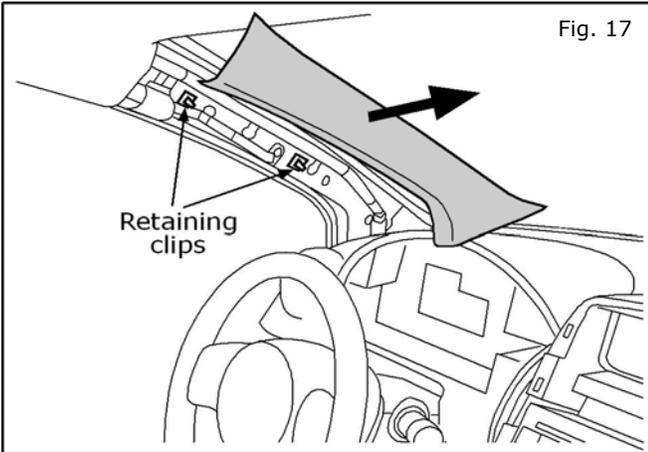


17. Carefully remove the A Pillar trim panel.

NOTE: There are two (2) retaining clips that hold the trim panel to the A Pillar along with a number of press clips.

Use a pair of needle nose pliers to remove the retaining clips and free the A Pillar trim panel.


Do not reuse these clips after removal. Use the new clips provided in the kit.

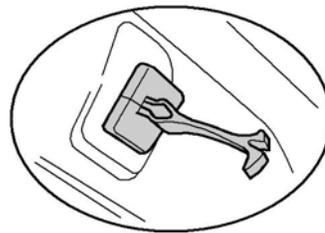

NOTE: IF ANY CLIPS ARE DAMAGED OR LOST, CONTACT DEALER FOR PART NUMBER 76988 JM00A TO REPLACE.


INSTALLATION INSTRUCTIONS - Accent Lighting Kit

12. POSI TAP INSTRUCTIONS

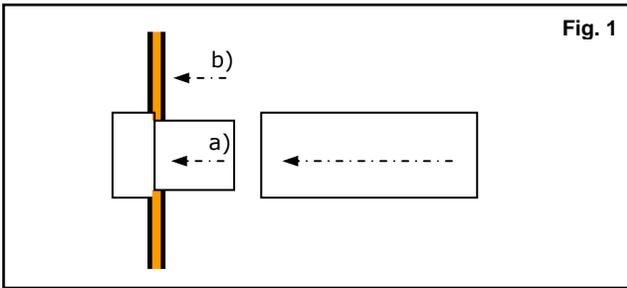


- 1) Tap vehicle wire.
 - a) Remove cap (slot side) from tap body.
 - b) Slide cap around vehicle wire.
 - c) Tighten the tap **TIGHT** with finger pressure.

NOTE: Do not re-use the tap for subsequent re-installation. Figures are not to scale

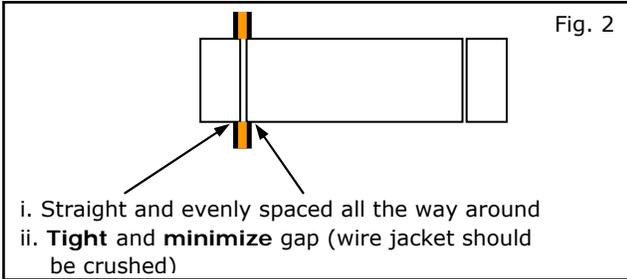


- 2) Inspect the tap to ensure correct installation.

NOTE: Avoid putting pressure on the vehicle wire and tap for the remainder of the installation.

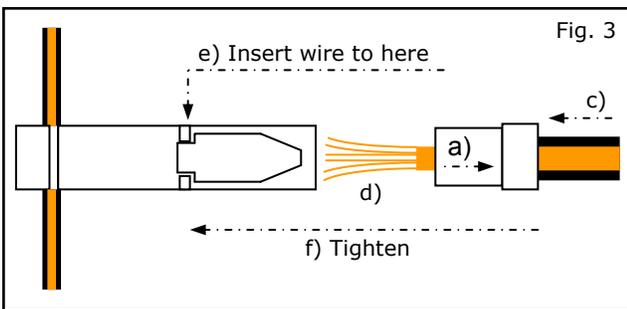


- 3) Inspect the tap to ensure correct installation.

- a) Remove tap (non-pierce) side from tap.
- b) Remove the protective stub from the wire.
- c) Insert wire through the non-pierce side opening.
- d) Spread the individual strands into fan shape.
- e) Insert wire into the tap body and ensure that it is all the way in.
- f) Tighten the tap **TIGHT** with finger pressure.

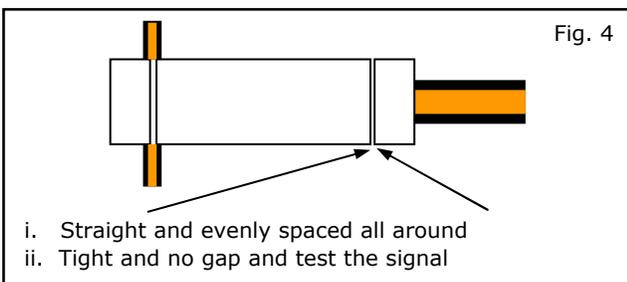

- 4) Confirm the tapped accessory wire.

- a) Inspect the tap to ensure correct installation.
- b) Test the signal to ensure that it is working properly.

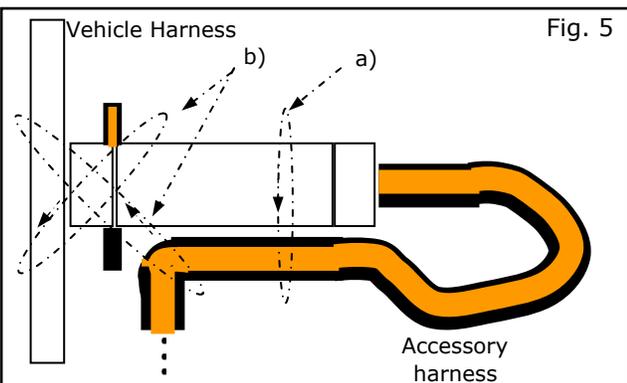


- 5) Secure the tap.


- a) Secure the tapped wire on the non-pierce side to the body of the tap with electrical tape (≥ 2 revolutions).
- b) Secure the body to harness where vehicle wire is being tapped with electrical tape (≥ 2 revolutions).

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

13. INSTALLATION

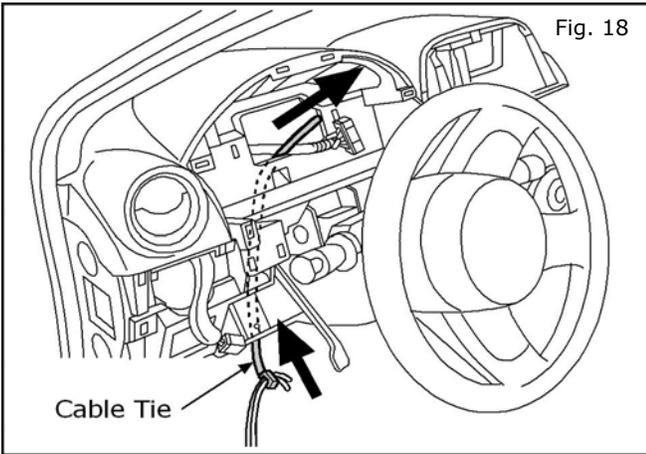

18. Push the ends of (2) wires, green and blue, through the end of a 15 inch cable tie and use the tie to direct the wires up through the dash to the BCM opening.

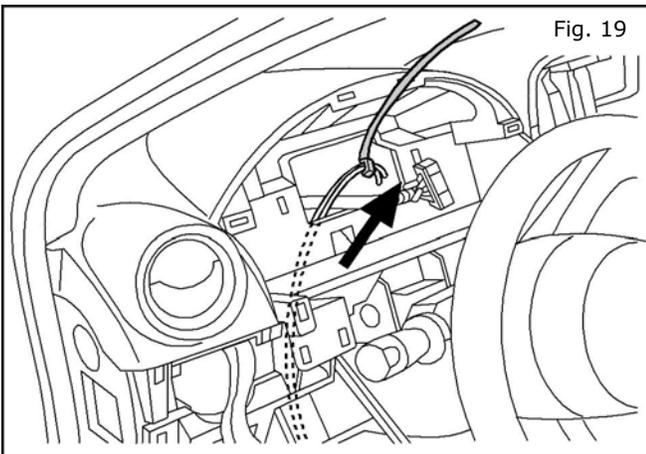

19. Be sure to route the wires all the way up to the BCM opening.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit



13. INSTALLATION

NOTE: Visually identify the Grey and Red wires in the harness before proceeding.



SV & SL Grade
Meter Pinouts


This Meter will utilize this harness

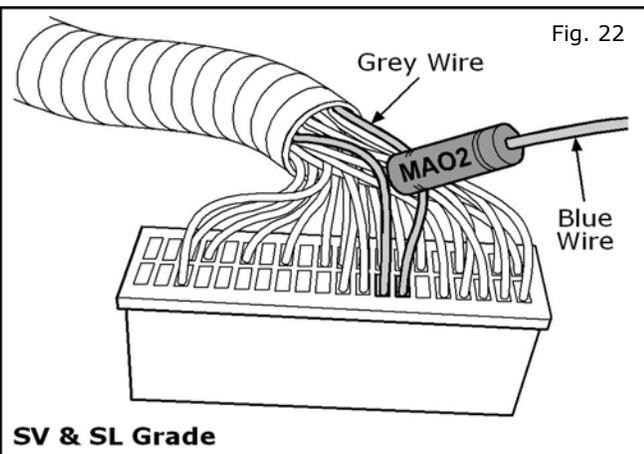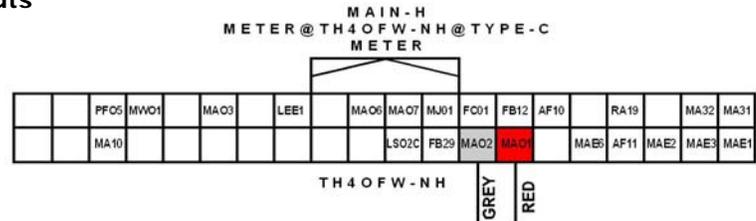

NOTE: Disconnect negative battery terminal before proceeding.

22 Carefully strip back some of the insulation from the white instrument cluster connector. Identify the **Grey** and **Red** wires.


Use a Posi-tap and instructions to connect the **Blue** wire from the accessory harness to the **Grey** wire at the connector.

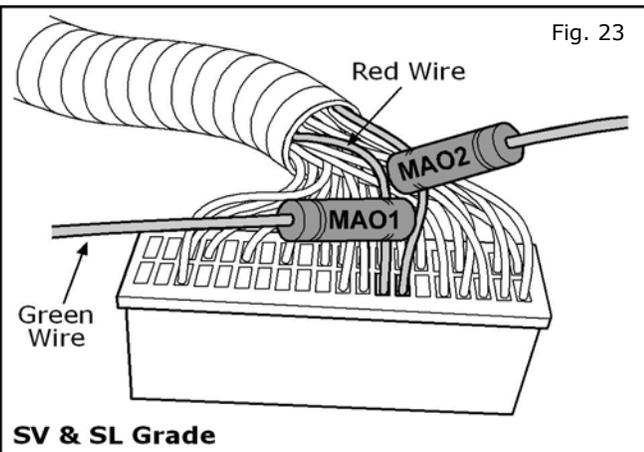


23. Use a Posi-tap and instructions to connect the **Green** wire from the accessory harness to the **Red** wire at the connector.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit


13. INSTALLATION

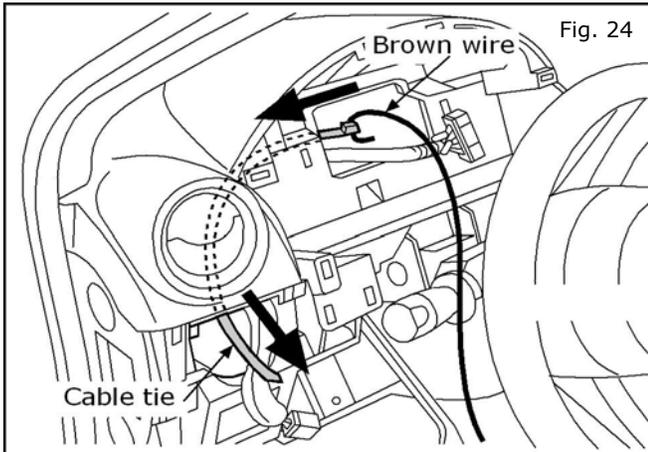

24. Use a long cable tie to feed the **Brown** accessory wire through the BCM opening and out the dash opening under the vent as shown.

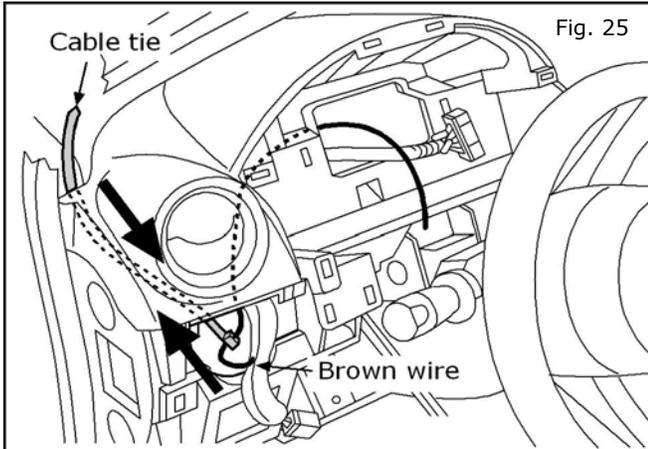

25. Feed a 15 inch cable tie down through the dash from the A Pillar. Push the ends of the **Brown** wire through the end and use the tie to direct the wires up through the dash to the A Pillar.

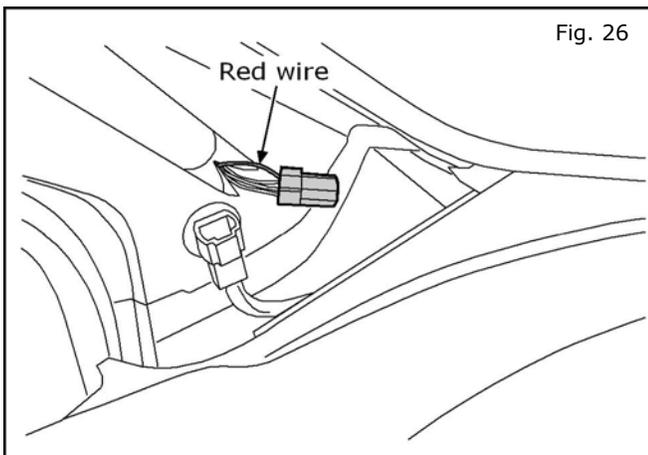


26. Disconnect the electrical connector at the bottom of the A-pillar.

Carefully strip back some of the insulation from the upper half of the connector and identify the **Red** wire.

NOTE: Trim excess wire down to appropriate length before attaching Posi-taps.


INSTALLATION INSTRUCTIONS - Accent Lighting Kit

13. INSTALLATION

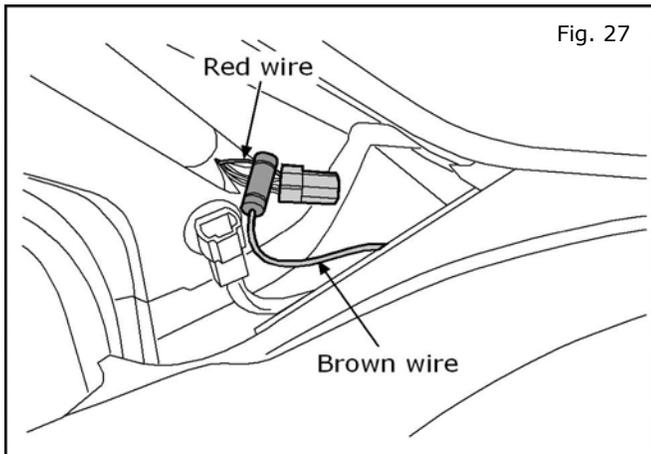


27. Using a Posi-Tap, connect the **Brown** wire from the accessory harness to the **Red** wire at the connector.

28. Reconnect the two A-pillar connector halves.

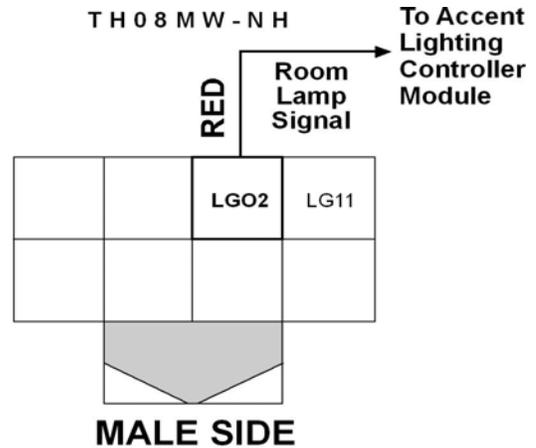

MAIN_H@TH08MW_NH@RM_LAMP_H
MAIN-H

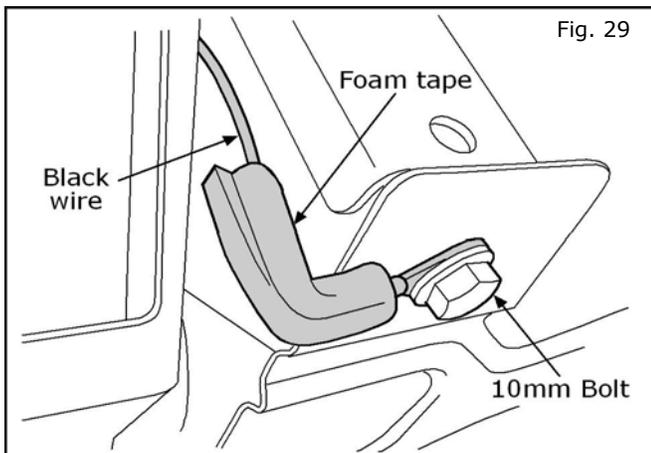

29. Remove one (1) 10mm bolt on the left side of the knee bolster bracket under the steering column. Place the bolt through the eyelet on the Black accessory wire for ground. Reinstall the bolt.

NOTE: Wrap wire with foam tape as shown to protect from sharp metal edges

Work the tilt wheel adjustment up and down to be sure there is no binding at the harness.


INSTALLATION INSTRUCTIONS - Accent Lighting Kit

13. INSTALLATION

BEFORE REASSEMBLING VEHICLE'S TRIM PANELS

30. Plug all components together temporarily for functionality test.

NOTE: Refer to Mechanization diagrams on last page if necessary.

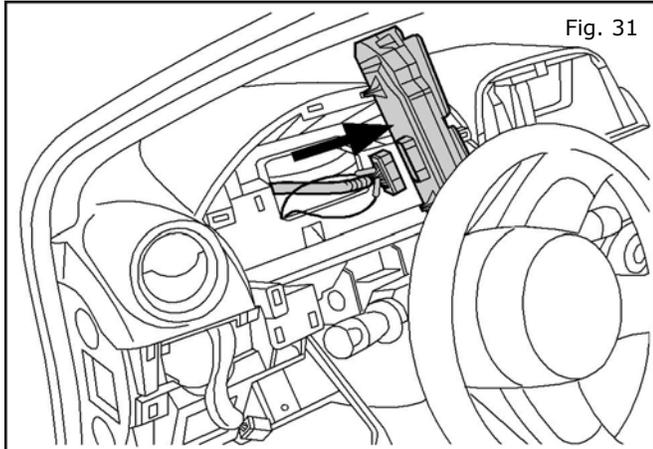


31. **Reconnect** the white electrical connector at the back of the instrument cluster.
32. Turn the vehicle ignition switch to the "ON" position, push the lighting control knob and confirm the Accent Lighting illuminates.
33. Turn the lighting control knob and confirm that the color changes through 20 variations.
34. Press and hold the control knob for 3 seconds and confirm that the Accent Lighting enters the "Demo Mode" and cycles through colors. Press knob again to exit demo mode.

35. Leaving the accessory ON, turn the Interior Room Lamp to "DOOR" and ignition switch OFF. Open the door and confirm the Accent Lighting illuminates.


36. Leaving the accessory ON, and the ignition switch OFF, close and lock the door using CDL or Key Fob (if equipped). Confirm that the Accent Lighting turns off.

37. **Disconnect all components and proceed with installation.**

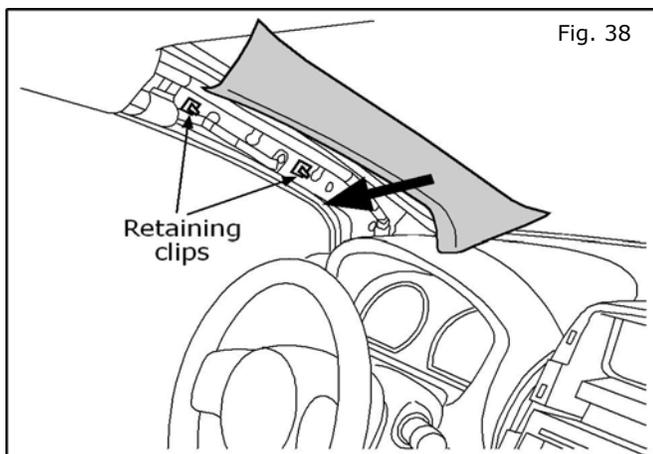

38. **Reinstall** the A-pillar trim panel.

NOTE: There are two (2) retaining clips that hold the trim panel to the A Pillar along with a number of press clips.

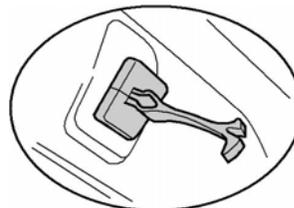


DO NOT REUSE THE CLIPS THAT WERE REMOVED EARLIER. INSTALL THE NEW CLIPS PROVIDED IN THE KIT.


IF THE CLIPS ARE DAMAGED OR LOST, CONTACT DEALER FOR PART NUMBER 76988 JM00A TO REPLACE.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit


13. INSTALLATION

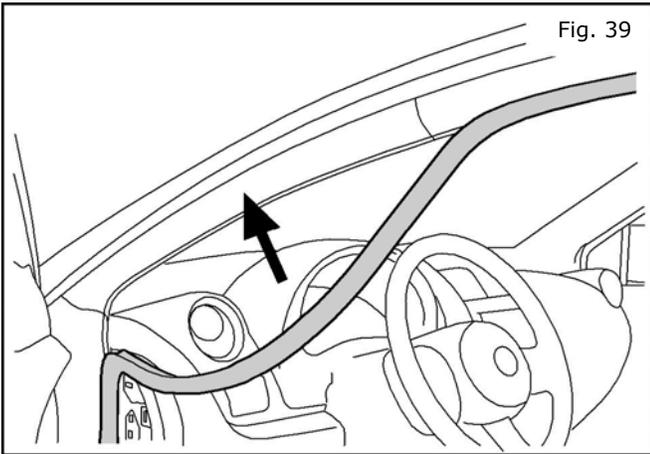

39. **Reinstall** the door seal welt.
Do not pinch the welt by the
Instrument panel.

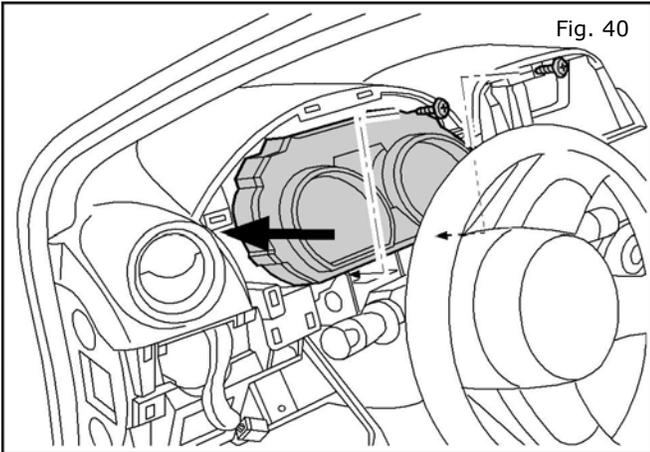


40. **Reinstall** the instrument cluster and the
two (2) Phillips screws at the bottom of
the instrument cluster.

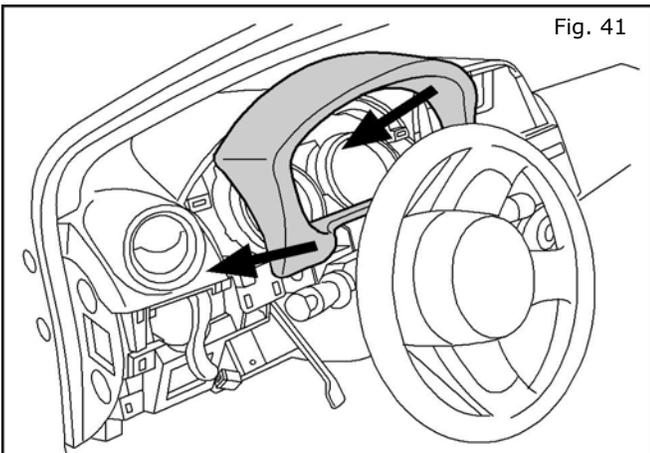

41. **Reinstall** the instrument cluster trim panel.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit


13. INSTALLATION

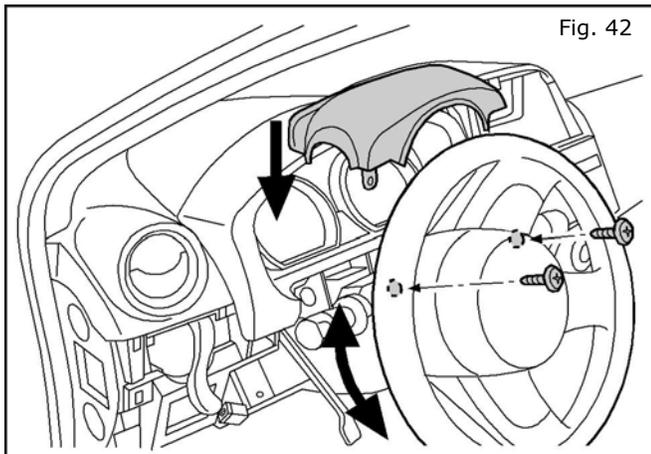


42. **Reinstall** the trim panel on the top half of the steering column

Reinstall two (2) phillips screws on both sides of the steering wheel.

NOTE: Rotate steering wheel 180° in the both directions to access the screw mounting holes.

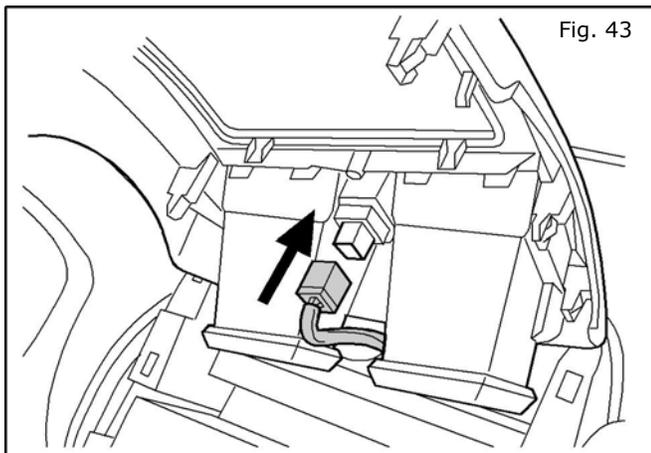


43. **Reconnect** two (2) electrical connectors behind the center stack upper trim panel

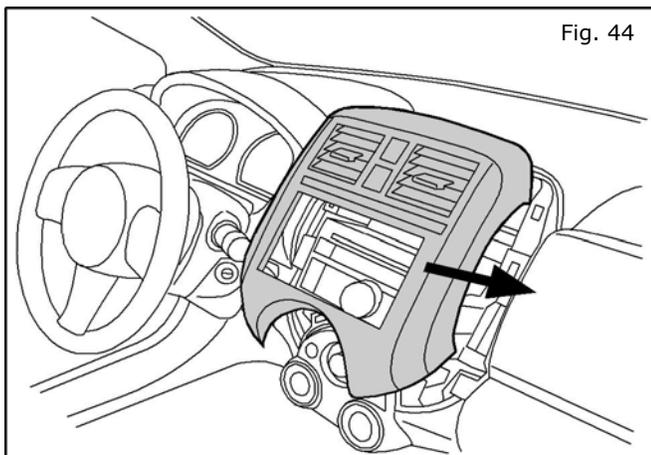


44. **Reinstall** the center stack upper trim panel.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

14. INTERIOR PREPARATION

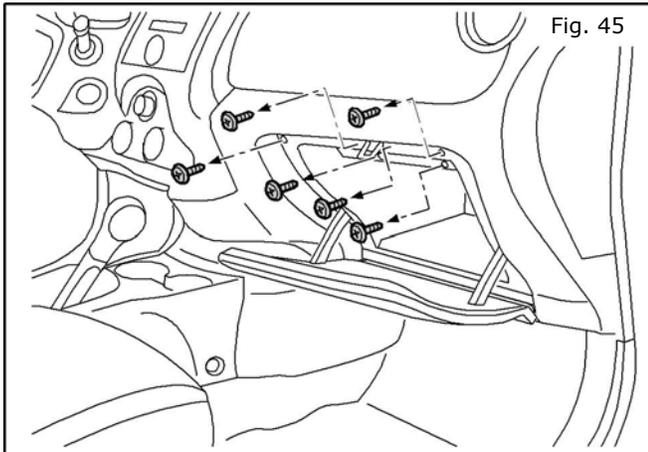


45. Open the glovebox door. Remove four (6) screws from the upper half of the glovebox compartment as shown.

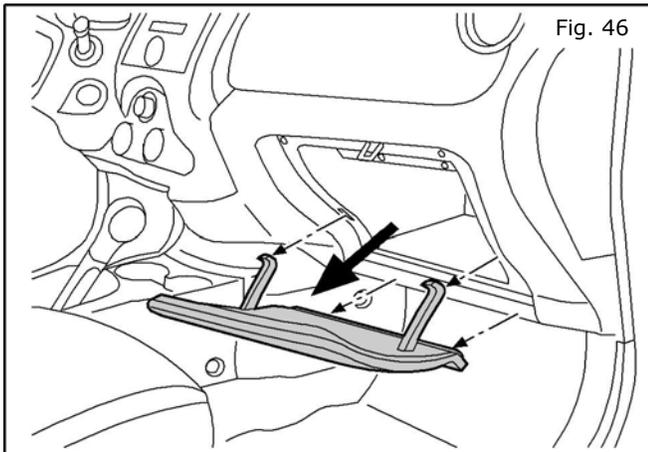

46. Press down **firmly** on the glovebox door side supports to release them and then unsnap the door from the lower hinge.

Set the glovebox door aside.

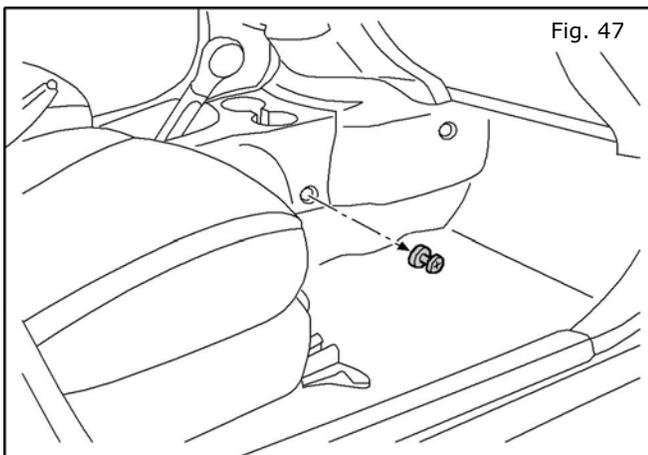


47. Remove two (2) plastic clip fasteners on either side of the center console.

NOTE: Slide both seats fully forward and pull emergency brake handle all the way up at this time.


INSTALLATION INSTRUCTIONS - Accent Lighting Kit

14. INTERIOR PREPARATION

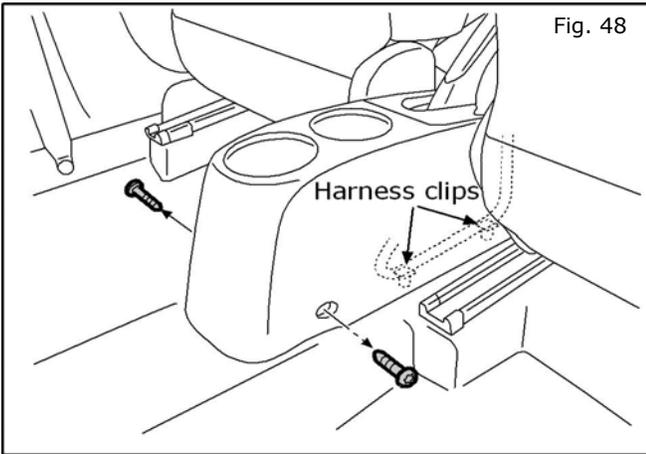


48. Remove two (2) T-20 Torx fasteners at the back of the center console on both sides.

Note the location of the two (2) harness clips under the center console.

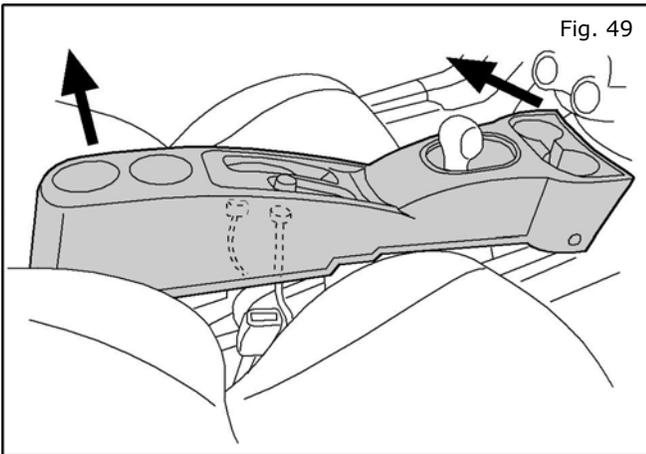

NOTE: Turn ignition to "ON" position. Press on brake and pull shifter back to "D" position. Turn ignition off.


49. Loosen the center console by lifting the front slightly, then lift the back. Release two (2) harness clips at metal studs.

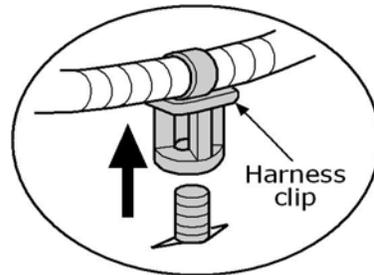


Disconnect one (1) electrical connector and the Accessory Power Outlet connector by reaching under from the back.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

14. INTERIOR PREPARATION

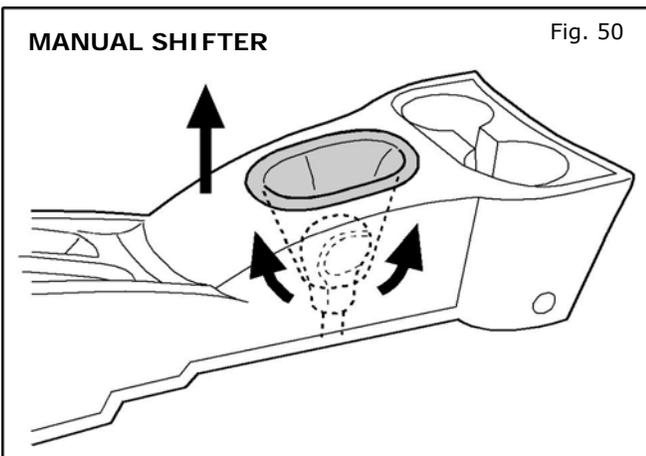


50. If vehicle is equipped with **manual** shifter, remove the shifter boot by carefully stretching the elastic collar up over the shift knob.

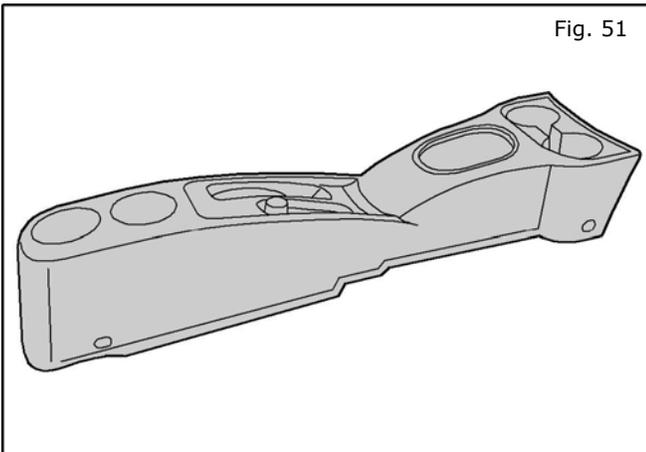

51. Carefully remove the center console and set it aside.

NOTE: Be careful not to damage the headliner during removal.


Slide both seats all the way to the rear at this time.

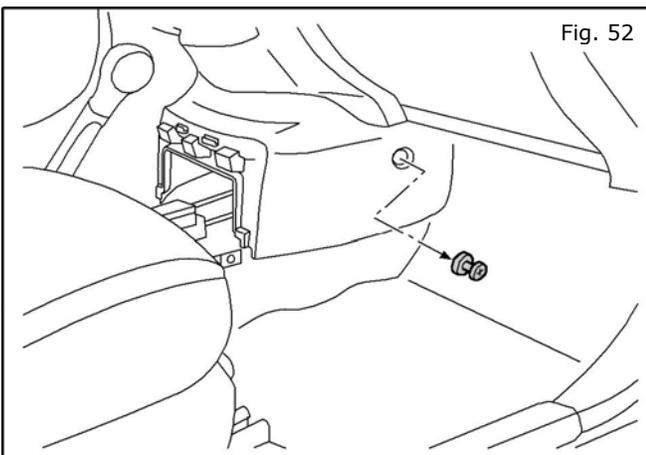

52. Remove two (2) plastic clip fasteners on either side of the center stack bottom finisher panel.


INSTALLATION INSTRUCTIONS - Accent Lighting Kit

14. INTERIOR PREPARATION

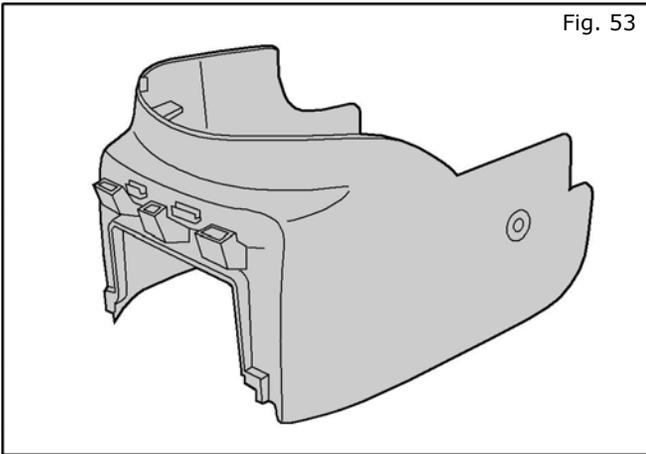


53. Remove the center stack bottom finisher panel and set aside.

15. INSTALLATION

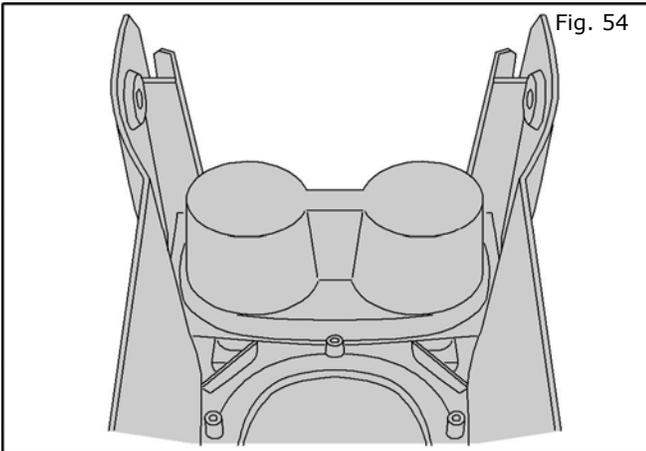

54. Place center console assembly upside down on work surface. Be careful not to scratch the surface.

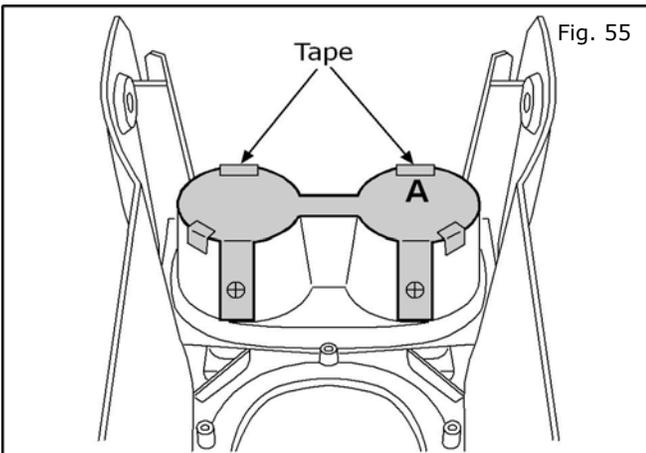


NOTE: Print all templates at actual size.

55. Trim out template "A" and tape into place over the bottom of the forward cup holders as shown. The template should be positioned with the two hanging tabs toward the back.


Mark and drill two (2) 9/32 inch holes at the locations indicated on the template. Remove the template. Clean any flashing from holes.

Install two (2) LED lenses through the holes with the black retaining collar on the inside of the cup holders.

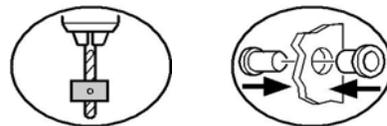


INSTALLATION INSTRUCTIONS - Accent Lighting Kit

15. INSTALLATION

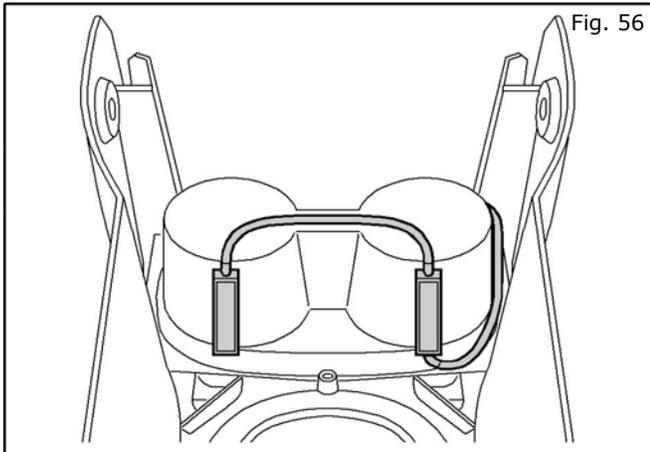


56. Clean the light stick mounting area with alcohol. Remove the pull tabs over the tape on the end cup holder light stick. Place the light stick over the black lens retainer as shown.

Remove the pull tabs over the tape of the second cup holder light stick (the one with wires at each end) and place the light stick over the black lens retainer as shown.

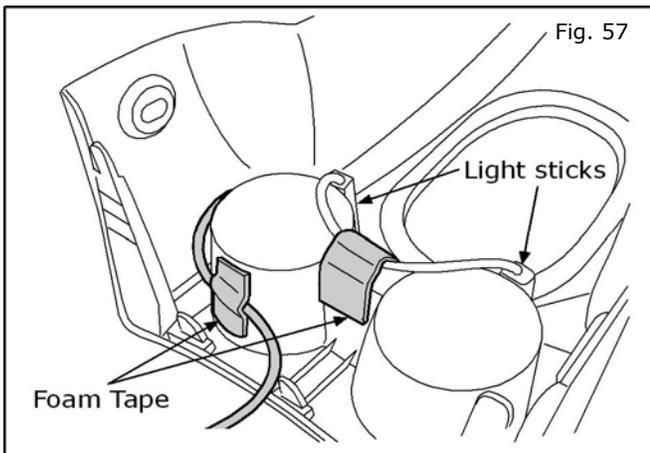


57. Secure excess wiring with foam tape as shown.

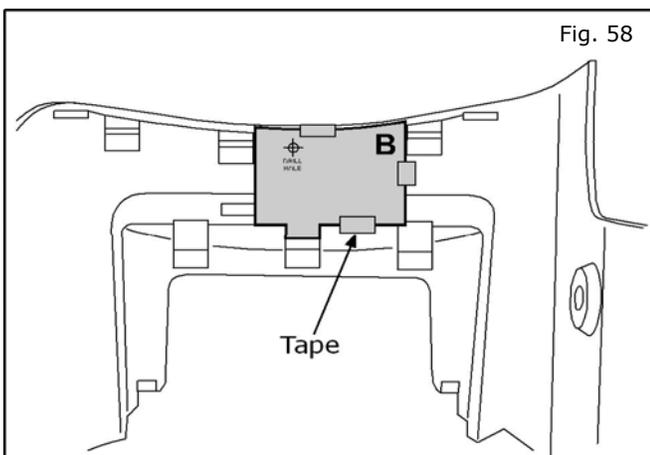

58. Place center stack bottom finisher panel face down on work surface. Be careful not to scratch the surface.


Trim out template "B" and tape into place inside center of panel as shown. The template should be positioned with the letter "B" in the upper right hand corner.

Mark and drill one (1) 5/16 inch hole at the location indicated on the template. Remove the template. Clean any flashing from the hole.

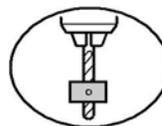

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

15. INSTALLATION


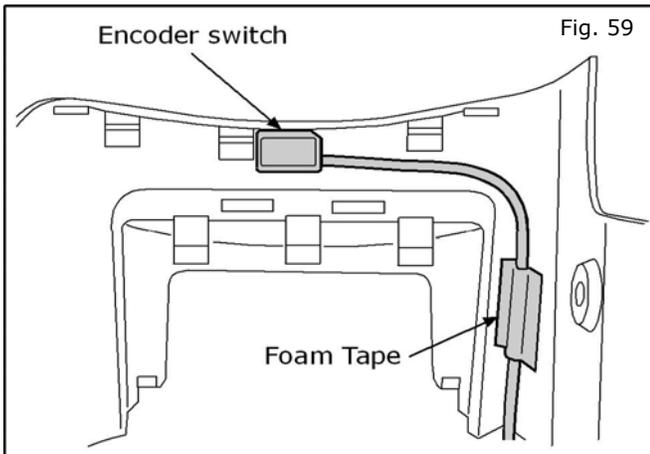


59. **Install** the encoder so that the shaft is outside the front of the finisher panel.


Use 11mm nut to secure the encoder.
Install control knob over shaft of encoder.

Secure excess wiring with foam tape as shown.

NOTE: Be careful NOT to over tighten the encoder nut.

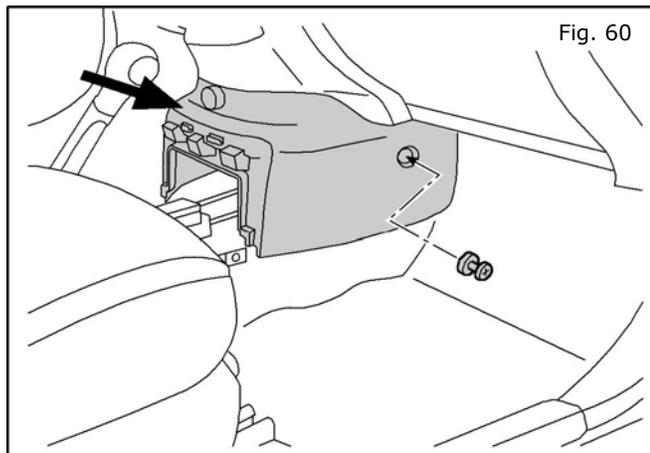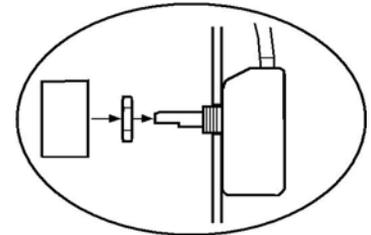

60. **Reinstall** the center stack bottom finisher panel. Once aligned, **install** two (2) plastic clip fasteners on either side.

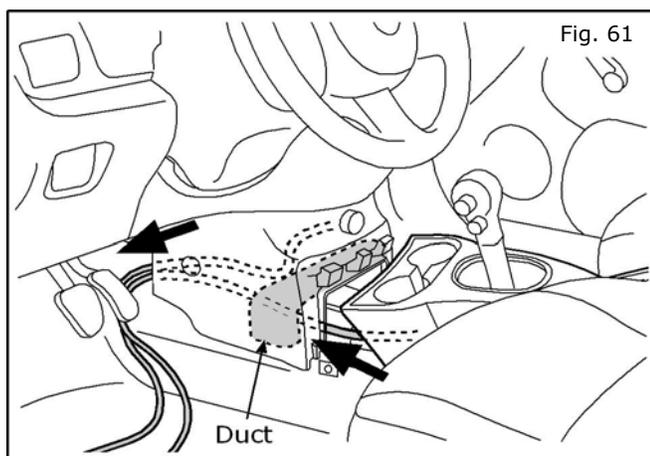


61. Carefully place the modified center console into the car. Position the console over the parking brake and shifter by gently moving the console forward as it is lowered.

Route the wires from the cup holder LEDs and the encoder switch up through the center stack finisher panel and out towards the driver side footwell.

NOTE: Be sure to feed the cup holder LED wires UNDER the duct tube assembly.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

15. INSTALLATION

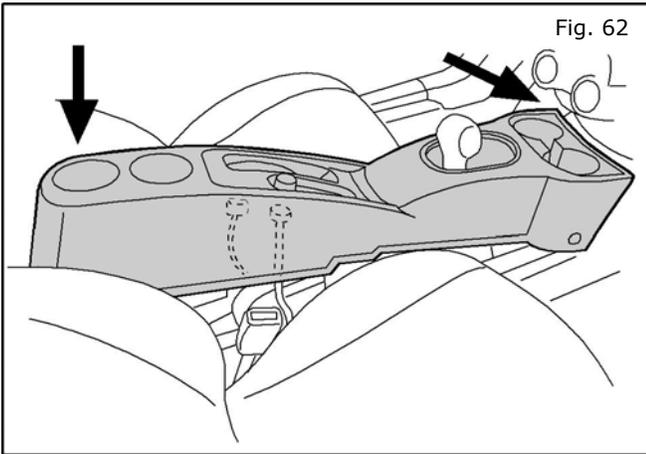


62. Once the console has cleared the parking brake and shifter, pull back and set the console over the two rear retaining screw locations.


Reconnect one (1) electrical connector and the Accessory Power Outlet connector by reaching under from the back.

NOTE: Be careful not to damage the headliner during reinstallation.


Slide both seats all the way forward at this time.

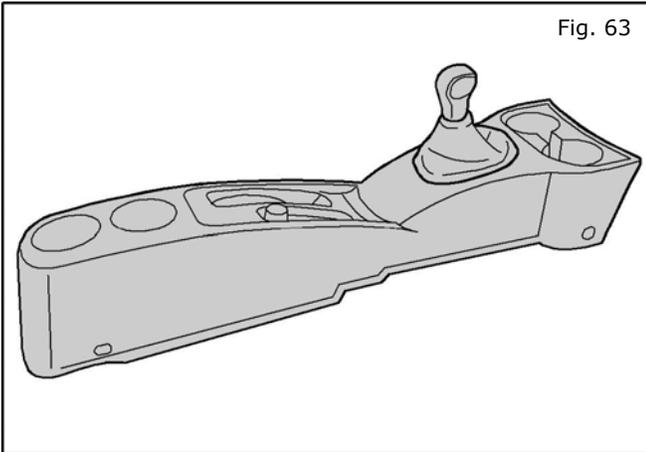

63. If vehicle is equipped with **manual** shifter, **reinstall** the shifter boot by carefully stretching the elastic collar down over the shift knob.

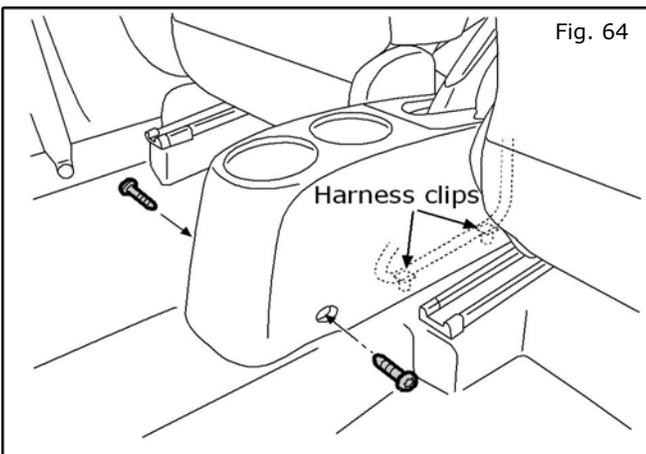


64. Reinstall two (2) harness clips at metal studs. **Reinstall** two (2) T-20 Torx fasteners at the back of the center console on both sides.

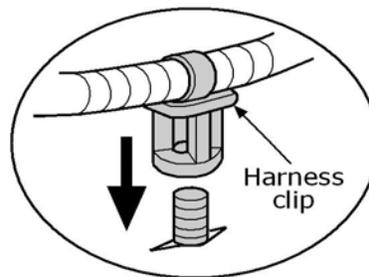


Slide both seats all the way to the rear at this time.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

13. INSTALLATION

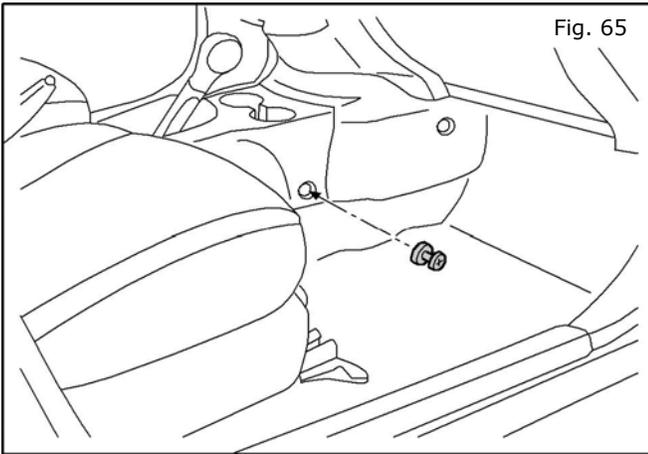


65. **Reinstall** two (2) plastic clip fasteners on either side of the center console.

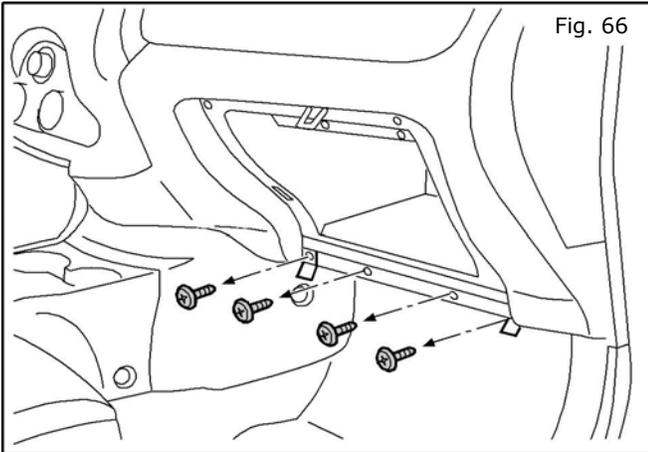

66. Remove four (4) Phillips screws from the bottom of the glovebox compartment.

NOTE: Two of the screws are behind cover panels.

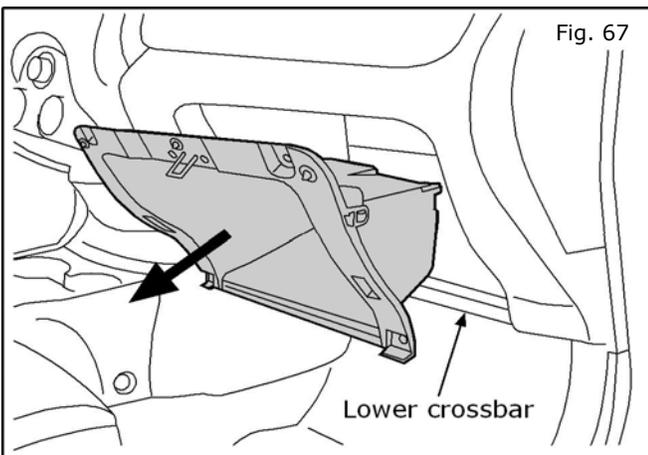


67. Grip the door latch loop and pull down and outward to remove the glovebox compartment.

Set the compartment aside.

NOTE: Apply masking tape as needed to surfaces to avoid scratches.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit


15. INSTALLATION

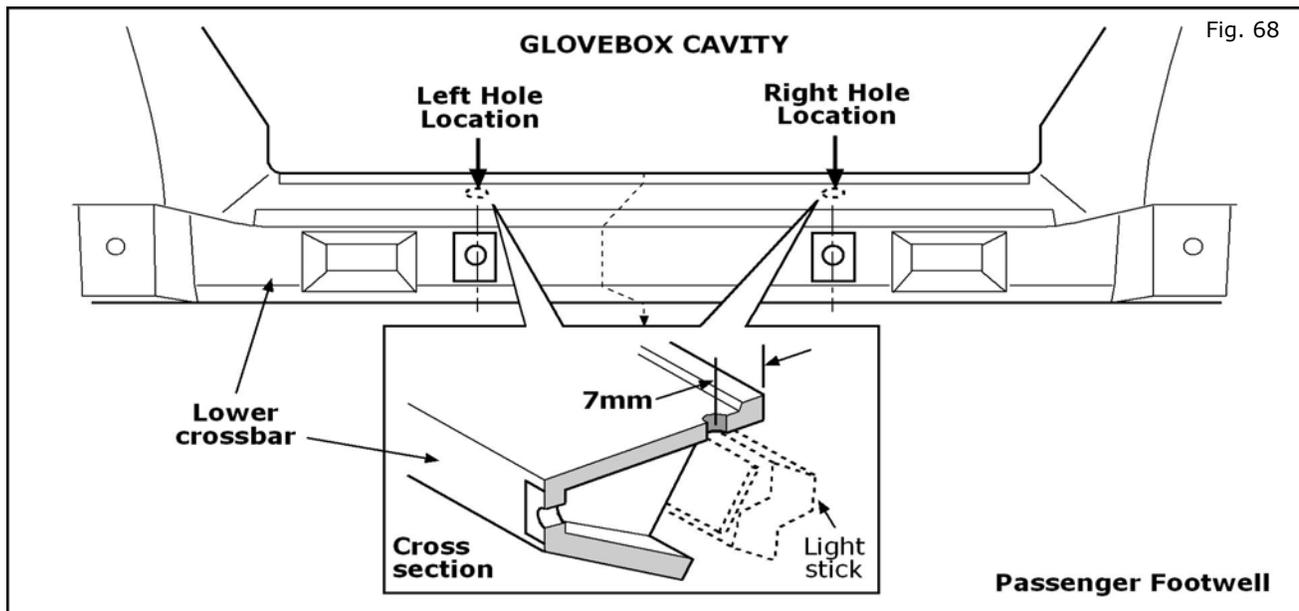

68. Prepare to mark drill locations at the glovebox opening. Measure and mark in from the back edge, 7mm. Mark the left and right mounting holes centered in alignment with the two existing holes on the lower cross bar as shown.

69. Carefully drill a 3/16 inch hole at both locations.

NOTE: Do NOT drill past the bottom rib. Use a drill stop set to 4mm.

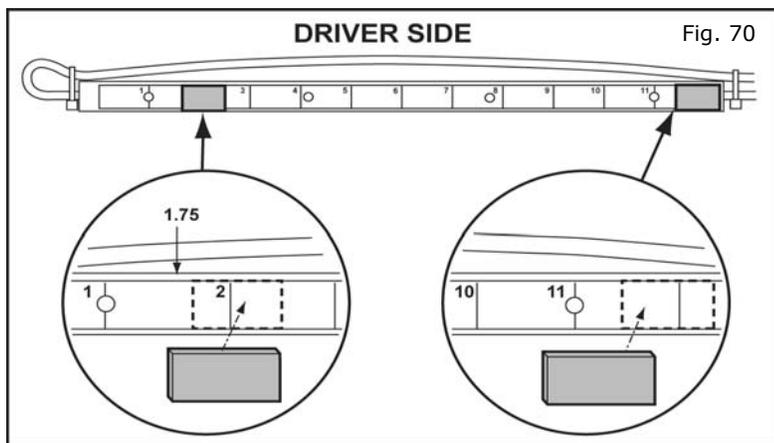


70. Prepare the driver side light stick. Clean the LED areas with alcohol wipe. Fix the short 12.5mm X 19mm X .7mm piece of double sided foam tape at location 1.75 to 2.5 AND at location 11.5 to END.


NOTE: Be sure not to block the LEDs

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

15. INSTALLATION

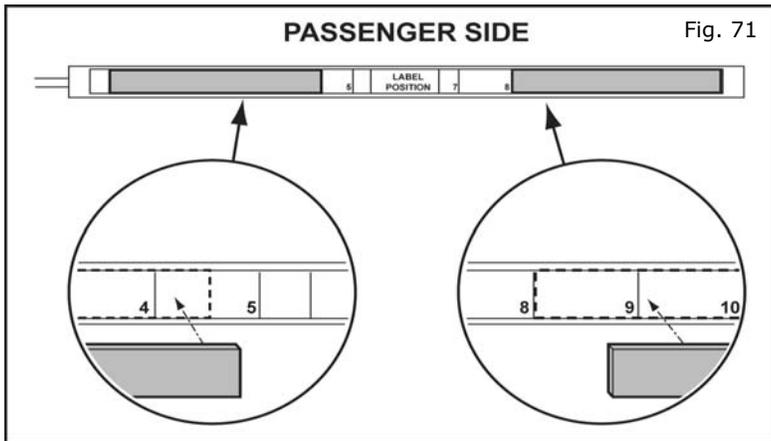


71. Prepare the passenger side light stick. Clean the Non- LED areas with alcohol wipe. Fix the long **12.5mm X 100mm X .7mm** piece of double sided foam tape at location **0.5 to 4.5** AND at location **8 to the END**.

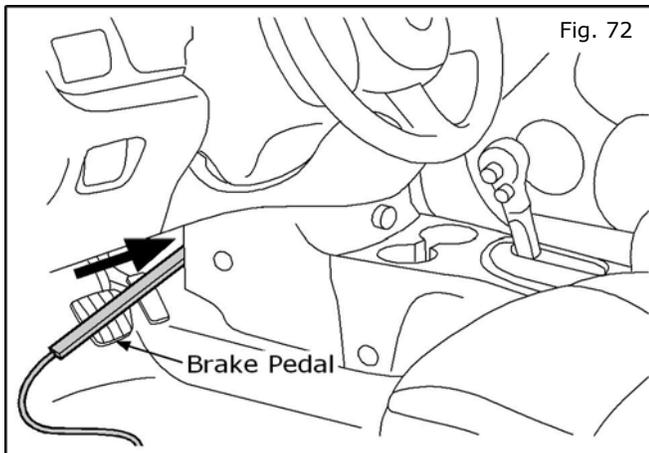

72. Push the passenger light stick through the center stack to the passenger footwell. This is the light stick with the loop.

NOTE: The driver's side light stick should be left in the driver's footwell for later installation.

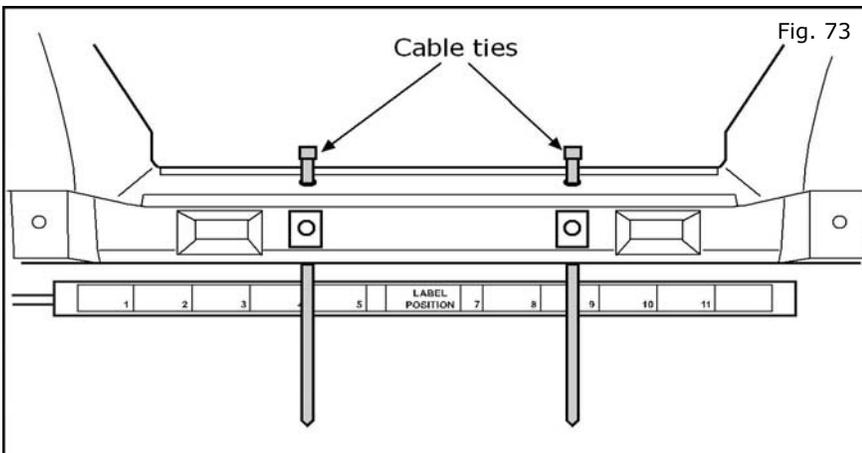


73. On the passenger side, Insert a cable tie in each mounting hole as shown.

Hold the passenger side light stick up to the cross bar to get a visual alignment before final mounting. The holes should align with the **4 and 8.5** marks.


INSTALLATION INSTRUCTIONS - Accent Lighting Kit

15. INSTALLATION

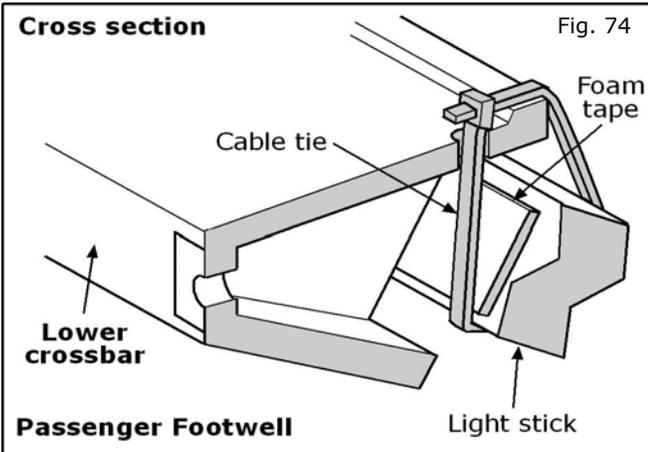


74. Pull the tape covers from the two (2) pieces of foam tape attached to the passenger light stick. Place the light stick behind the lower glovebox cross bar with the LEDs pointing down. Secure each the light bar with with three (3) 4 inch cable ties at the drilled holes locations.

NOTE: Be sure not to block the LEDs

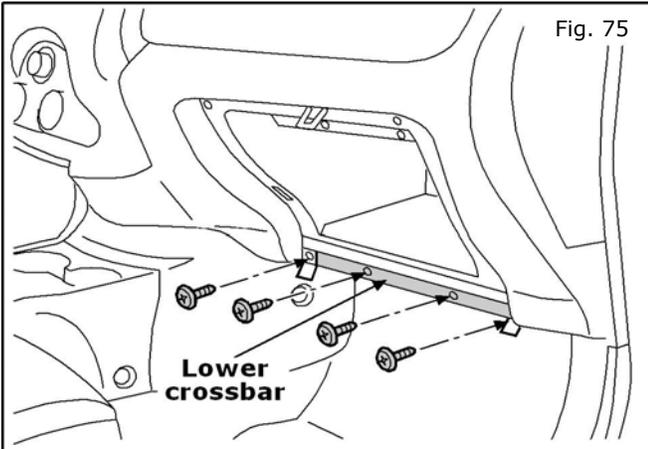

75. **Reinstall** the glovebox compartment. Install four (4) phillips screws in the bottom of the glovebox compartment.

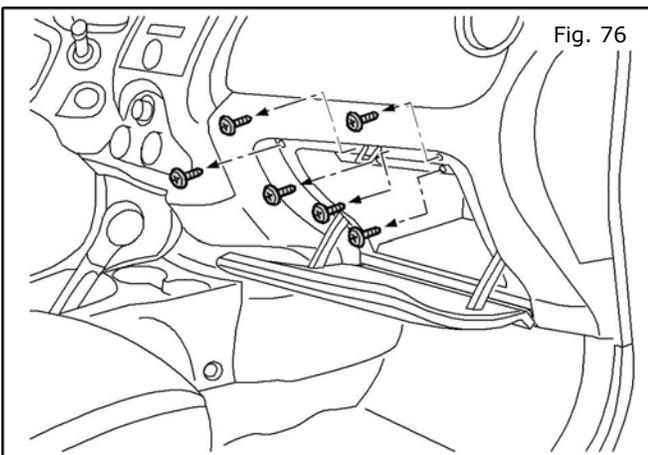


76. Install six (6) screws in the upper half of the glovebox compartment.

Reinstall the glovebox door by carefully snapping the door onto the lower hinge and the side support arms back into both slots.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

15. INSTALLATION

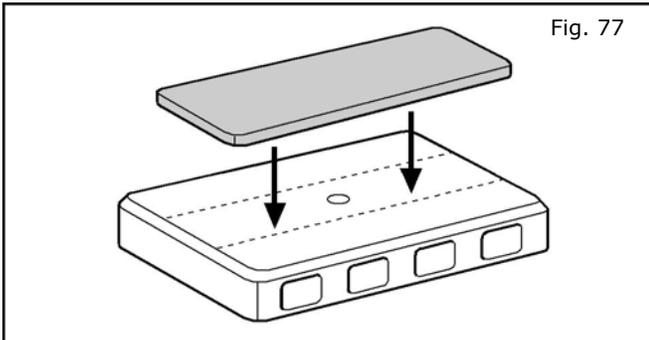


NOTE: Attach one (1) 58mm x 82mm foam tape to the underside of the accessory control module, covering the screw in the center.


77. Place one (1) piece of foam tape over the top of the accessory controller.

It should be on the opposite side of the sticky foam tape covering the screw.


NOTE: Do NOT pull cover off tape on controller at this time.

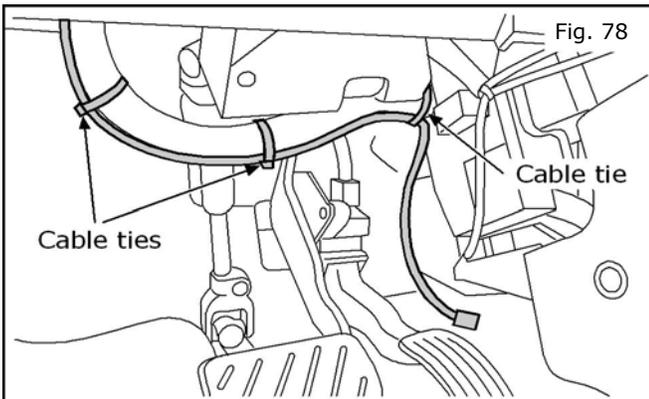

78. Secure the harness under the dash with cable ties as shown.

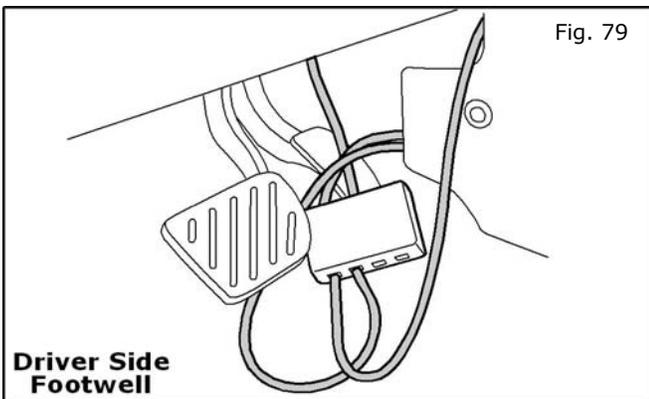

79. Route accessory harnesses under the center stack. Plug the accessory harnesses into the control module and allow to sit under center stack.

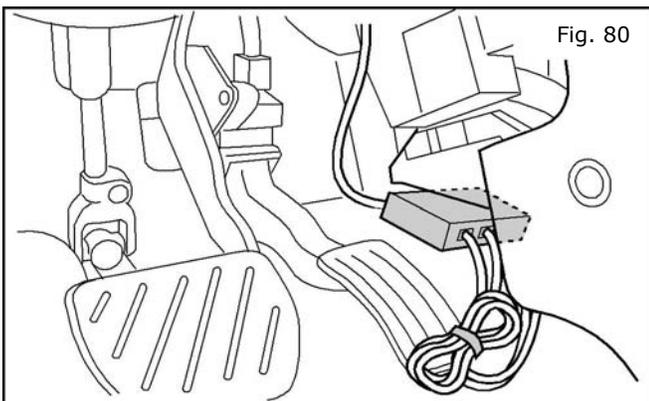


80. Peel the cover off the tape on the controller and place the controller on the carpet under the center stack.

Bundle and dress the excess cables from the **cup holder and encoder switch only** and secure with cable ties as shown.

NOTE: Hold carpeting down when placing the adhesive tape to secure placement of the controller.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

15. INSTALLATION

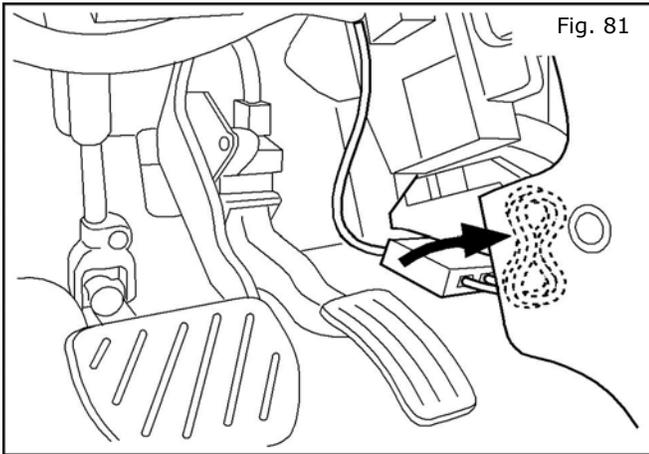

81. Stow excess wire bundle behind center stack finishing panel.



Prepare To Install Driver's Side Light Stick.

82. Using a metric scale or ruler, measure and mark 50mm from the bottom edge.

Measure and mark 20mm from right edge of the DDL opening.

On the right side, measure and mark 25mm from the bottom edge first, then 10mm from the right edge.


Use a 3/16 inch drill and drill both locations.

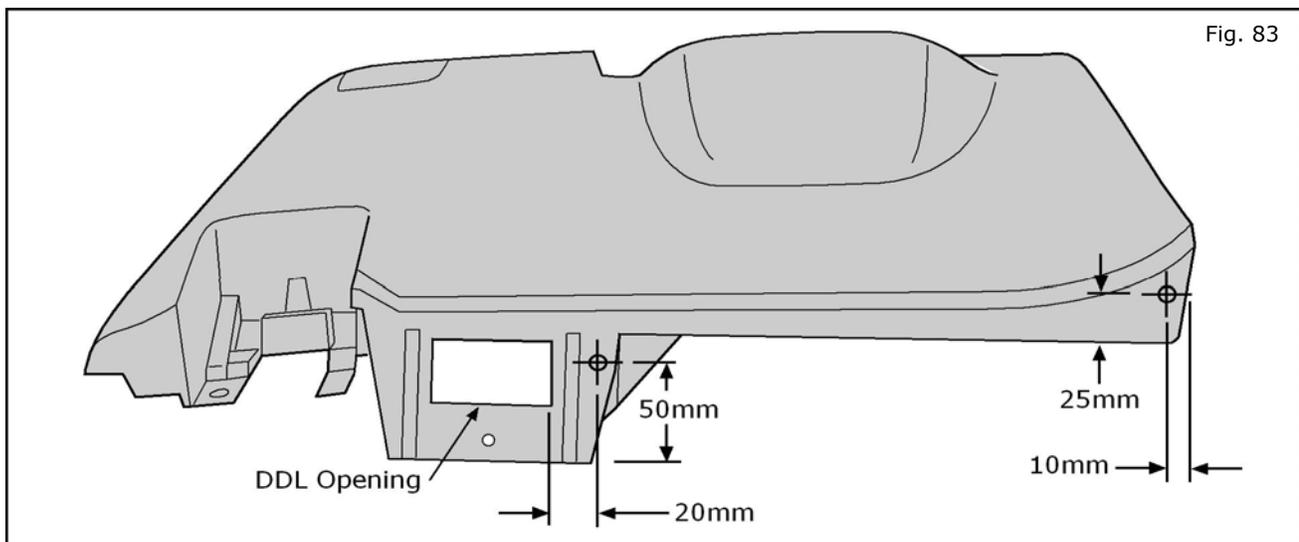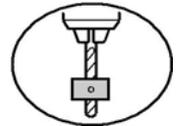


INSTALLATION INSTRUCTIONS - Accent Lighting Kit

15. INSTALLATION

83. Attach two (2) U Nuts to the small 80mm and 50mm "L" brackets at the long end.

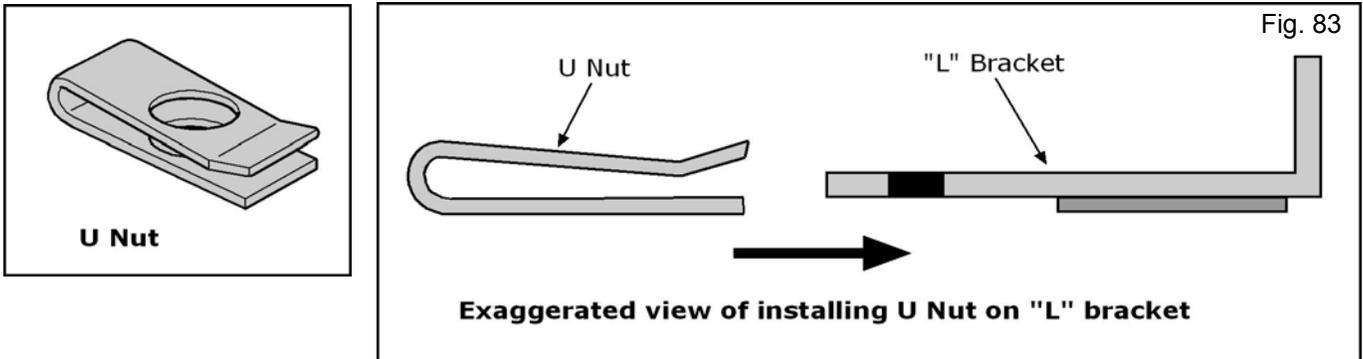

84. Attach the two (2) "L" brackets with U nuts to the inside of the steering finisher with two (2) phillips screws. The 80mm bracket will be next to the DDL opening.

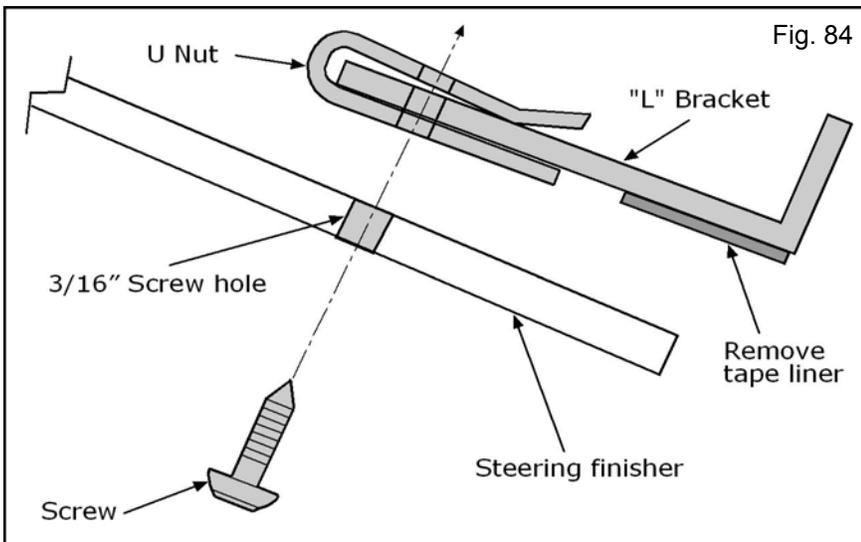


INSTALLATION INSTRUCTIONS - Accent Lighting Kit

15. INSTALLATION

85. Work on the steering finisher in the driver's floor area. Clean mounting area with alcohol wipe. Peel tabs away from the adhesive tape. Place the light stick so that the foam tape lines up with the metal brackets as shown.

Note: Be sure not to block DDL opening.

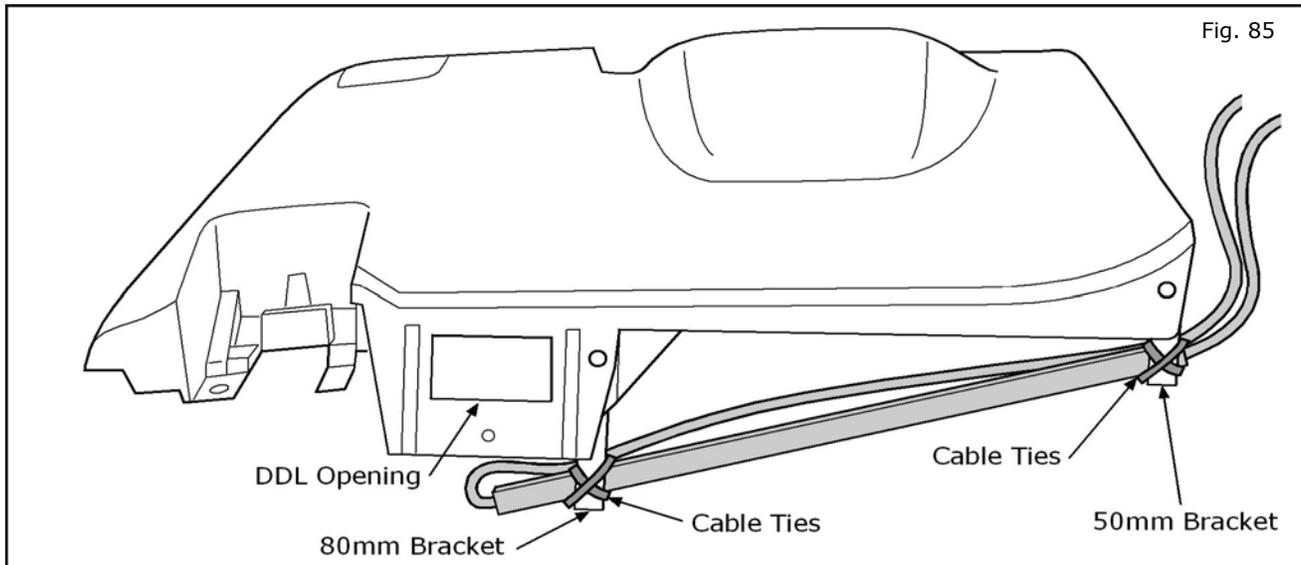

86. Pull the tape covers from the two (2) pieces of foam tape attached to the driver side light stick. Place the light stick over the "L" brackets with the LEDs pointing down such that the tape rests on the 'L' bracket. Secure each location with two (2) 4 inch cable ties.

Note: Trim the cable ties and turn them inwards so the clipped end is on the inside of the panel.

87. **Reinstall** the diagnostic port to the steering finisher panel with one (1) phillips screw.

88. **Reconnect** two (2) electrical connectors at back of panel.

89. **Reinstall** the steering finisher panel.

90. **Reinstall** the hood release lever assembly using two (2) 10mm bolts.

91. **Reinstall** the driver side instrument side mask.

Note: Trim all cable ties. Check installation.

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

16. CHECK OUT

- (1) Open the rear storage area of the center console.
- (2) Turn the vehicle ignition switch to the "ACC" position, push the lighting control knob and confirm the Accent Lighting illuminates.
- (3) Turn the lighting control knob and confirm that the color changes through 20 variations.
- (4) Press and hold the control knob for 3 seconds and confirm that the Accent Lighting enters the "Demo Mode" and cycles through colors. Press knob again to exit demo mode.
- (5) Leaving the accessory ON, turn the Interior Room Lamp to "DOOR" and ignition switch OFF. Open the door and confirm the Accent Lighting illuminates.
- (6) Leaving the accessory ON, and the ignition switch OFF, close and lock the door using CDL or Key Fob (if equipped). Confirm that the Accent Lighting turns off.
- (7) Reset the radio presets to the recorded settings.
- (8) Place the Accent Lighting Quick Reference card in the glovebox.
- (9) Check the trim for a proper, flush fit after re-installing the interior components.
- (10) Clean the interior of the vehicle.
- (11) Inspect the vehicle interior and exterior for damage.
- (12) Verify the functionality of all electrical vehicle components where harnesses were accessed.
- (13) Check and clear trouble codes (DTC).


INSTALLATION INSTRUCTIONS - Accent Lighting Kit

17. BILL OF MATERIALS

Nissan Universal Accent Lighting Kit - 999F3 AW008



	Parts Contained in Bag Labeled 'Installation Kit'.	Qty	Part Number
1	Cable tie 15" - Black	4	
2	Cable tie 11" - Black	2	
3	Cable tie 4" - Black	13	
4	Grey foam rectangle 80mm x 30mm x 5mm - Adhesive one side	6	
5	Small bracket 28mm long	2	
6	Medium bracket 54mm long	1	
7	Large bracket 80mm long	1	
8	Posi-tap connector - Red / Grey	3	999M1 VT000
9	Control knob (Black + white printing)	1	999F3 AW002
10	Alcohol preparation wipe	4	
11	U' Nut	2	
12	Module adhesive fixing 53mm x 74mm	1	
13	Lens Retaining Ring 9mm OD - Black	2	
14	Clear plastic lens - 7.5mm diameter	2	
15	Pozi-drive self-tap screw 1/2" long - Black	2	
16	Encoder lock nut	1	
17	Quick reference guide	1	999F3 AW007
18	Double-sided adhesive fixing 12mm x 20mm (All on one backing paper)	4	
19	Double-sided adhesive fixing 12mm x 102mm (All on one backing paper)	4	
20	Parts list / Replacement template	1	999V2 AW000
21	Vehicle interface harness	1	999F3 AW005
22	A Pillar Clips	2	76988 JM00A
	Parts Not In 'Installation Kit' bag.		
23	Encoder and harness assembly	1	F3 AW006
24	Cup-holder lights and harness assembly	1	F3 AW003
25	Foot-well lights and harness assembly	1	F3 AW001
26	Control module (within polythene zip bag)	1	F3 AW004

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

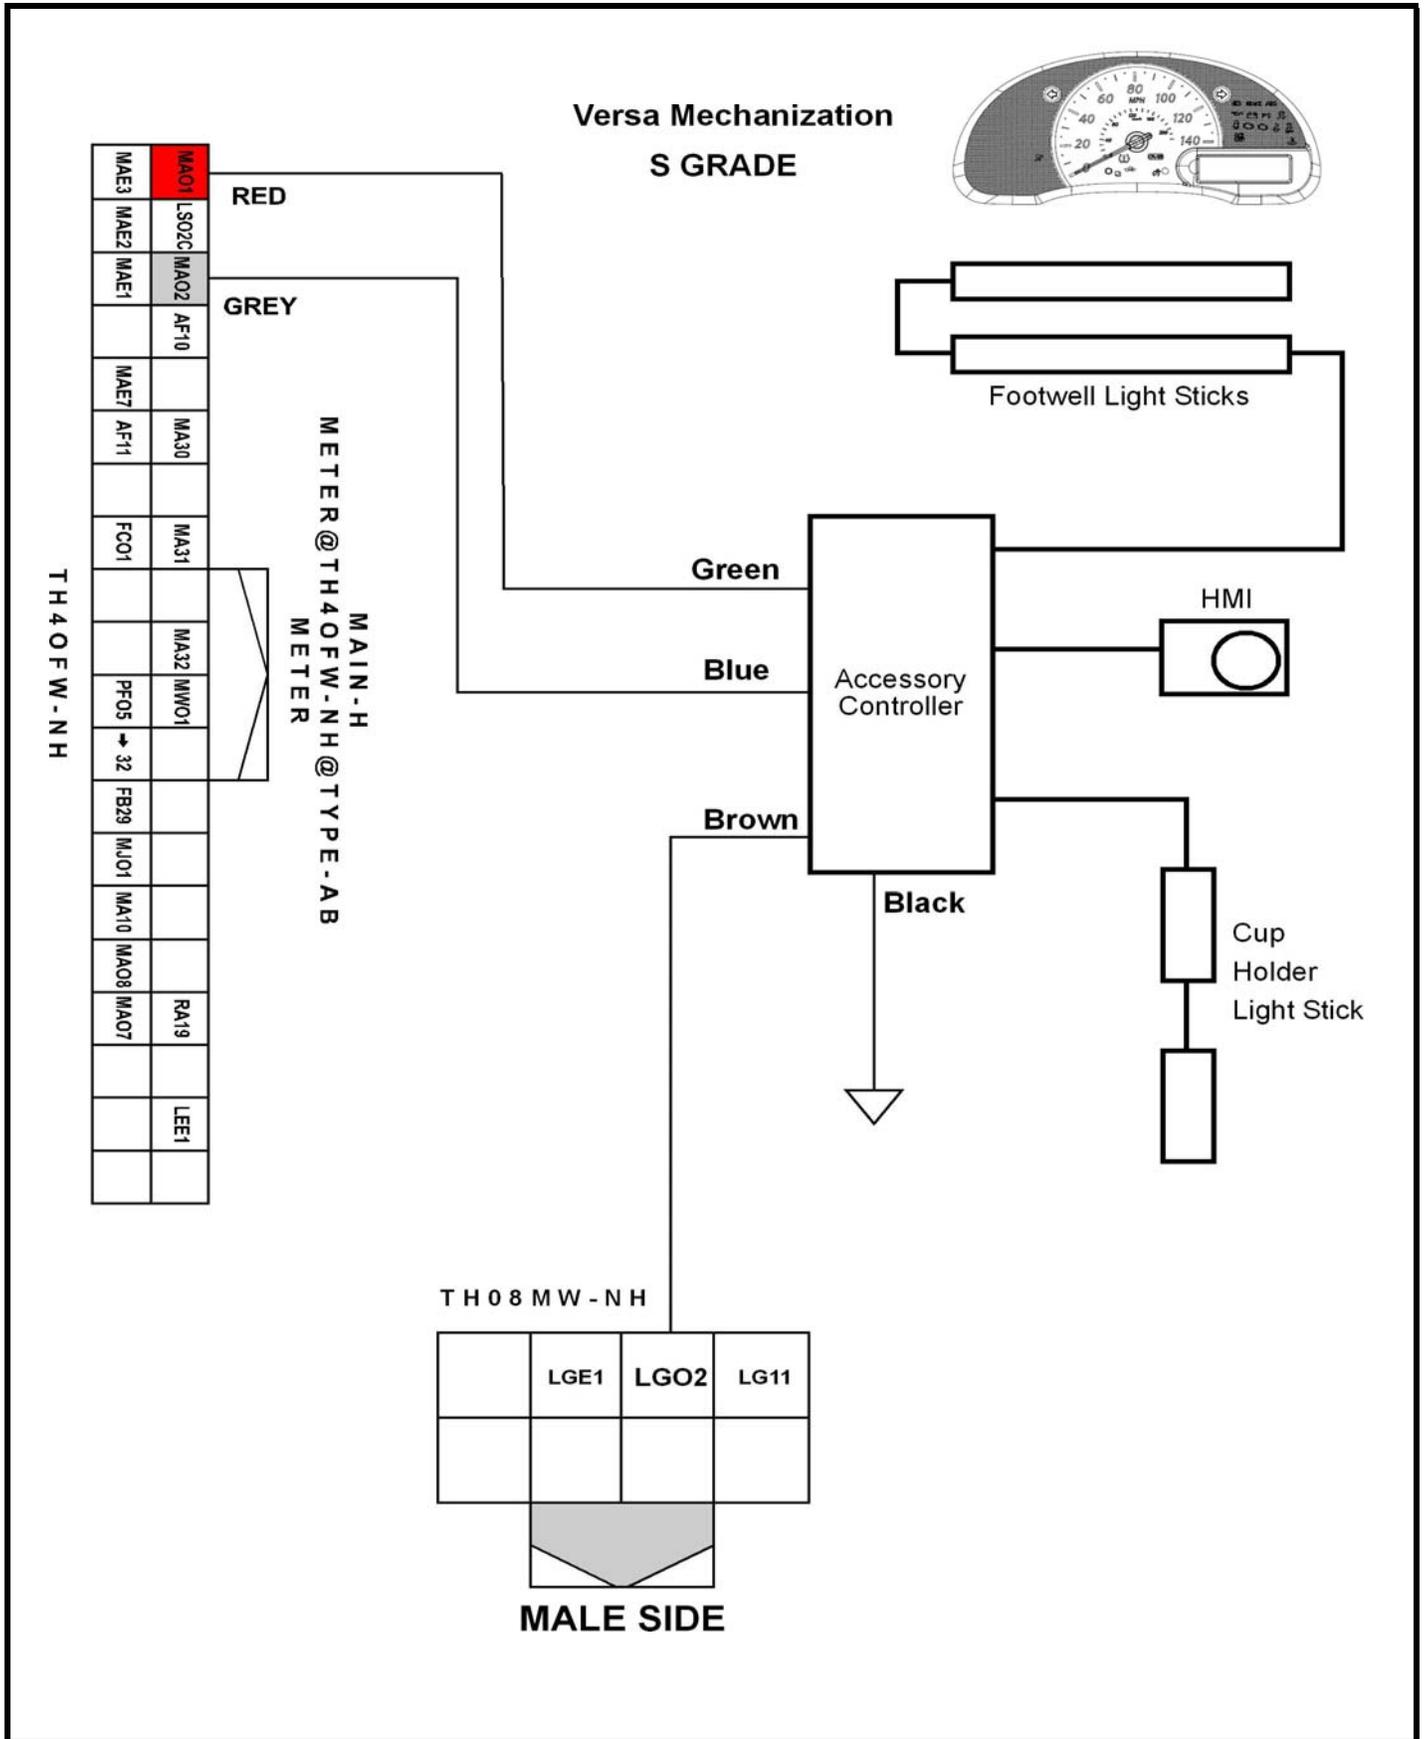



INSTALLATION INSTRUCTIONS - Accent Lighting Kit

**Versa Mechanization
SV & SL GRADE**

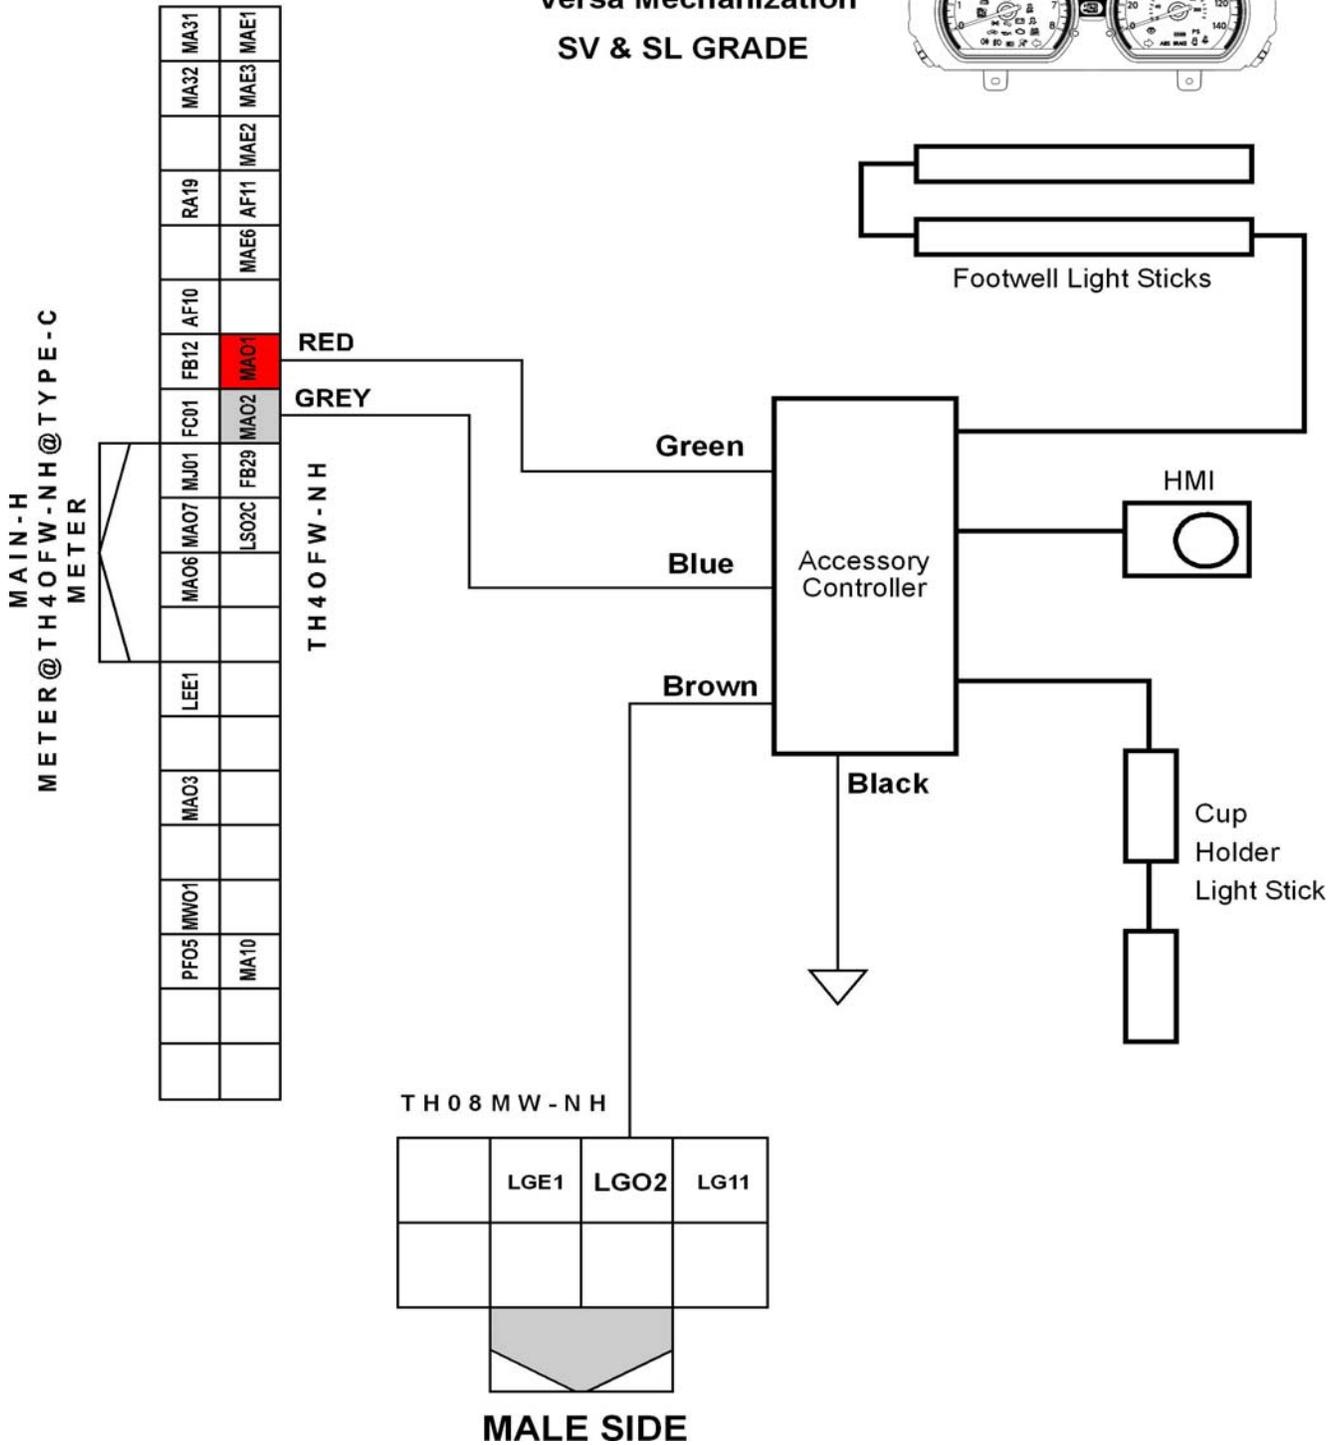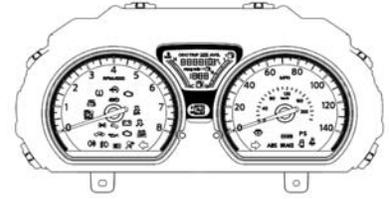

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

Templates must be printed to scale

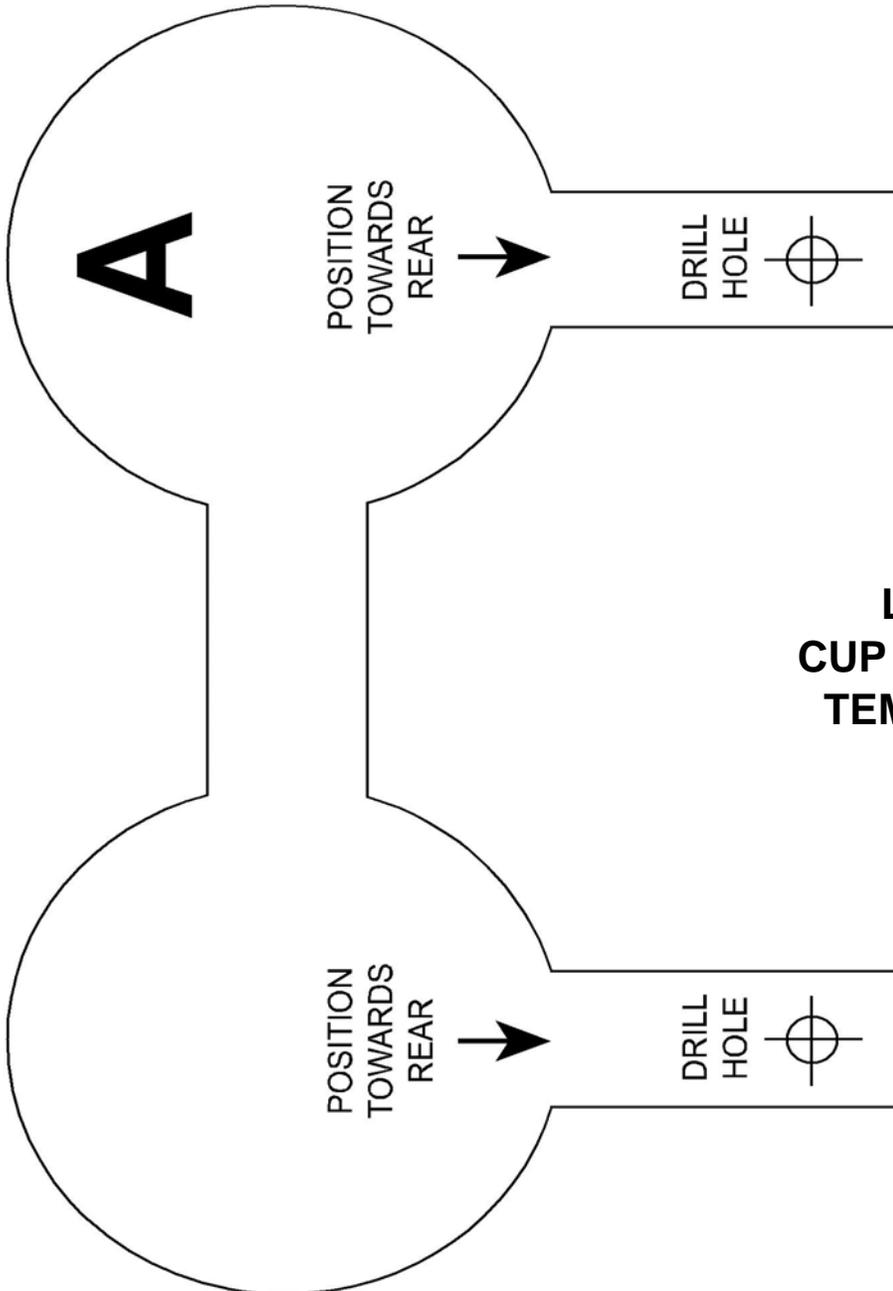

**LO2B
CUP HOLDER
TEMPLATE**

INSTALLATION INSTRUCTIONS - Accent Lighting Kit

Templates must be
printed to scale



1 inch



10mm

LO2B ENCODER TEMPLATE

