




GENUINE PARTS

INSTALLATION INSTRUCTIONS

DESCRIPTION:	Sub-Floor Organizer Kit
APPLICATION:	Altima (2013)
PART NUMBER:	999C2 UZ000

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Sub-Floor Organizer	999C2 UZ001
B	1	First Aid Kit	999MI ST000
C	1	Emergency Road Kit	999MI AT000
D	1	Installation Instruction Replacement Template	999V2 AW000

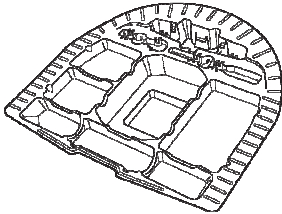

A



B



C



D

TOOLS REQUIRED:

- No tools required

PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- Ensure that Sub-Floor Organizer is located properly within the spare tire well.
- Make sure that items are secured within the Organizer to prevent movement/vibration during transit.
- Keep this installation instruction sheet with the Vehicle Owner's Manual for future reference.

INSTALLATION PROCEDURE:


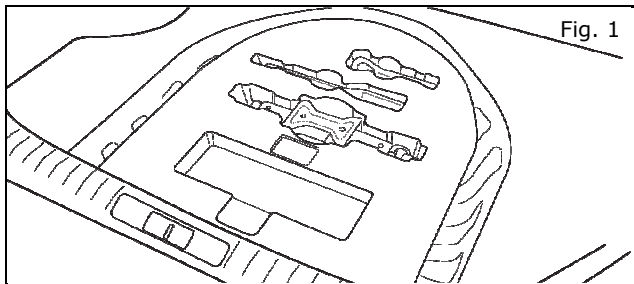



Fig. 1

- 1) Raise trunk flap to reveal spare tire well.


INSTALLATION PROCEDURE:

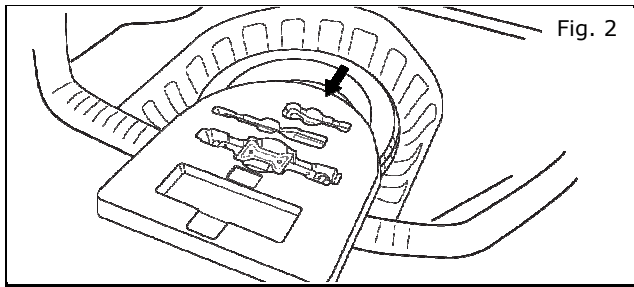


2) Remove foam spacer block.

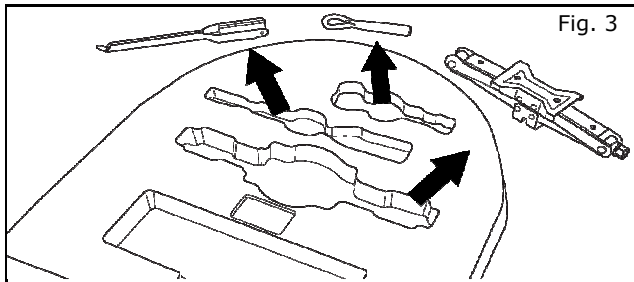


3) Remove jack, lug wrench and tow hook (optional) from foam spacer block.

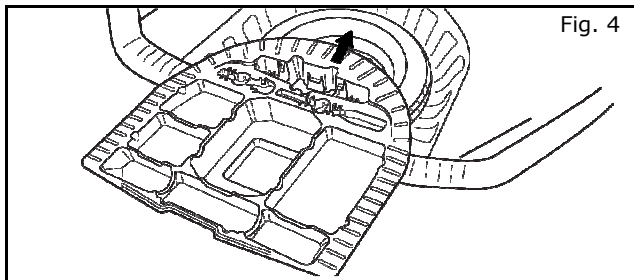

4) Slide Sub-Floor Organizer into spare tire well and make sure it is properly located.

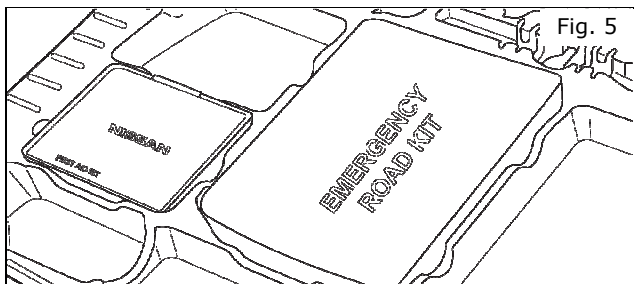

5) Install emergency road kit and first aid kit into each custom compartment.

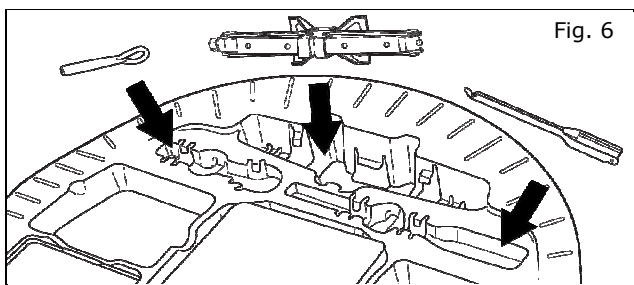

6) Install jack, lug wrench and tow hook (optional) in each custom compartment.