




# GENUINE PARTS

## INSTALLATION INSTRUCTIONS


<b>DESCRIPTION:</b>	Splash Guard-Rear
<b>APPLICATION:</b>	Pathfinder
<b>PART NUMBER:</b>	999J2 X5004

**KIT CONTENTS:**

Item	Qty.	Part Description	Service Part Number
A	1	Splash Guard - Rear Left	78811 9PFOA
B	1	Splash Guard - Rear Right	78810 9PFOA
C	4	Phillips Head Screw M5 x 15mm	14-51 00841
D	4	Spring Clip	12-41 01011
E	1	Installation Instruction Replacement Template	999V2 AW000

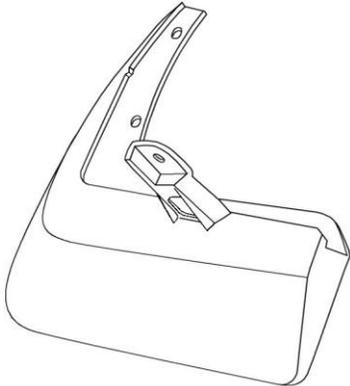

A

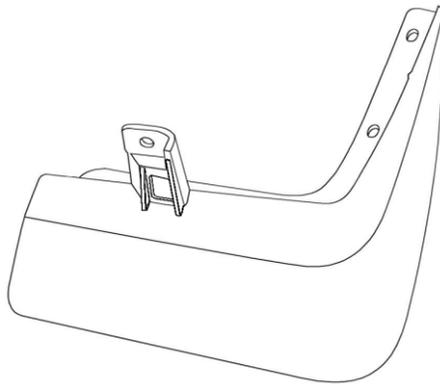

B



C



D



E


**TOOLS REQUIRED:**

- Drill
- 6mm (1/4") drill bit
- 10mm socket & ratchet
- #2 phillips screw driver
- Mild soap / water mixture
- awl
- Clean Rag


**PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:**

- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.
- Dealer Installation Recommended.


## INSTALLATION PROCEDURE:

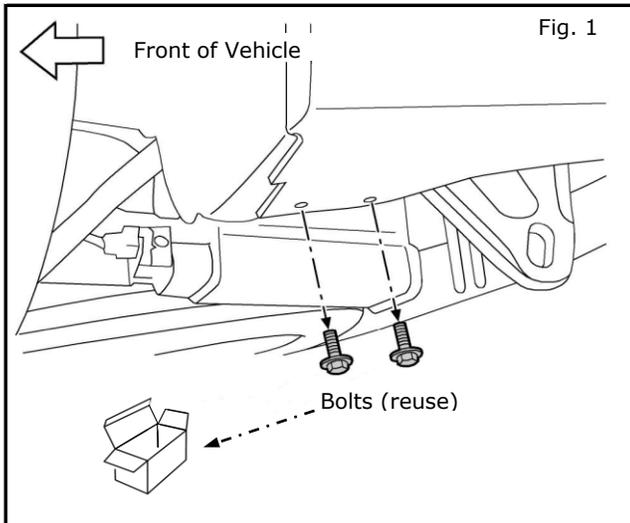

- 1) Remove 2 bolts from bottom of rear bumper (Keep to reuse).

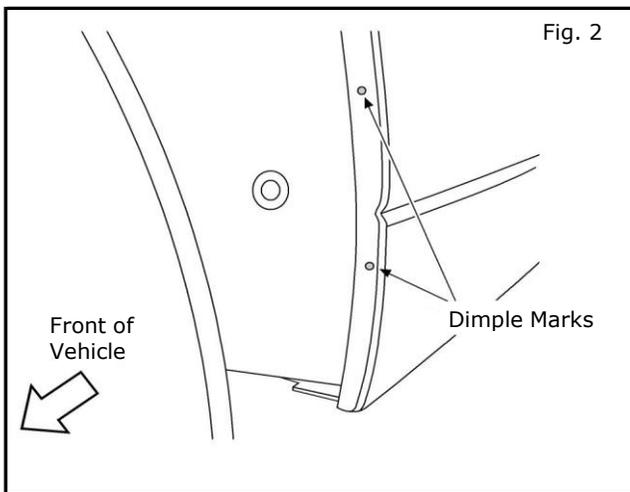


- 2) Mark center of dimple marks with awl.

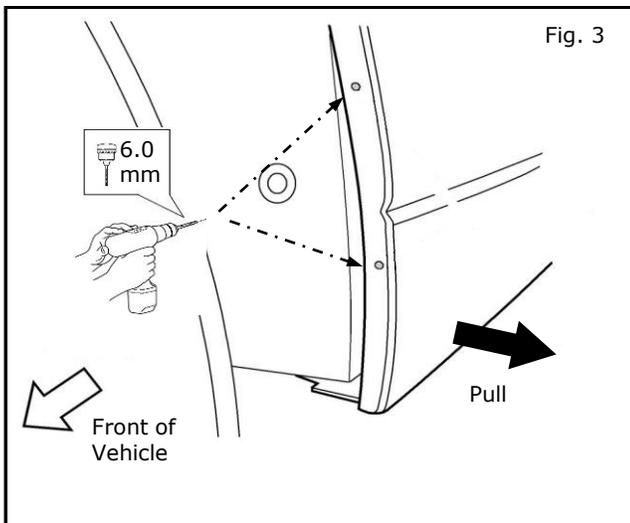


- 3) While pulling rear bumper outward, drill 6mm (1/4") holes at center of dimple mark locations on bumper.


**INSTALLATION PROCEDURE:** (continue)

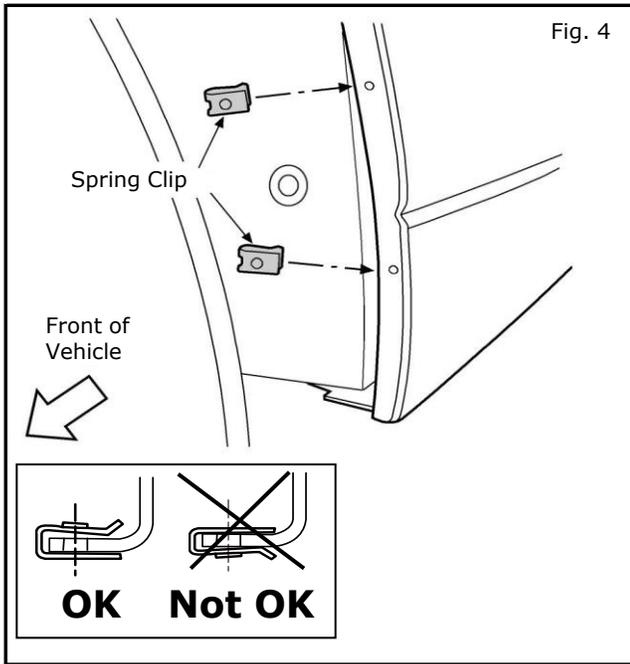

4) Install spring clips.

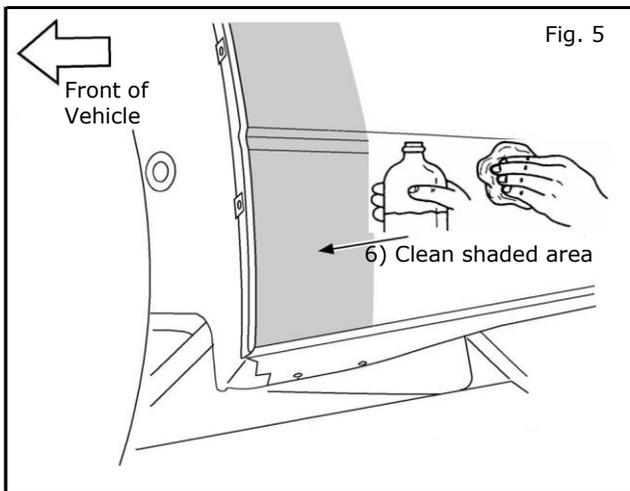


5) Clean installation surface (shaded area) with mild soap/water mixture.

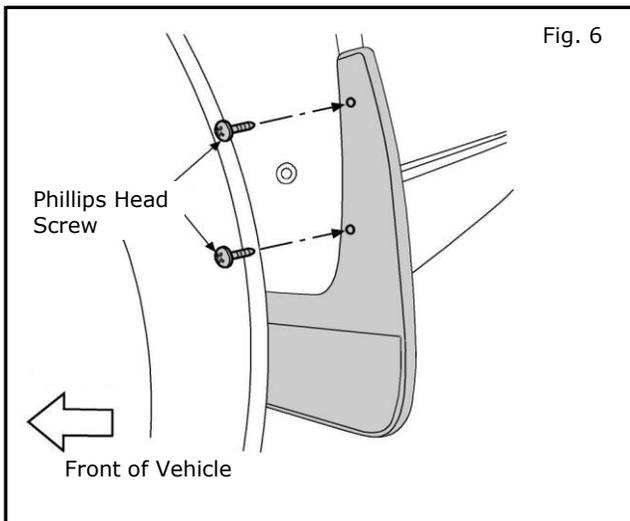


6) Align splash guard to vehicle and loosely install two phillips head screws.

**NOTE:**  
**Do not tighten screws at this time.**

**INSTALLATION PROCEDURE:** (continue)

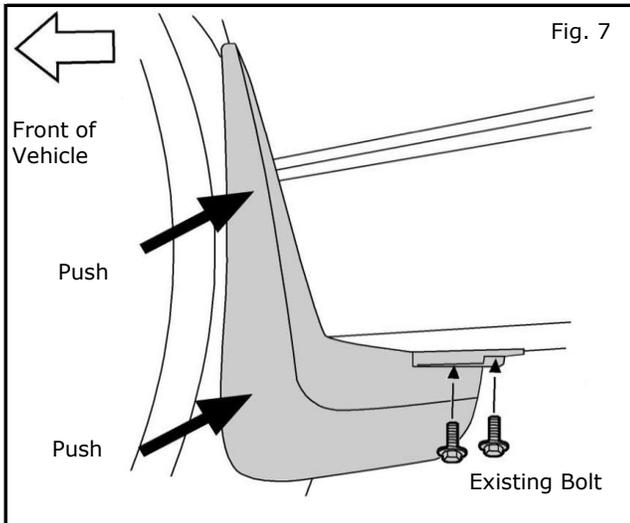

- 8) Push splash guard upward and inward towards vehicle and reinstall existing bolts.

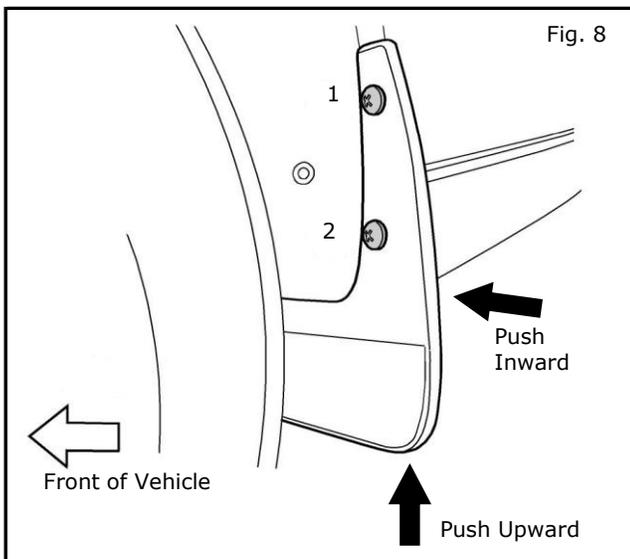

- 9) Push splash guard upward and inward towards vehicle and tighten screws in sequence shown.

**NOTE:**  
**Do not over tighten screws. Reference Tighten Torque: 3.8~4.4N-m {34~39 in-lb}**

- 10) Repeat for passenger side of vehicle.