




GENUINE PARTS

INSTALLATION INSTRUCTIONS


DESCRIPTION:	Splash Guard-Rear
APPLICATION:	NV200
PART NUMBER:	999J2 FZ004

KIT CONTENTS:

Item	Qty.	Part Description	Service Part Number
A	1	Splash Guard - Rear Left	78813 3LMOC
B	1	Splash Guard - Rear Right	78812 3LMOC
C	6	Phillips Head Screw	14-51 00841
D	6	Spring Clip	12-41 01011
E	1	Installation Instruction Replacement Template	999V2 AW000

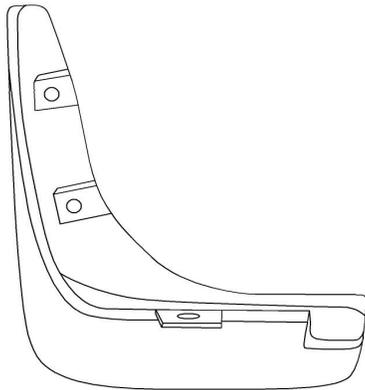

A

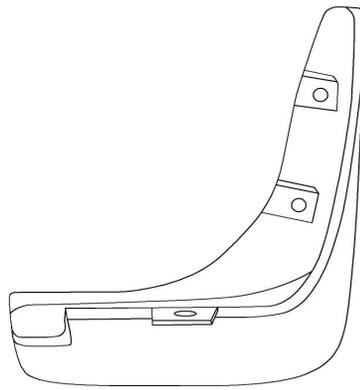

B



C



D



E


TOOLS REQUIRED:

- Drill with 90° Head
- 6mm (1/4") drill bit
- 10mm Socket and Drive
- #2 phillips screw driver
- Mild soap / water mixture
- Awl
- Clean Rag


PRE-INSTALLATION WARNINGS, CAUTIONS, CRITICAL STEPS, and NOTES:

- These installation instructions are for the left side of the vehicle; the same procedure applies to the right side.
- Dealer Installation Recommended.

INSTALLATION PROCEDURE:

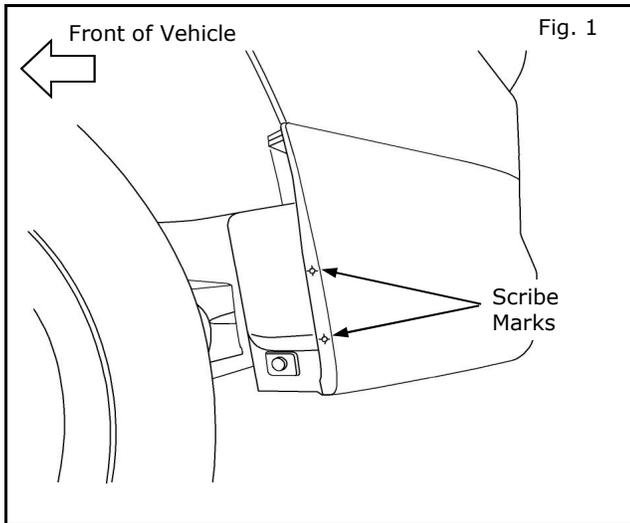


1) Mark center of scribe marks with awl.

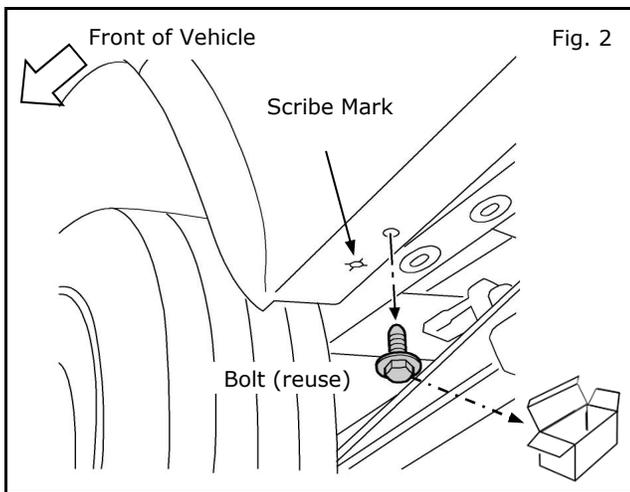


2) Remove bolt from bottom of rear bumper (keep to reuse).

3) Mark center of scribe mark with awl.

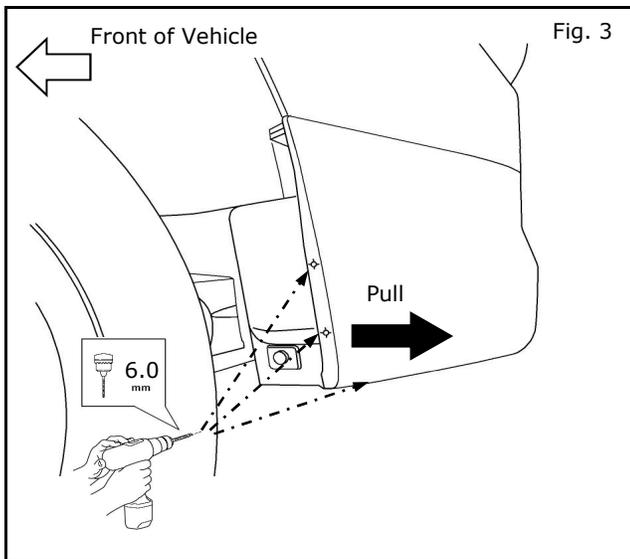


4) While pulling rear bumper outward, drill 6mm (1/4") holes at center of all scribe mark locations on bumper.


INSTALLATION PROCEDURE: (continue)

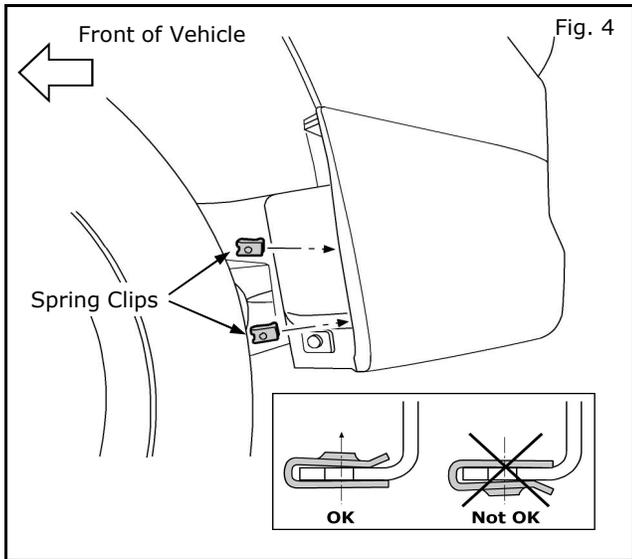

5) Install spring clips.

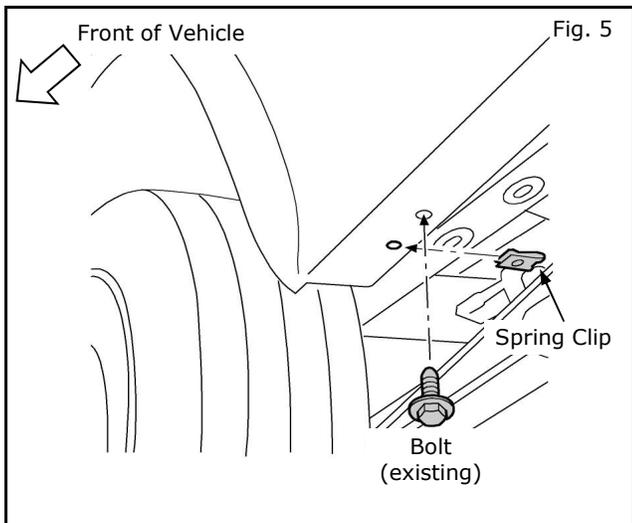


6) Reinstall existing bolt.
7) Install spring clip.

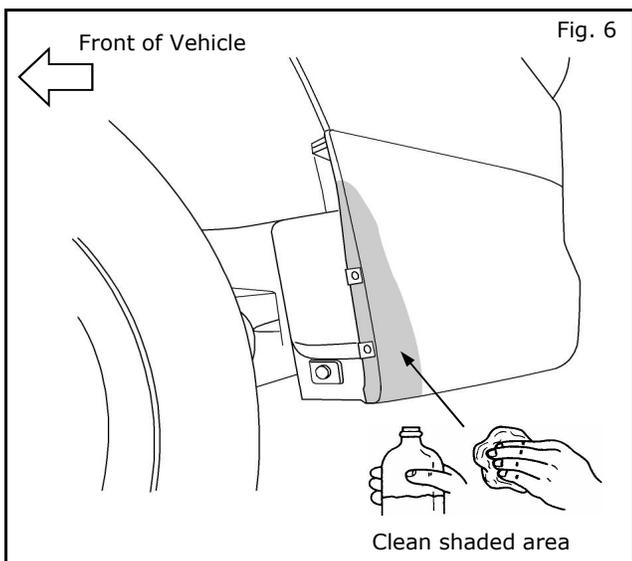


8) Clean installation surface (shaded area) with mild soap/water mixture.

INSTALLATION PROCEDURE: (continue)

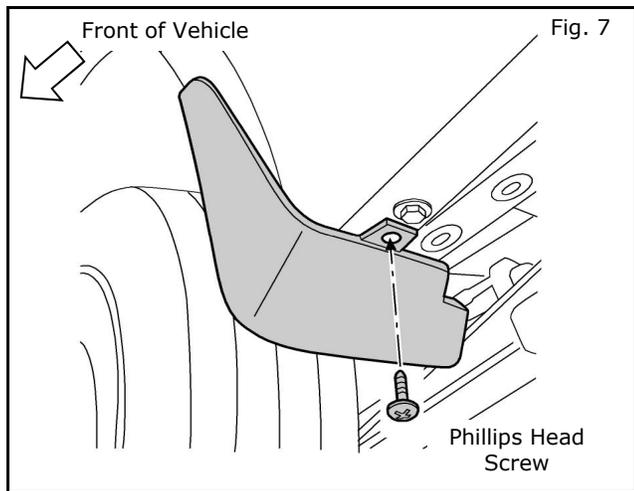


- 9) Align splash guard to vehicle and loosely install phillips head screw at bottom location.

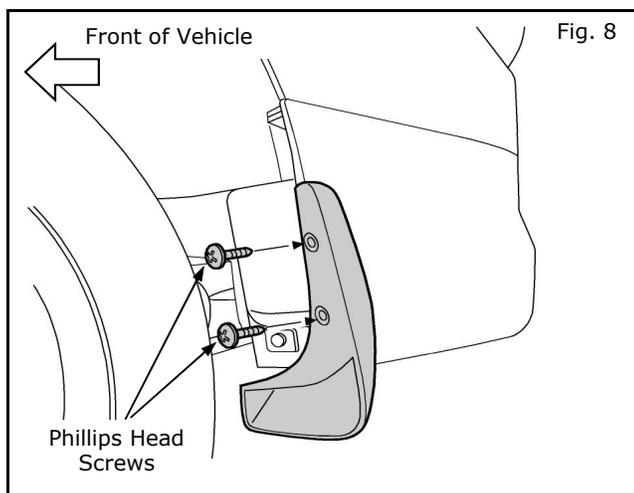

- 10) Loosely install two phillips head screws.

NOTE:
Do not over tighten screws at this time.

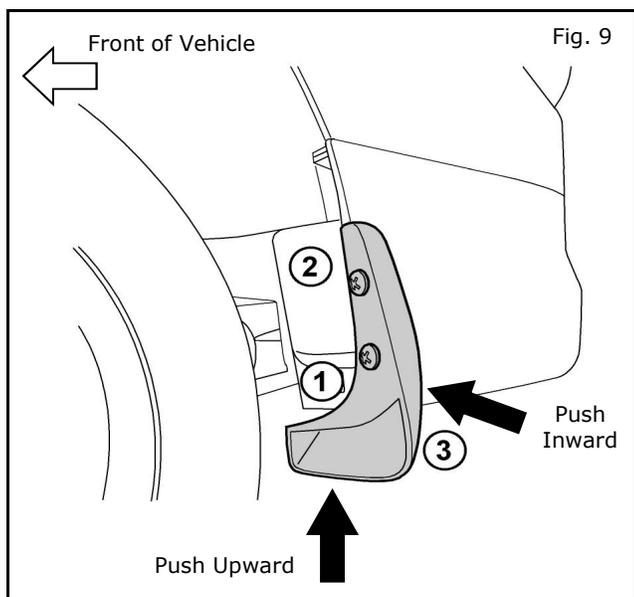

- 9) Push splash guard upward and inward towards vehicle and tighten three screws in sequence shown.

NOTE:
Do not over tighten screws. Reference Tighten Torque: 3.8~4.4N-m {34~39 in-lb}

- 11) Repeat for passenger side of vehicle.