


Volvo Car Corporation Gothenburg, Sweden


Instruction No Version Part. No. 31470794 1.0 31470791

Mudflaps, front



Volvo Car Corporation Gothenburg, Sweden

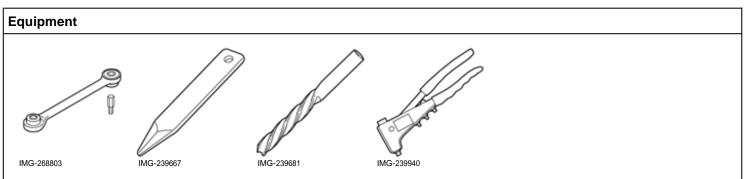

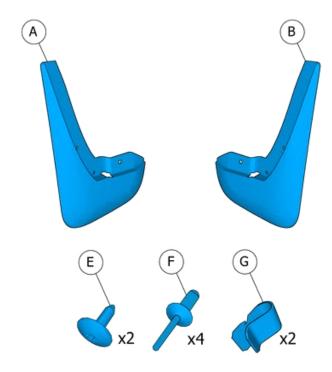

IMG-419980



Volvo Car Corporation Gothenburg, Sweden

Information

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.


Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Color symbols

2

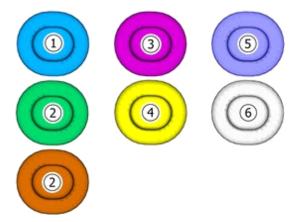

IMG-363036

Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- Used when the component is not fully removed from the vehicle but only hung to the side.
- Used for standard tools and special tools.
- Used as background color for vehicle components.


Removal



Volvo Car Corporation Gothenburg, Sweden




Turn the wheel inwards.

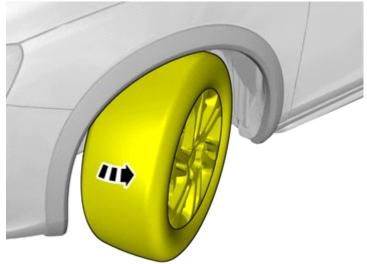

IMG-419955

IMG-419956



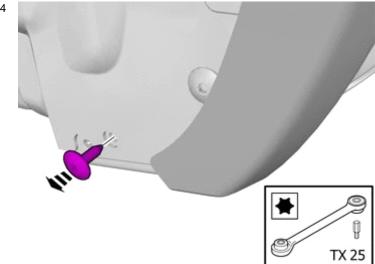


Remove the screw.

Accessory installation



Volvo Car Corporation Gothenburg, Sweden

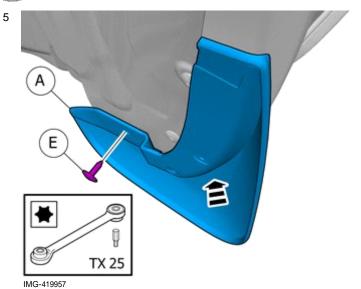


Caution!

Make sure that the components are positioned correctly.

Install component that comes with the accessory kit.

Tighten the screw.

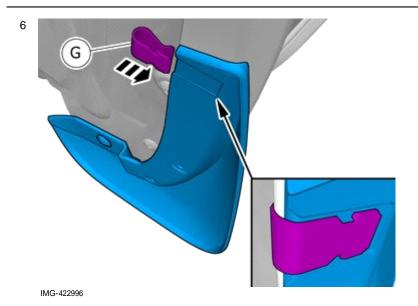


Caution!

Check that the component has locked in its bottom position.

Install component that comes with the accessory kit.

Use: Interior trim remover

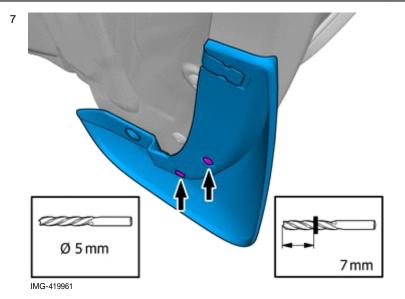

Note!


Note the position.

Drill first layer only

Drill the holes.



Volvo Car Corporation Gothenburg, Sweden

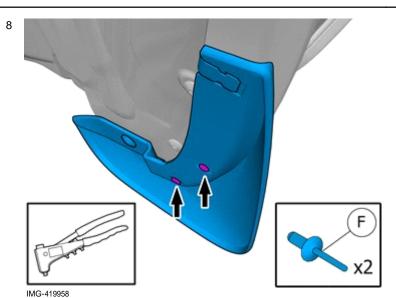

Install component that comes with the accessory kit.

9

Repeat the steps when installing accessories on opposite side.