

Volvo Car Corporation Gothenburg, Sweden

 Instruction No
 Version
 Part. No.

 30756784
 1.1
 30756667


Bumper cover






Volvo Car Corporation Gothenburg, Sweden

Materials		
Designation	Part number	
Isopropanol	1161721	

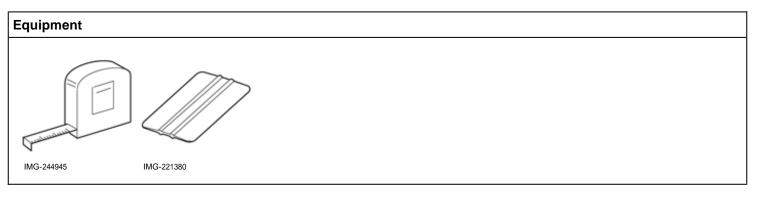

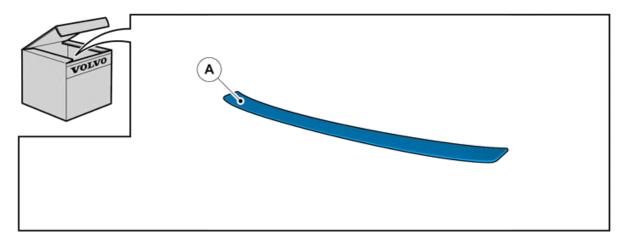




_

Volvo Car Corporation Gothenburg, Sweden

	Information
1	 Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.
	Conditions
2	When installing, the car must retain a temperature of 20 degrees C.
	After installation, the car must not be driven for 2 hours
	After installation, the car must not be washed for 48 hours
3	Clean the surface.
	Allow to dry.

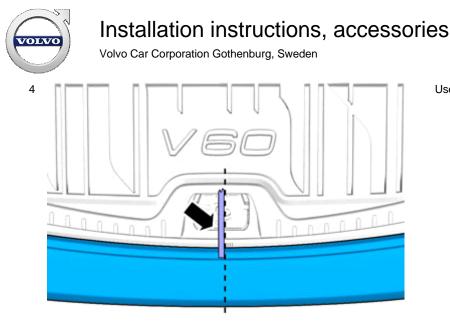


Use suitable tape to indicate the center.


IMG-345625

5

Use suitable tape to indicate the center.

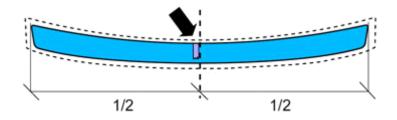


IMG-345626

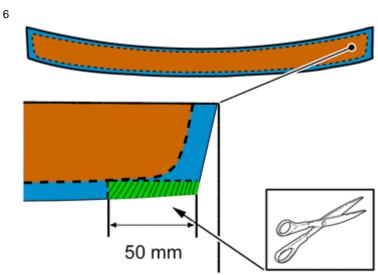


Cut off a piece of the transparent foil, as indicated.



Volvo Car Corporation Gothenburg, Sweden

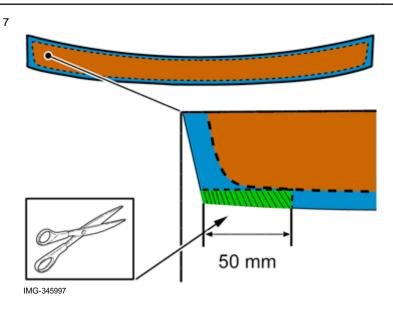

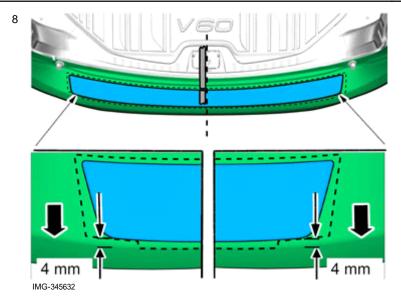


Cut off a piece of the transparent foil, as indicated.

Center the Bumper Cover, using the tape marks and the values in the graphic.



Make sure that the Bumper Protection is installed on the flat bumper surface only, not covering any sharp radius.

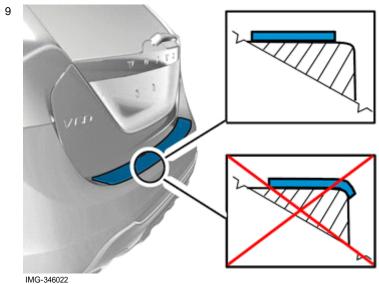


© Volvo Car Corporation



11

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

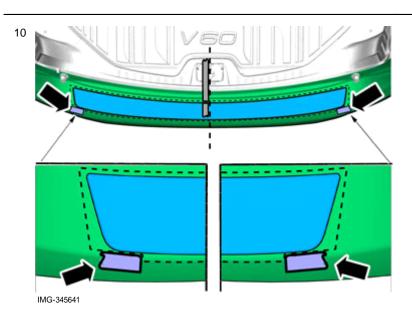


<u>_</u>

Use appropriate tape to mark the position.


Clean the Bumper Cover surface.

Allow to dry.

Use: 1161721, Isopropanol



Volvo Car Corporation Gothenburg, Sweden

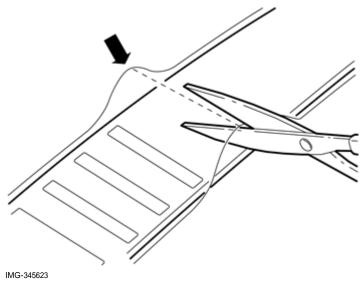


Cut in the lower transparent foil in the middle.




/OLV

12

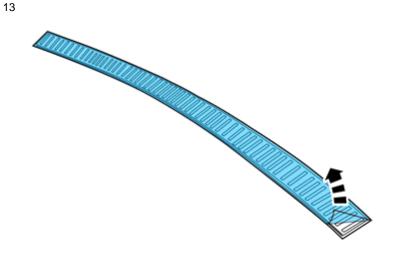

IMG-378604

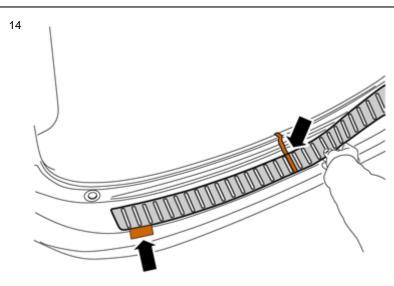

IMG-345942


Pull off the top protection foil, if applicable.

Adjust the position of the Bumper Protection using the tape marks.



Volvo Car Corporation Gothenburg, Sweden


15

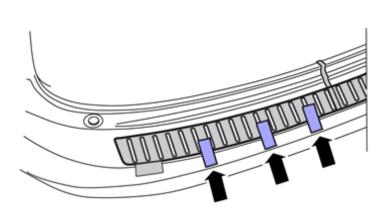


Note!

Use tape to temporarily fix the bumper cover in the correct position.

IMG-347431

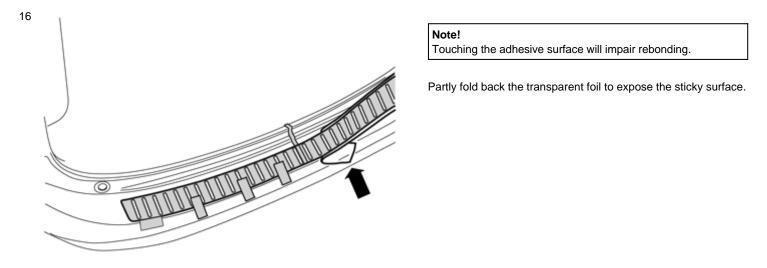

IMG-347451

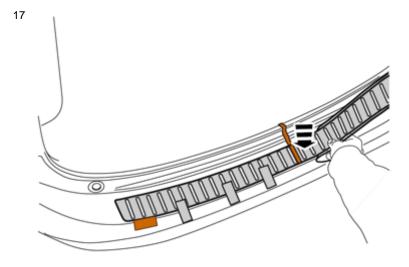


Allow the Bumper Protection to adhere to the Bumper Cover as indicated.

IMG-345943 © Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden


18

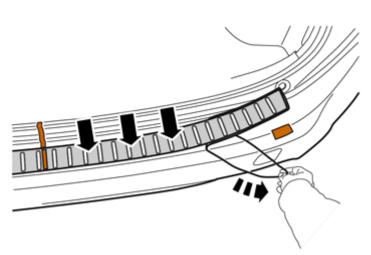

Pull off the rest of the transparent foil and press by hand on the Bumper protection to make it cling to the Bumper Cover.

IMG-345944

19

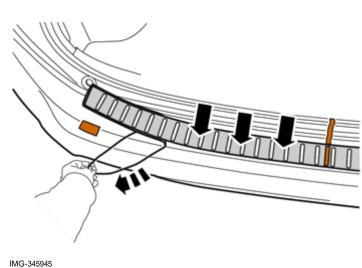

Pull off the rest of the transparent foil and press by hand on the Bumper protection to make it cling to the Bumper Cover.



Thoroughly press, by hand, all over the Bumper Protection to make it cling properly.

Use suitable tool to squeeze out any trapped air bubbles.