

Volvo Car Corporation Gothenburg, Sweden

**Instruction No** 31399122

Version

Part. No.

31399121 1.0


# Diffuser, R-design





Volvo Car Corporation Gothenburg, Sweden

#### **Equipment**







Volvo Car Corporation Gothenburg, Sweden


	Information
1	Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.
	Further information
2	When installing, the car must retain a temperature of 20 degrees C.
	Color symbols
3	Used for focused component, the component with which you will do something.
	Used as extra colors when you need to show or differentiate additional parts.
	<ol> <li>Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.</li> </ol>
	<ol> <li>Used when the component is not fully removed from the vehicle but only hung to the side.</li> </ol>
	5. Used for standard tools and special tools.
	6. Used as background color for vehicle components.
IMG-363036	

© Volvo Car Corporation




Volvo Car Corporation Gothenburg, Sweden

Turn off the ignition.

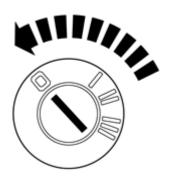

IMG-245980


#### Removal

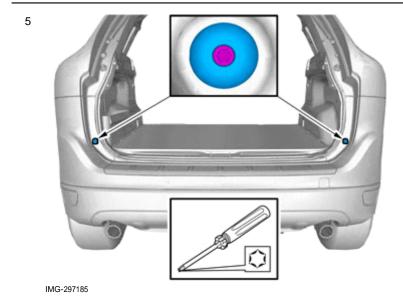



Volvo Car Corporation Gothenburg, Sweden


6

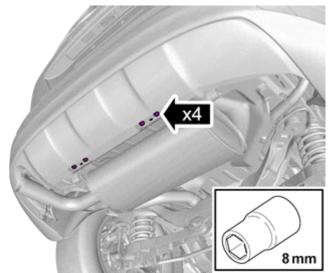

Remove the screws.

IMG-377456


7

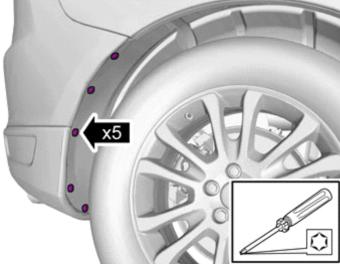

Remove the screws.

On both sides.

IMG-297503

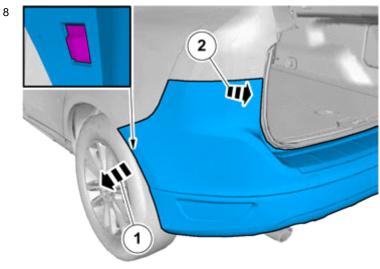

Note!

This step is easier with two people.



Volvo Car Corporation Gothenburg, Sweden


#### Note!

This step is easier with two people.

Disconnect the connector.



10

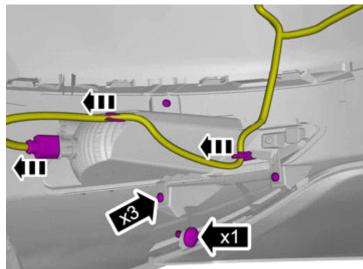

On both sides.

Remove the cable harness clips.

Remove the screws.








Volvo Car Corporation Gothenburg, Sweden

12

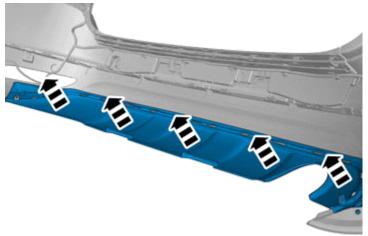


Remove the panel.

IMG-378186

#### **Accessory installation**

13

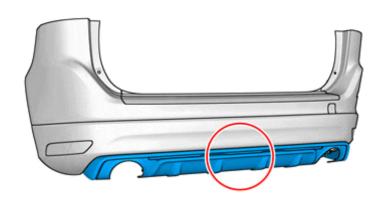

Note!


Orientation view


IMG-377381

Vehicles with detachable towbar




Volvo Car Corporation Gothenburg, Sweden



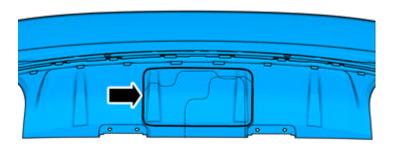


IMG-377732

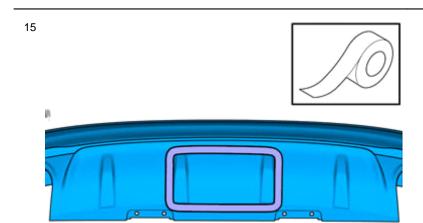

Apply tape to the other side, opposite the marking lines.

IMG-377740

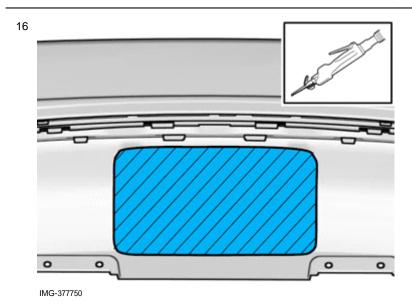


© Volvo Car Corporation

Diffuser, R-design- 31399122 - V1.0



Volvo Car Corporation Gothenburg, Sweden

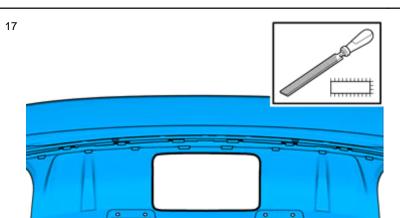


Deburr edges

IMG-377752

#### Vehicles with fixed towbar


18

Locate relevant marking.

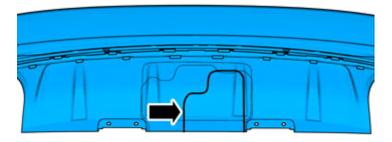




Volvo Car Corporation Gothenburg, Sweden

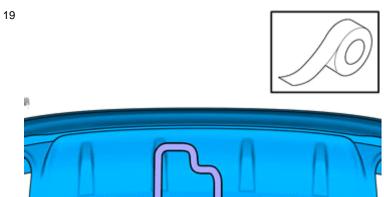


Apply tape to the other side, opposite the marking lines.

IMG-378001

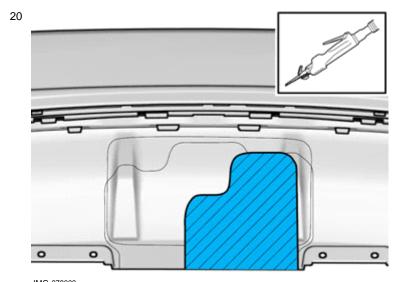

IMG-378003

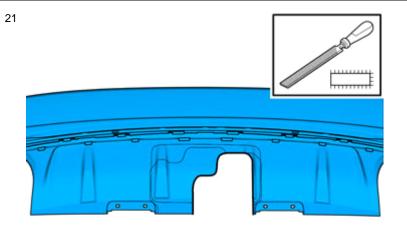


Deburr edges



Volvo Car Corporation Gothenburg, Sweden


#### All vehicles

22

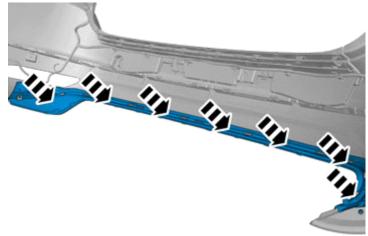


IMG-378188

23

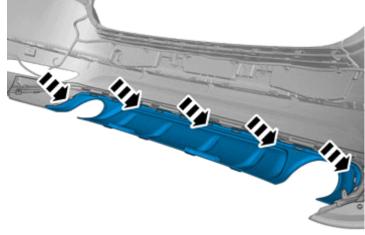



Volvo Car Corporation Gothenburg, Sweden

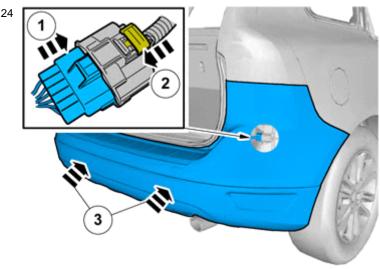

IMG-297604

25

Reinstall the removed parts in reverse order.