

Volvo Car Corporation Gothenburg, Sweden

Instruction No Version 31399625 1.1


Part. No. 31399213

Sun curtain



Volvo Car Corporation Gothenburg, Sweden



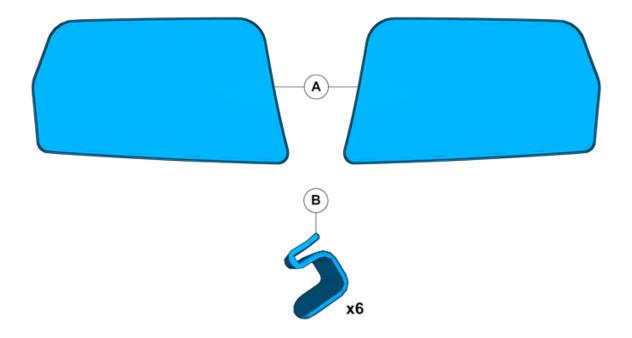

IMG-378790



Volvo Car Corporation Gothenburg, Sweden

Information

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.


Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Color symbols

2

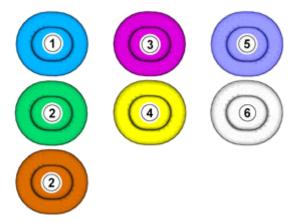

IMG-363036

Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- 1. Used for focused component, the component with which you will do something.
- Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- 6. Used as background color for vehicle components.

Accessory installation



Volvo Car Corporation Gothenburg, Sweden

3

Set the ignition key to position I.



IMG-332194

4



5

Set the ignition key to position 0.



IMG-332193

© Volvo Car Corporation Sun curtain- 31399625 - V1.1


Page 4 / 8




Volvo Car Corporation Gothenburg, Sweden

6

Remove the weatherstrip.

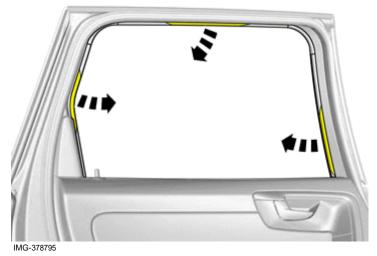


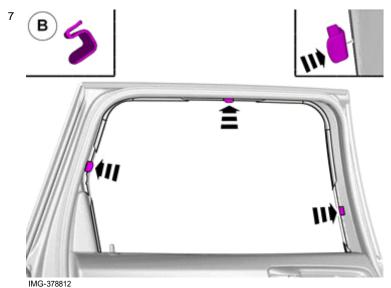

Install the clip(s).

8

Reinstall the rubber weatherstrip.

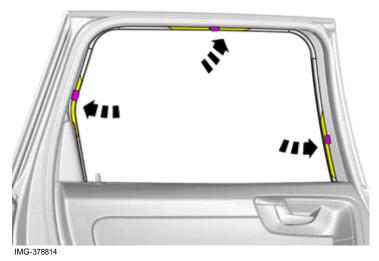


© Volvo Car Corporation


Sun curtain- 31399625 - V1.1



Volvo Car Corporation Gothenburg, Sweden

9

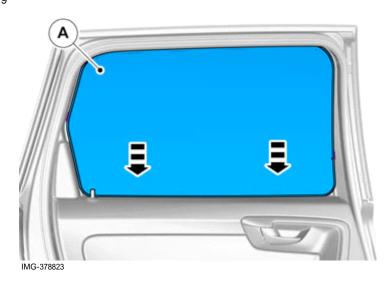

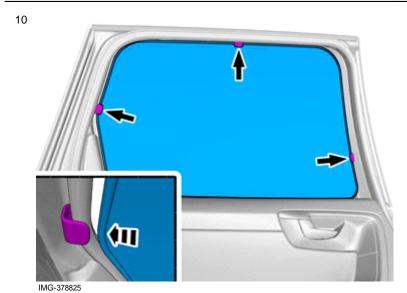



Volvo Car Corporation Gothenburg, Sweden


11

Set the ignition key to position I.



IMG-332194

12

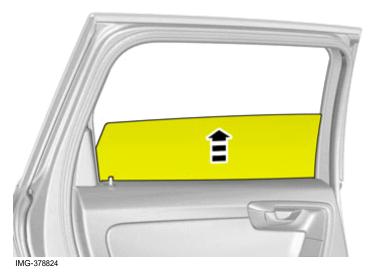

13



Set the ignition key to position 0.

Repeat all method steps for the other side.

IMG-332193



Volvo Car Corporation Gothenburg, Sweden