


Volvo Car Corporation Gothenburg, Sweden

 Instruction No
 Version
 Part. No.

 31435814
 1.1
 31408818


# Alcoguard

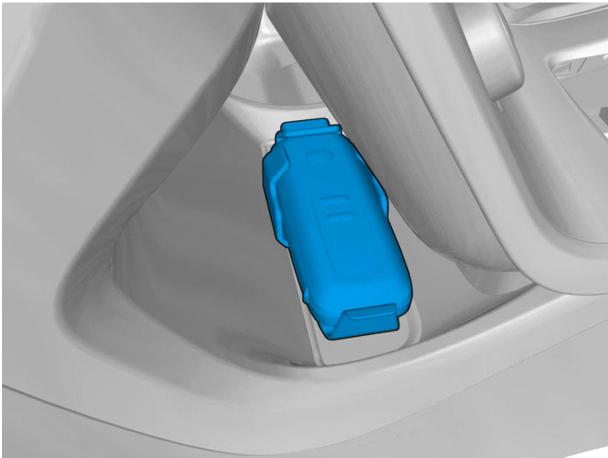


IMG-349341

Volvo Car Corporation Gothenburg, Sweden

OLV

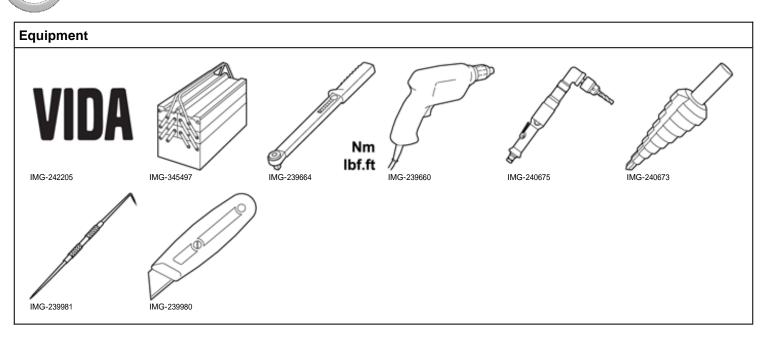

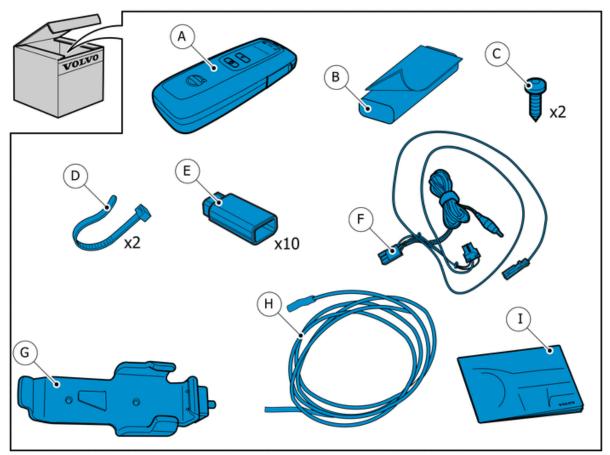

IMG-405910



Volvo Car Corporation Gothenburg, Sweden

	Information
1	Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.
	Conditions
2	Where the procedure differs, the right-hand version is also shown with text and image.
	All vehicles
	Activate and calibrate the Alcohol Analysing Start Inhibitor according to TJ (Technical Journal) 19265.
IMG-349120	




Volvo Car Corporation Gothenburg, Sweden


IMG-332193




Set the ignition key to position 0.

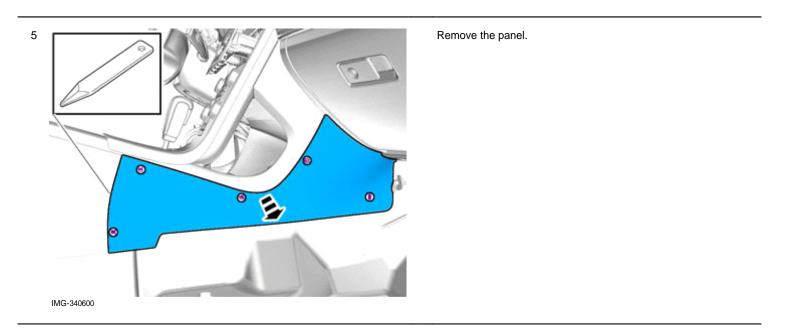



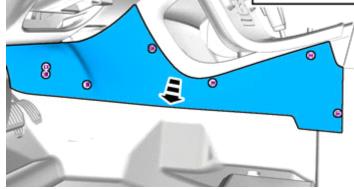

IMG-340598

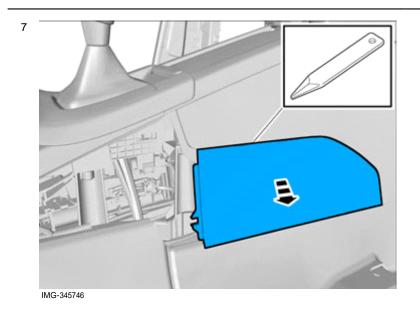


IMG-308353

© Volvo Car Corporation

Disconnect any connector(s).




Volvo Car Corporation Gothenburg, Sweden

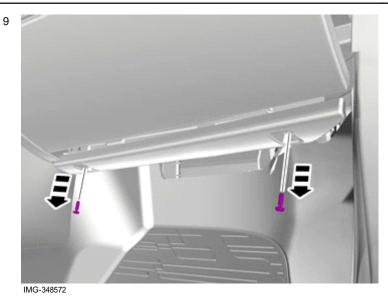



IMG-348840

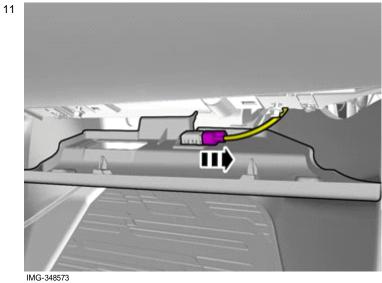

© Volvo Car Corporation


Remove the screws.

Detach the panel.

Disconnect the connector.



Volvo Car Corporation Gothenburg, Sweden

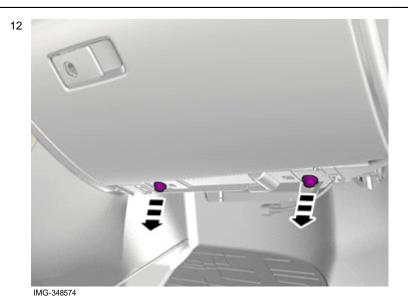

Remove the screws.

Tightening torque: M6 , 10 Nm


13




IMG-354758




Volvo Car Corporation Gothenburg, Sweden

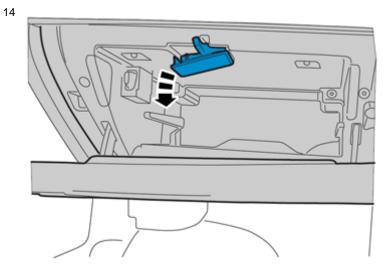

IMG-348576

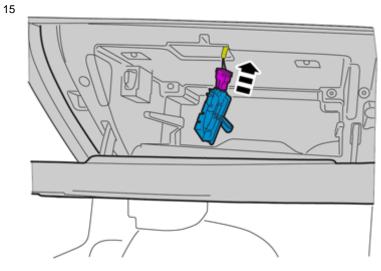

IMG-348577

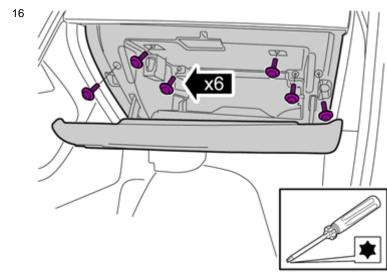

IMG-348578


Remove the part carefully

Disconnect the connector.

Remove the screws.




Volvo Car Corporation Gothenburg, Sweden

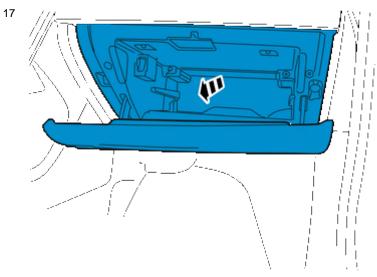

IMG-348579




19

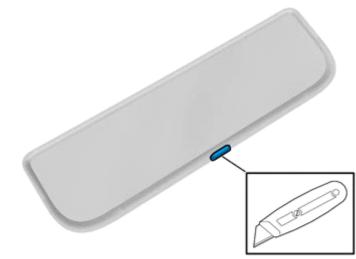


IMG-349091 © Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden

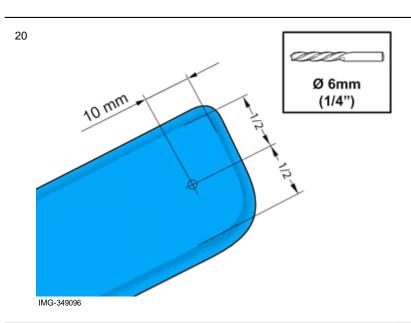


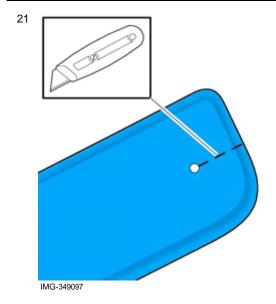




Volvo Car Corporation Gothenburg, Sweden



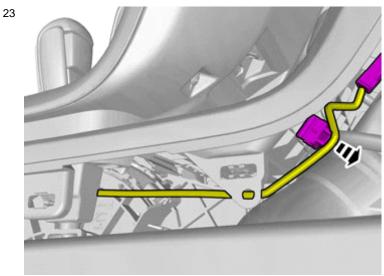

IMG-354760

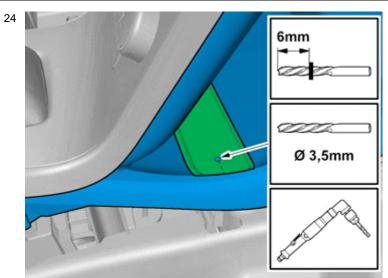

Unhook the clip(s).

### Caution!


Take extra care not to damage the wiring harnesses.


Remove the swarf.

IMG-349128



Volvo Car Corporation Gothenburg, Sweden

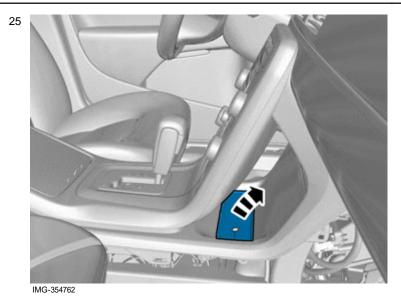

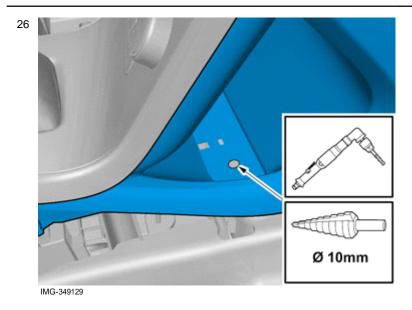


### Caution!

Take extra care not to damage the wiring harnesses.

Remove the swarf.

27

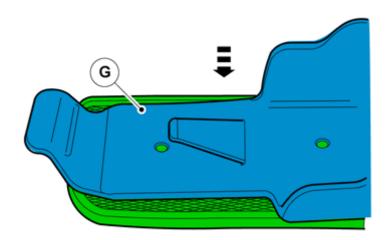


IMG-348878 © Volvo Car Corporation




Volvo Car Corporation Gothenburg, Sweden



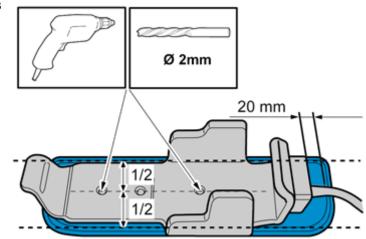

IMG-348611


29

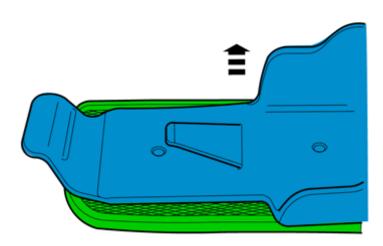


IMG-348879



Volvo Car Corporation Gothenburg, Sweden

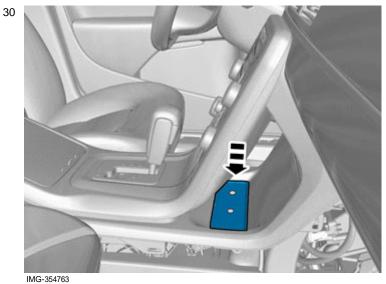

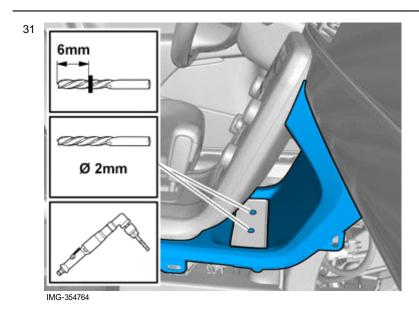

### Caution!

Take extra care not to damage the wiring harnesses.

Remove the swarf.




IMG-354762



Volvo Car Corporation Gothenburg, Sweden

33

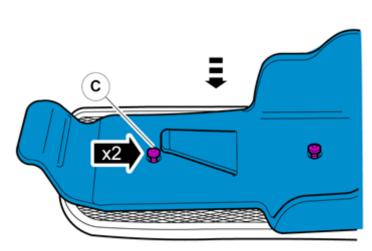


Note!


Only tighten the bolts finger tight at this stage.

Install the screws.

IMG-348613

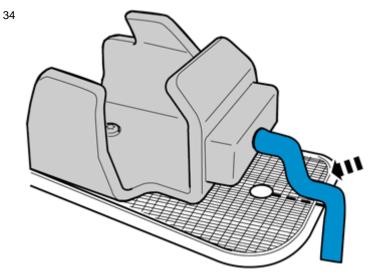


IMG-348614

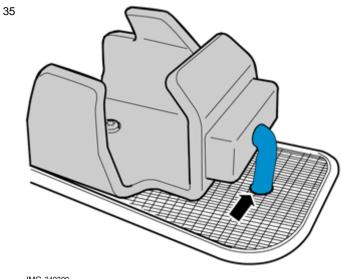



Volvo Car Corporation Gothenburg, Sweden

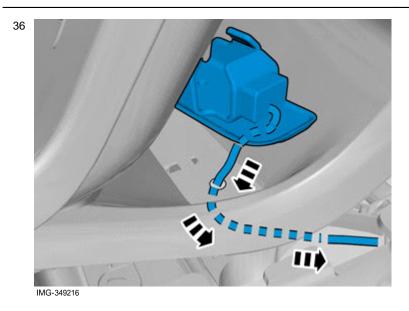


Pull the wiring through.






Volvo Car Corporation Gothenburg, Sweden

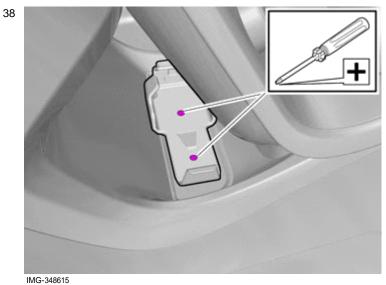

IMG-349310

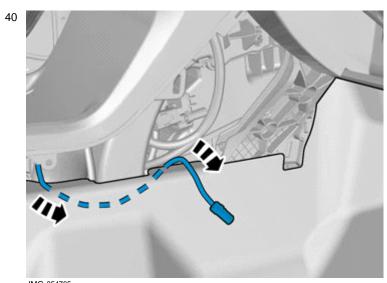

IMG-354765

Fold the carpet to the side.

Place any excess inside the floor carpet.




Volvo Car Corporation Gothenburg, Sweden

# <image><image><image>


**Right-hand drive vehicles** 


Fold the carpet to the side.

Place any excess inside the floor carpet.

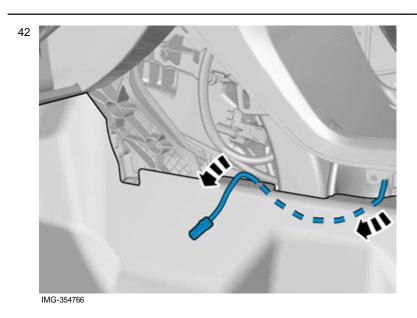


### Installation in Floor Console Compartment

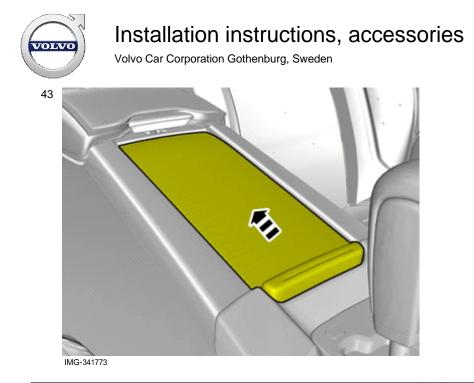

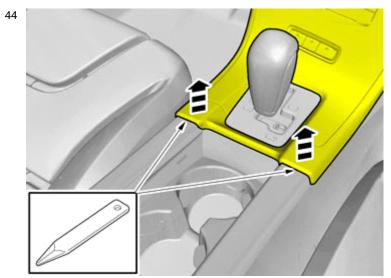

IMG-329154

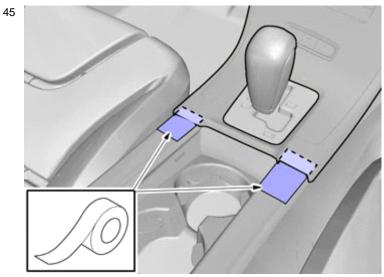

IMG-348620


Detach the panel.

Note!


Protect adjacent components with tape.



Volvo Car Corporation Gothenburg, Sweden

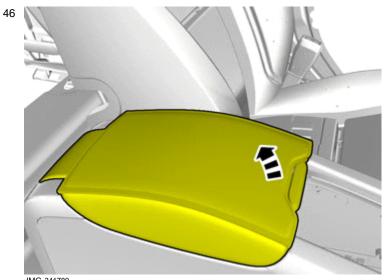

IMG-341780

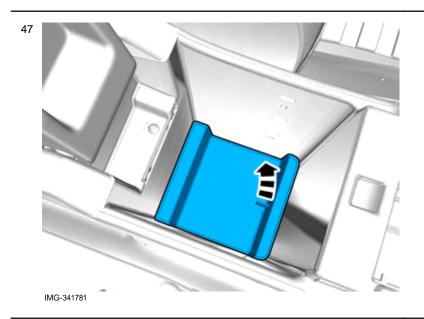


48


IMG-293023 © Volvo Car Corporation Remove the screws.



Volvo Car Corporation Gothenburg, Sweden

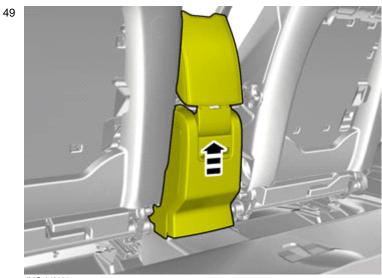


IMG-348624

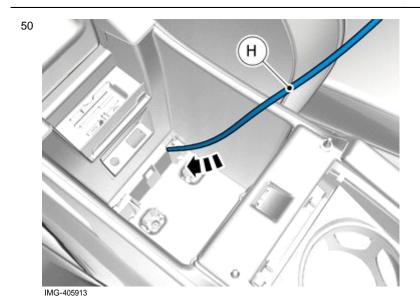

Facilitate cable routing by temporarily raising the floor bracket using a socket or similar.



Volvo Car Corporation Gothenburg, Sweden

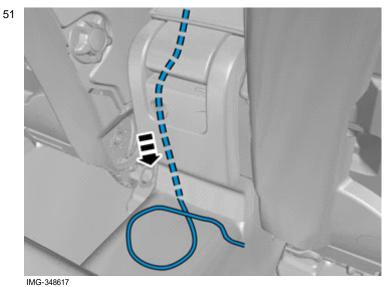

52 9512932 9512932 9512932


53

IMG-405853


Tighten the cable tie.



Volvo Car Corporation Gothenburg, Sweden

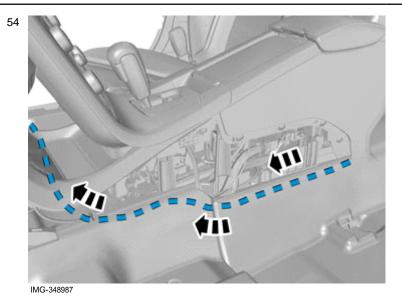


### All vehicles

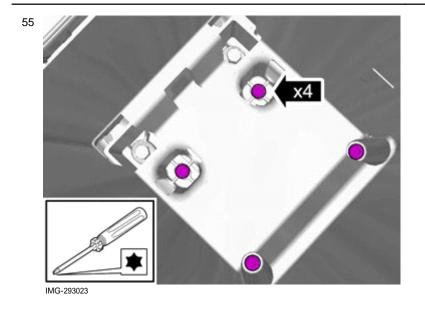



### Caution!

Make sure that no part of the wiring harness is trapped.

Reinstall the screws.

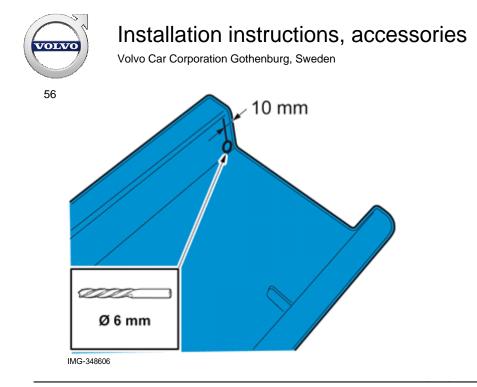

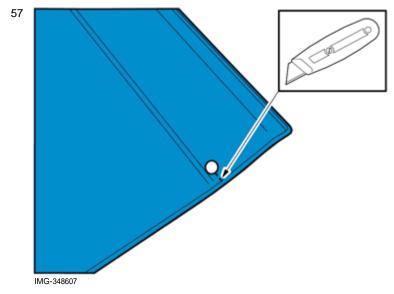


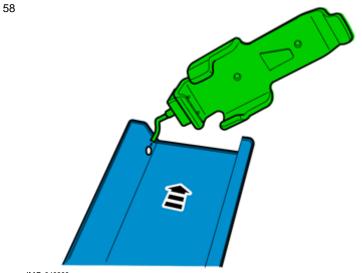


IMG-349298



Volvo Car Corporation Gothenburg, Sweden

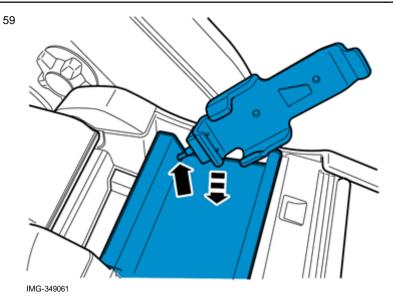

<image><page-header>

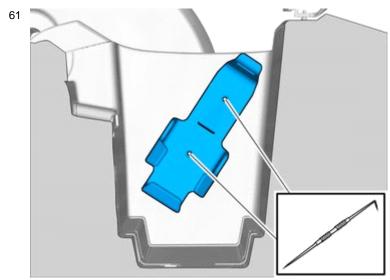

IMG-407423 © Volvo Car Corporation

### Measure


### Use: Scribe

Make holes in the storage compartment using the point of a scriber.




Install the screws.

Volvo Car Corporation Gothenburg, Sweden

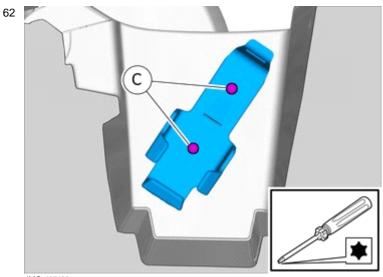


IMG-407425

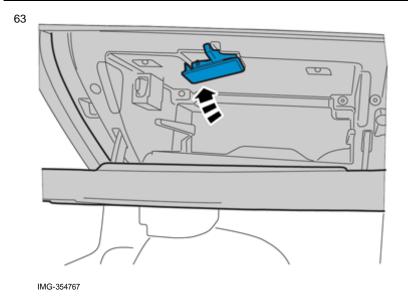

© Volvo Car Corporation




Volvo Car Corporation Gothenburg, Sweden

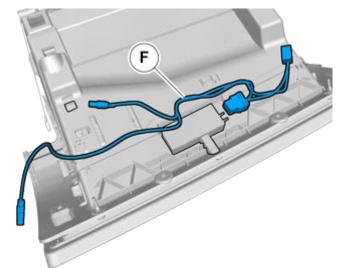


Connect the connector.

IMG-354768

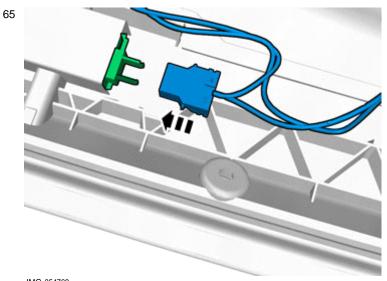

IMG-354769

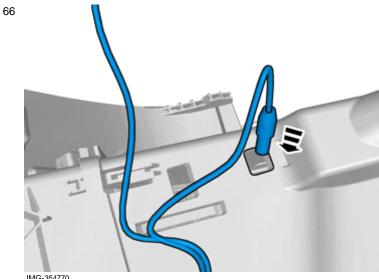


IMG-354770



68

### Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

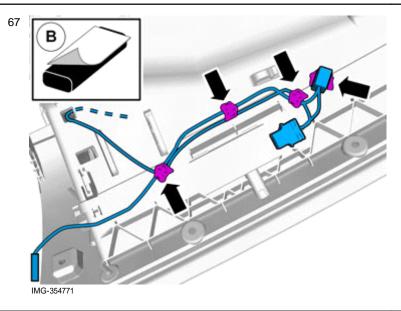


Pull the wiring through.

Tighten the cable tie.

Install the part with butyl tape.


IMG-354772

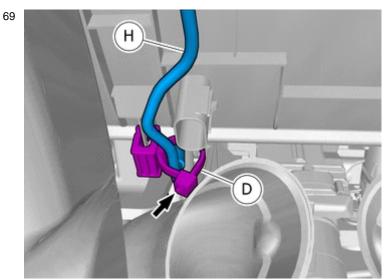

IMG-405906 © Volvo Car Corporation




Volvo Car Corporation Gothenburg, Sweden

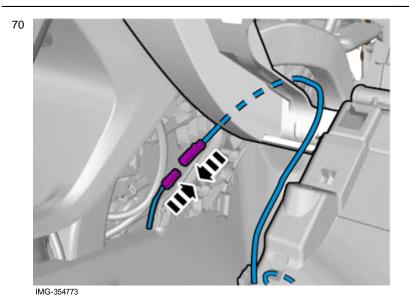


Connect the connectors.

Place any excess inside the floor carpet.

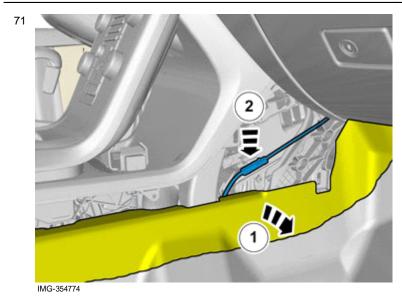



Volvo Car Corporation Gothenburg, Sweden

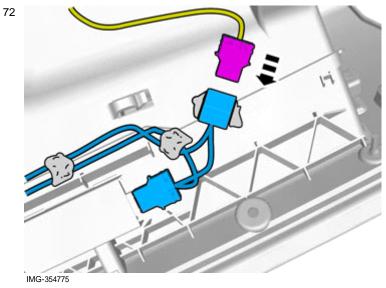


The lamp with the battery symbol should flash if the power supply is correct, if not, the black connector must be turned to switch poles.

Download software (application) for the accessory's function according to the service information in VIDA. See VIDA or the


accessories catalogue for software part number.

Reinstall the removed parts in reverse order.

Connect the connector.

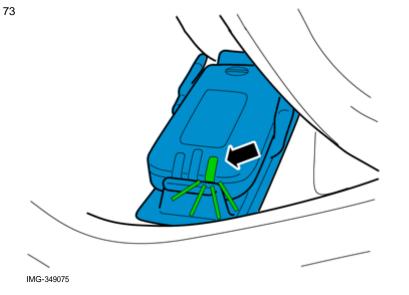

74

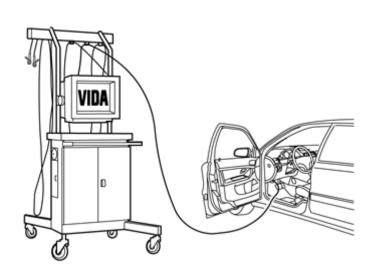

IMG-242268



Volvo Car Corporation Gothenburg, Sweden