

Volvo Car Corporation Gothenburg, Sweden

Instruction No 31414325

Version 1.0

Part. No.

31414323

Bumper cover





IMG-382970



Volvo Car Corporation Gothenburg, Sweden

Materials	
Designation	Part number
Isopropanol	1161721

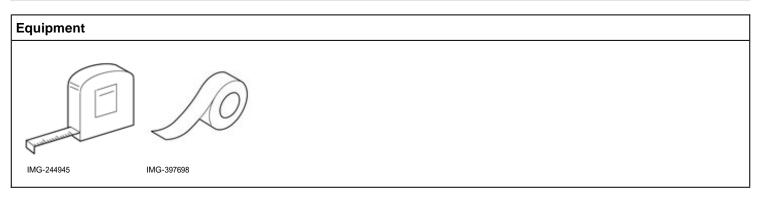

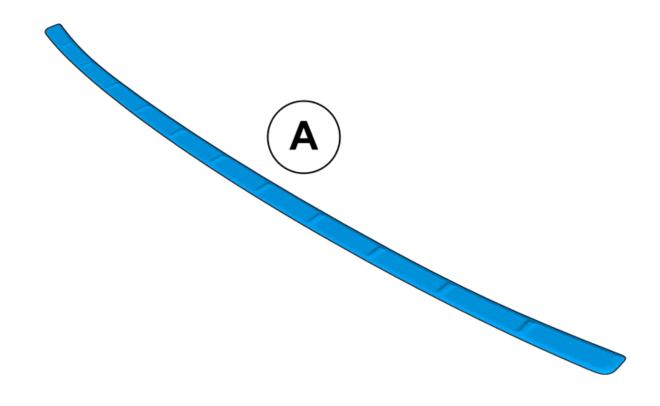

IMG-382971



Volvo Car Corporation Gothenburg, Sweden

	Information
1	Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Conditions

2


When installing, the car must retain a temperature of 20 degrees C.

After installation, the car must not be washed for 48 hours

After installation, the car must not be driven for 2 hours

Color symbols

3

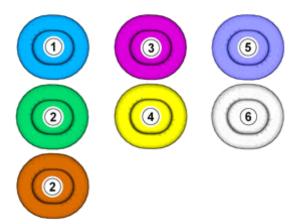

IMG-363036

Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.


- Used for focused component, the component with which you will do something.
- Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- 6. Used as background color for vehicle components.




Volvo Car Corporation Gothenburg, Sweden

Accessory installation

4

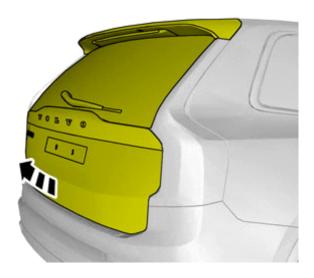

IMG-382972

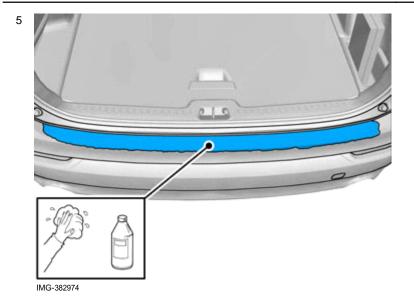

Clean the surface.


Allow to dry.

Use: 1161721, Isopropanol




Volvo Car Corporation Gothenburg, Sweden

Fold the protective film forward

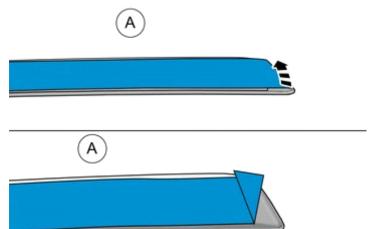

IMG-383164

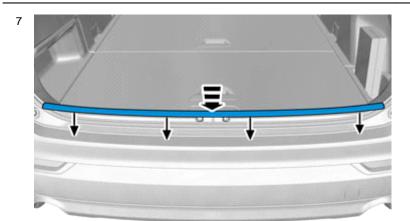

Install component that comes with the accessory kit.

IMG-383128




8

IMG-396915

Make sure that the Bumper Protection is installed on the flat bumper surface only, not covering any sharp radius.




Volvo Car Corporation Gothenburg, Sweden

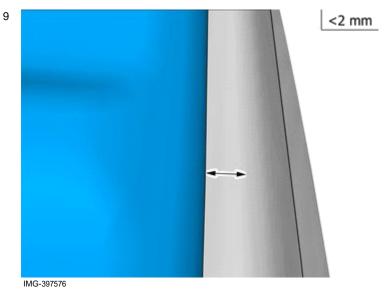


.....

IMG-383153

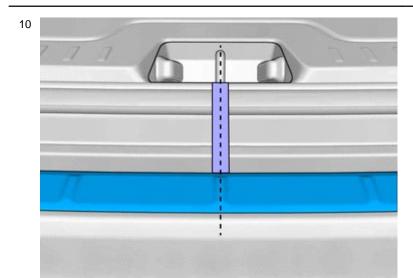

Use suitable tape to indicate the center.

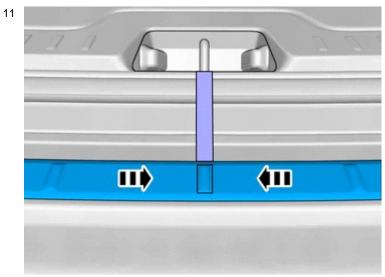


Center the Bumper Cover, using the tape marks and the values in the graphic.

IMG-383152 © Volvo Car Corporation

Bumper cover- 31414325 - V1.0




Volvo Car Corporation Gothenburg, Sweden

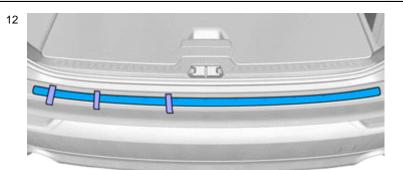

Use tape

IMG-383009

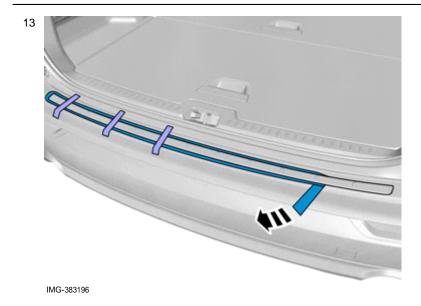


Remove the protective film.




IMG-383203

Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

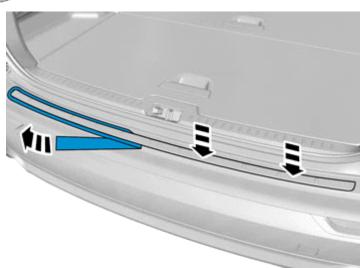

Remove the protective film.

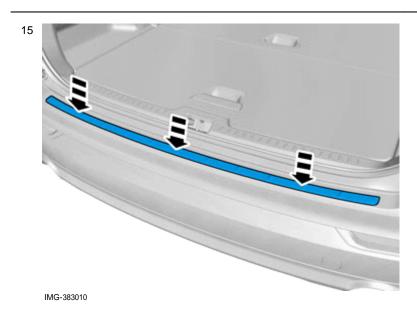

Thoroughly press, by hand, all over the Bumper Protection to make it cling properly.

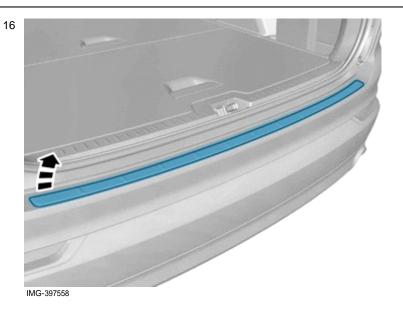

Remove the protective film.



Volvo Car Corporation Gothenburg, Sweden