

Volvo Car Corporation Gothenburg, Sweden

 Instruction No
 Version
 Part. No.

 31428068
 1.0
 31414813, 31439261

Sill molding, illuminated, rear



Volvo Car Corporation Gothenburg, Sweden

Special tools	
	999 5919 PULLER (SEAL-PINION,CAM-CRANKSHAFT)B200-6304
	Tool number:999 5919
	Tool description:PULLER (SEAL-PINION,CAM-CRANKSHAFT)B200-6304
	Tool boards:46
	951 2932 Tension spring
	Tool number:951 2932
	Tool description:Tension spring
	Tool boards:80


Equipment





Volvo Car Corporation Gothenburg, Sweden



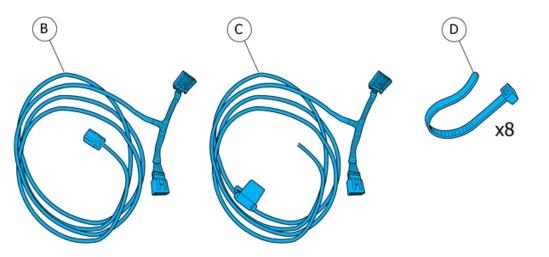

IMG-394812




Volvo Car Corporation Gothenburg, Sweden

Information Read through all of the instructions before starting installation. 1 Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation. Ensure that all tools stated in the instructions are available before starting installation. Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps. In the event of any problems with the instructions or the accessory, contact your local Volvo dealer. Color symbols 2 Note! This colour chart displays (in colour print and electronic version) the importance of the different colours used in the 5 3 images of the method steps. 1. Used for focused component, the component with which you will do something. 2 6 4 Used as extra colors when you need to show or 2. differentiate additional parts. 3. Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc. 4. Used when the component is not fully removed from the vehicle but only hung to the side. IMG-363036 Used for standard tools and special tools. 5. 6. Used as background color for vehicle components.


Removal



Volvo Car Corporation Gothenburg, Sweden

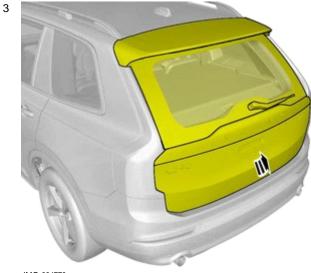


IMG-394779

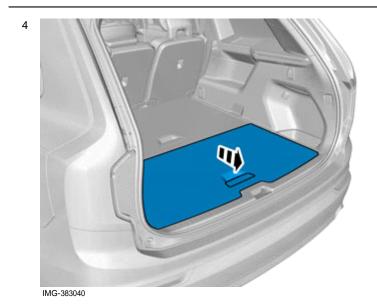


5 КG-39472



Volvo Car Corporation Gothenburg, Sweden

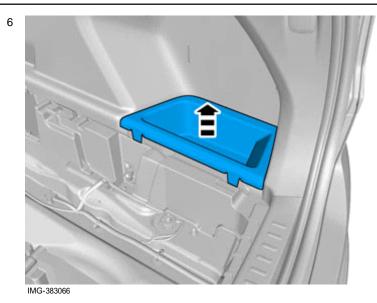

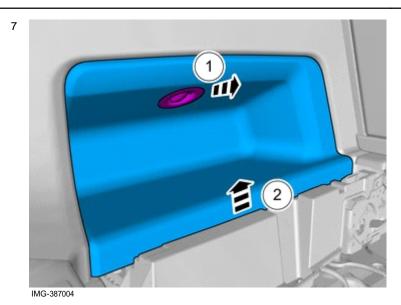

8

IMG-383047 © Volvo Car Corporation


Remove the marked part.

Note!

Do not loosen the bolts more than 2 turns.



Volvo Car Corporation Gothenburg, Sweden

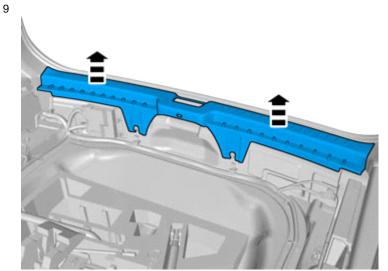


Note!

The clips consist of two parts.

The part is not to be reused.

IMG-383048

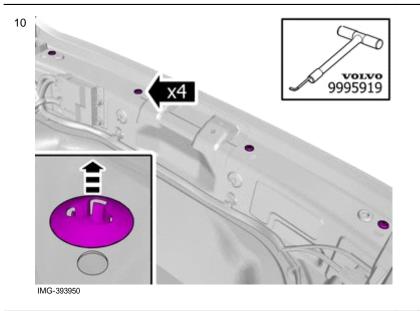



Remove the clips.

Use special tool: T9995919, PULLER (SEAL-PINION,CAM-CRANKSHAFT)B200-6304




Volvo Car Corporation Gothenburg, Sweden

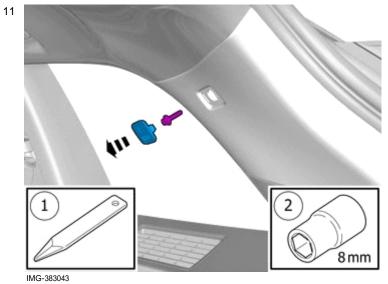

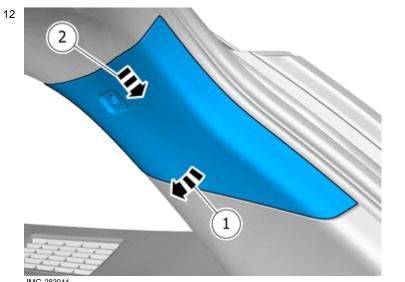

IMG-383044

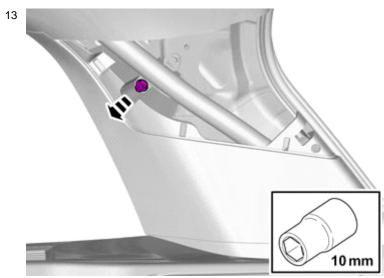

IMG-383045

Remove the nut.


Remove the panel.

Repeat on the other side.

Repeat on the other side.




Volvo Car Corporation Gothenburg, Sweden

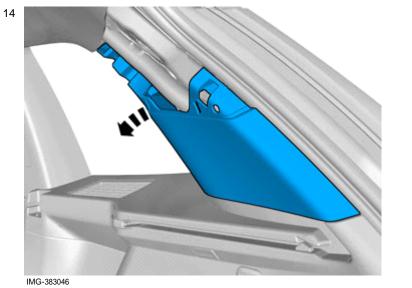

Remove the panel.


Repeat on the other side.

Accessory installation

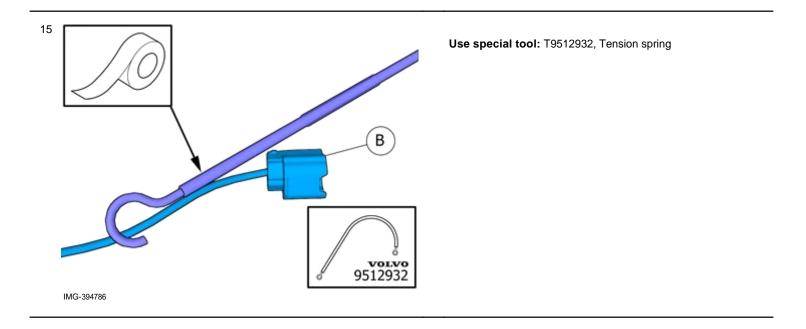




Volvo Car Corporation Gothenburg, Sweden

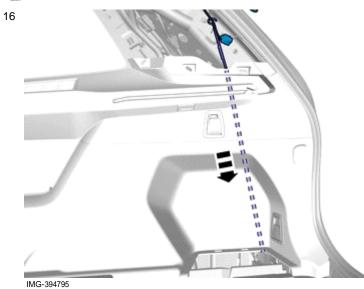

Pull the wiring through.

Disconnect the connector.

Remove the tool.

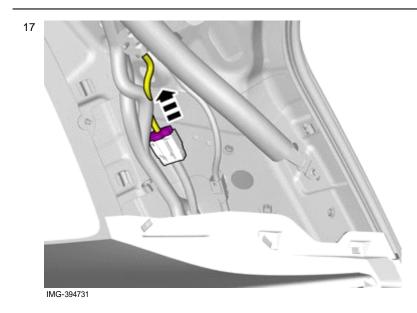


18 P là

IMG-394736


Connect the connectors.



Volvo Car Corporation Gothenburg, Sweden

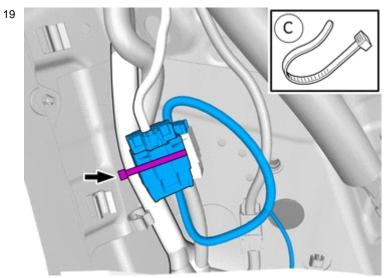

IMG-394742

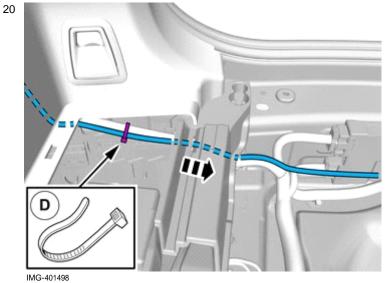

Attach the connector to the wiring harness.


Pull the wiring through.

Route the wire adjacent to existing wirings.

Install the cable.

Use a cable tie

Pull the wiring through.

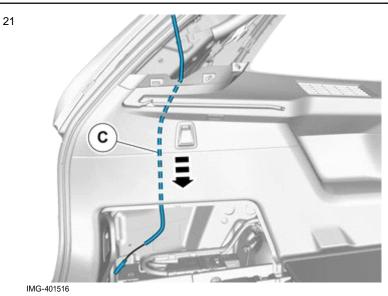


© Volvo Car Corporation

Sill molding, illuminated, rear- 31428068 - V1.0



Volvo Car Corporation Gothenburg, Sweden

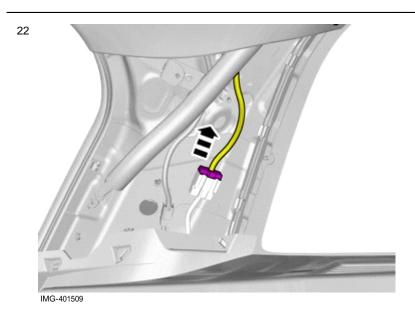

23
Weight of the second sec


Disconnect the connector.

Connect the connectors.


© Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden

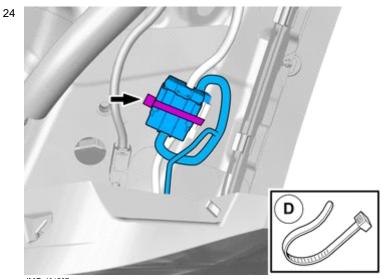

IMG-401507

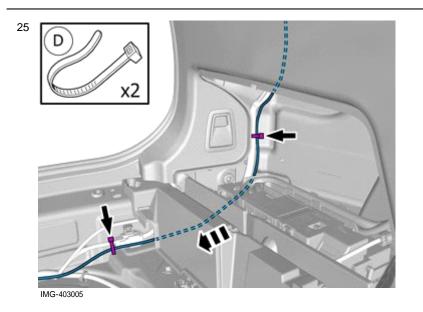

Route the wire adjacent to existing wirings.


Release the connector's secondary lock.

Lift approximately 2 mm.

Attach the connector to the wiring harness.

Install the cable.

Use a cable tie

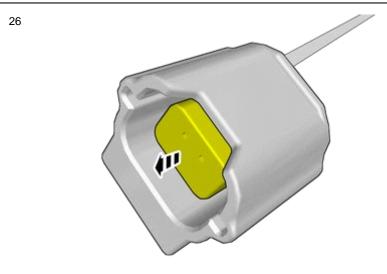

IMG-403003




Volvo Car Corporation Gothenburg, Sweden


27

IMG-403042

28

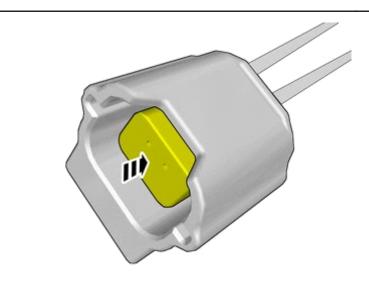

IMG-403004

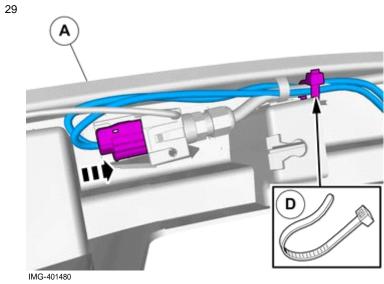

© Volvo Car Corporation

Depress the secondary lock.

Connect the prerouted cable.

Connect the connector.


Install the cables.




31

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

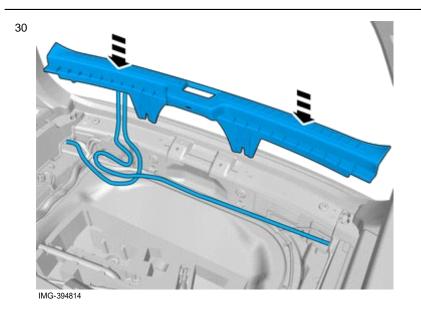

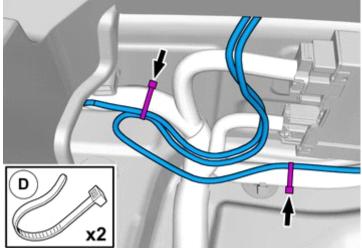


Position the cable harness excess as illustrated.

Install the cables.

Use a cable tie

IMG-401492

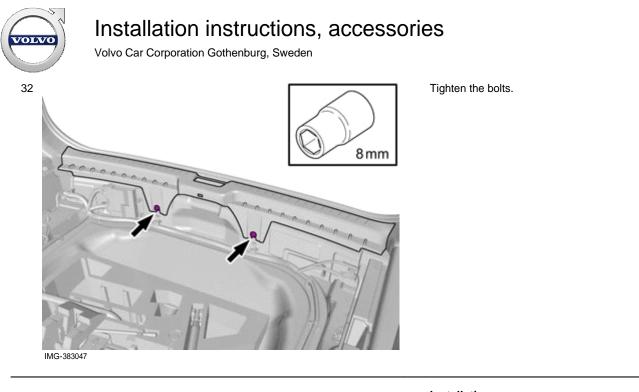

Installation

33

Reinstall the removed parts in reverse order.