

Volvo Car Corporation Gothenburg, Sweden

Instruction No 31439014 Version 1.0 Part. No. 31373978

Sun curtain, rear window


© Volvo Car Corporation


Sun curtain, rear window- 31439014 - V1.0

Page 1 / 11



Volvo Car Corporation Gothenburg, Sweden

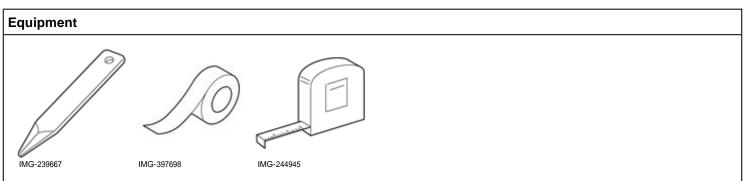

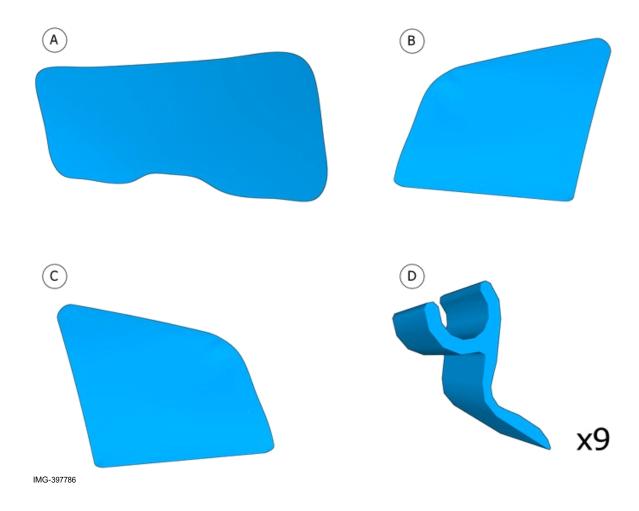



Volvo Car Corporation Gothenburg, Sweden

Information

1

Read through all of the instructions before starting installation.


Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Accessory installation

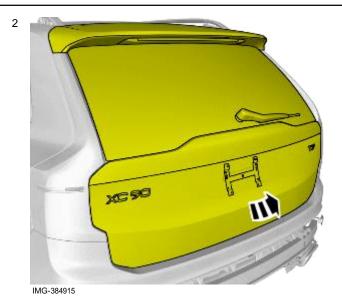



Volvo Car Corporation Gothenburg, Sweden

3



Note!

Orientation view


1101G-39779

4



Use tape

5

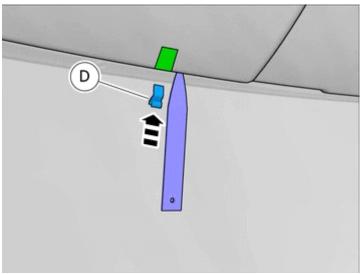


Install component that comes with the accessory kit.

Use: Interior trim remover

IMG-397685




Volvo Car Corporation Gothenburg, Sweden

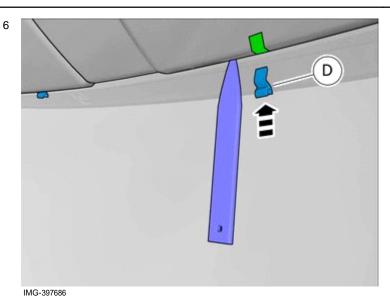


Install component that comes with the accessory kit.

Use: Interior trim remover

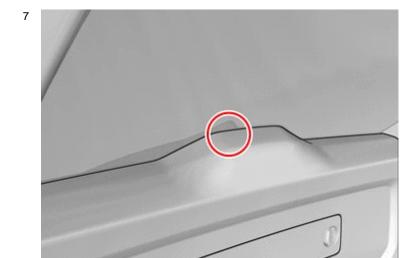

IMG-397701

8

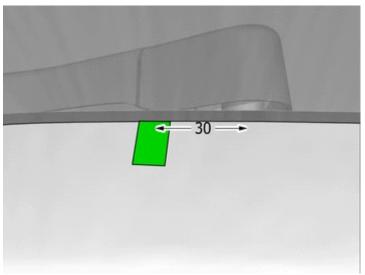

IMG-397700

© Volvo Car Corporation


Use tape




IMG-397703

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

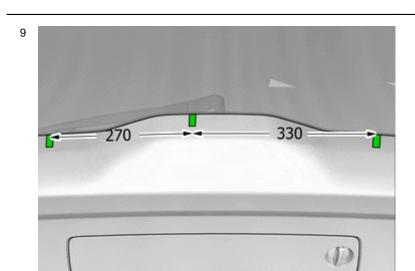

Use tape

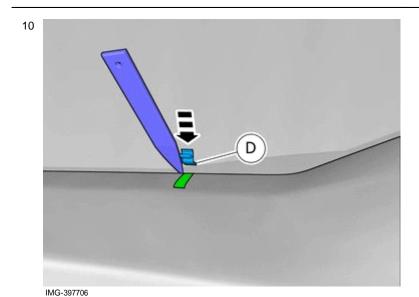


Install component that comes with the accessory kit.



Volvo Car Corporation Gothenburg, Sweden

11


Install component that comes with the accessory kit.

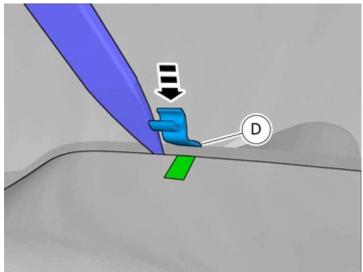

IMG-397707

12


Install component that comes with the accessory kit.

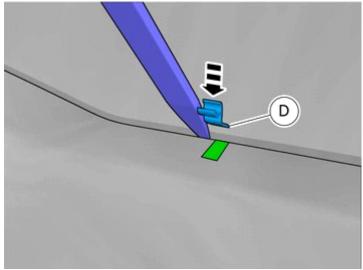

IMG-397708

13


Install component that comes with the accessory kit.

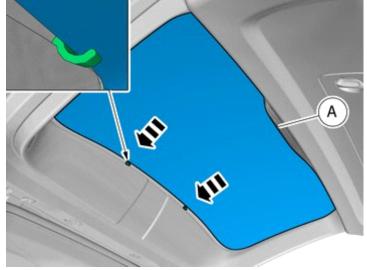


IMG-397733




Volvo Car Corporation Gothenburg, Sweden

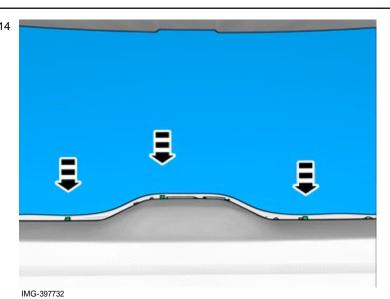

Ensure that all clips engage.

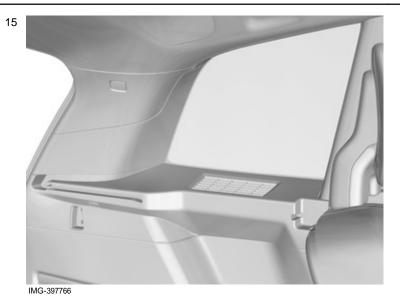

Note! Orientation view

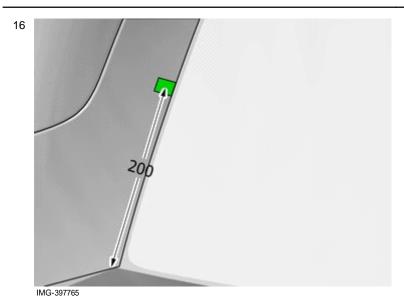


Use tape

© Volvo Car Corporation


Sun curtain, rear window- 31439014 - V1.0



Volvo Car Corporation Gothenburg, Sweden

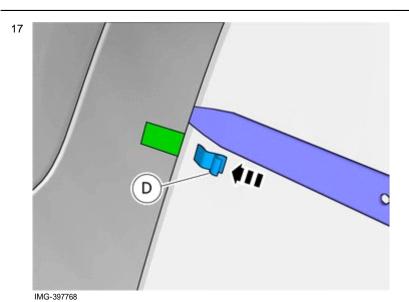


Install component that comes with the accessory kit.

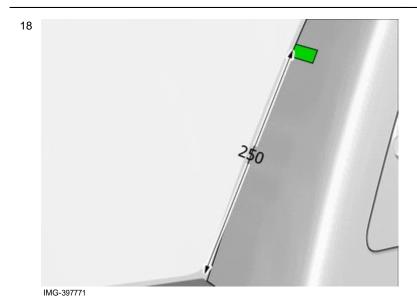

Use tape




Volvo Car Corporation Gothenburg, Sweden

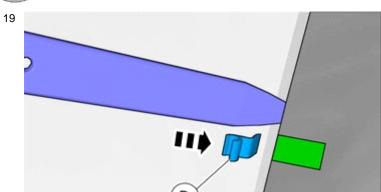


Install component that comes with the accessory kit.



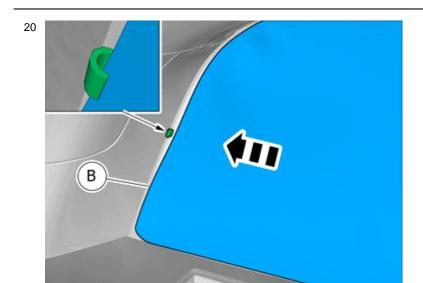

Install component that comes with the accessory kit.

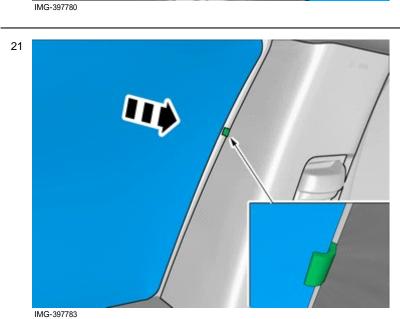

IIVIO-037703



Volvo Car Corporation Gothenburg, Sweden

22

Repeat the steps when installing accessories on opposite side.

© Volvo Car Corporation

Sun curtain, rear window- 31439014 - V1.0