

Volvo Car Corporation Gothenburg, Sweden

Instruction No 31414773

Version 1.3

Part. No.

31373544

Towbar, hitch





IMG-382034



Volvo Car Corporation Gothenburg, Sweden

Materials	
Designation	Part number
Grease	30749880
Isopropanol	1161721

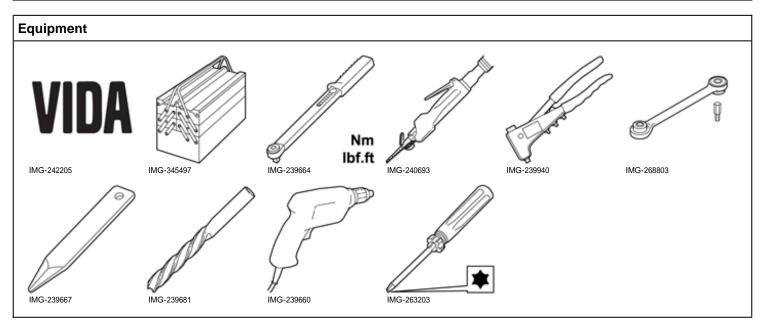


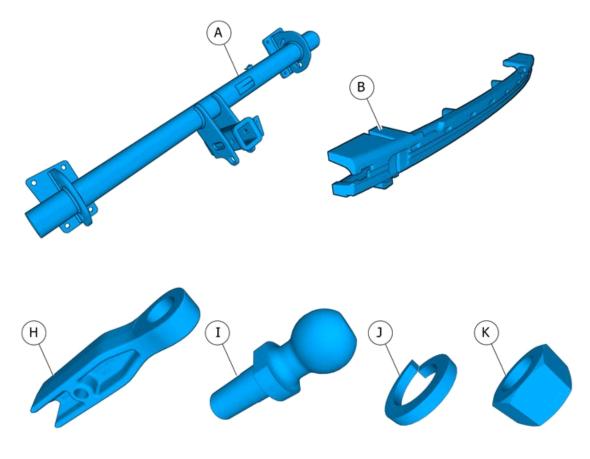

IMG-386608




Volvo Car Corporation Gothenburg, Sweden

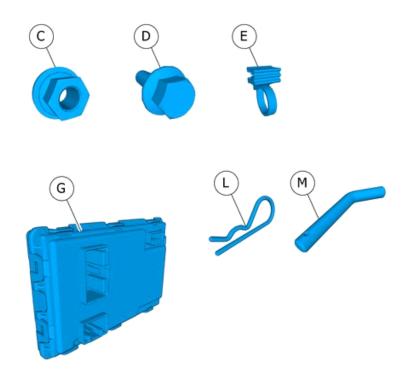

IMG-382007



Volvo Car Corporation Gothenburg, Sweden

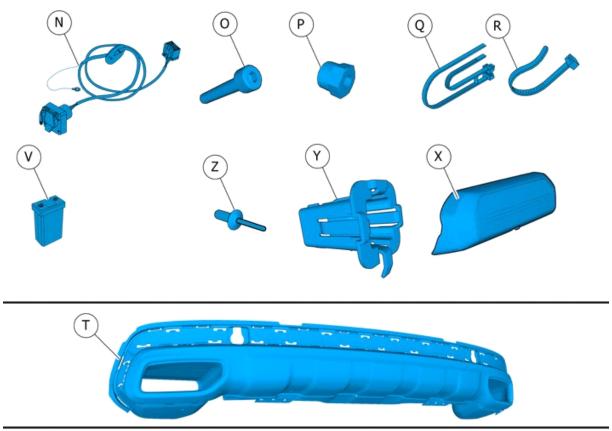


IMG-401076



Volvo Car Corporation Gothenburg, Sweden

	Information
1	Read through all of the instructions before starting installation.
	Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.
	Ensure that all tools stated in the instructions are available before starting installation.
	Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.
	In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.
	Further information
2	When installing, the car must retain a temperature of 20 degrees C.
	Color symbols
3	

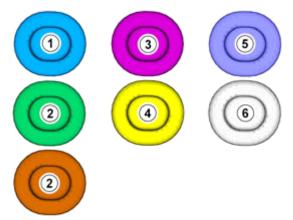

IMG-363036

Note

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- 1. Used for focused component, the component with which you will do something.
- Used as extra colors when you need to show or differentiate additional parts.
- 3. Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4. Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- 6. Used as background color for vehicle components.


Removal



Volvo Car Corporation Gothenburg, Sweden



IMG-394779

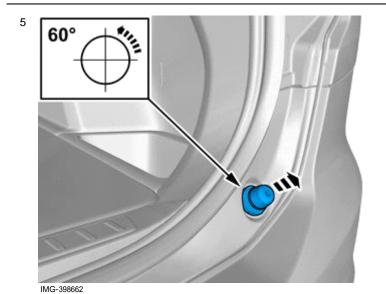


Make sure that the components are not mixed up at the installation.

Remove the marked part.

Use hands only.

Repeat on the other side.

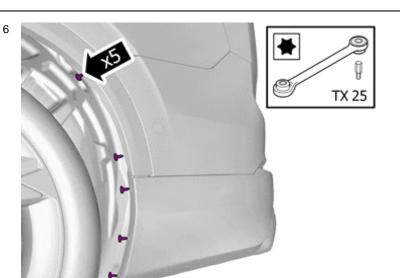

Remove the screws.




Volvo Car Corporation Gothenburg, Sweden

7



Fold the wing liner to one side.


8

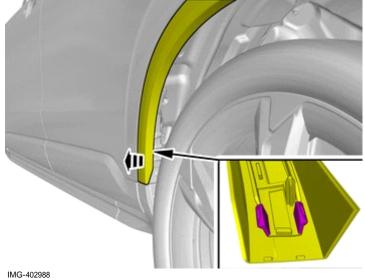

Remove the part carefully

Release the catches.

1110 40200

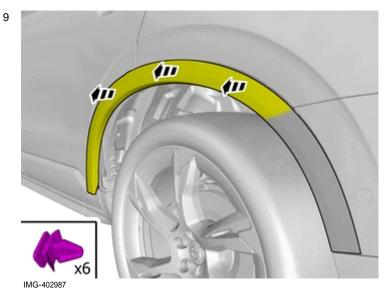

Remove the part carefully


Loosen the clips.

© Volvo Car Corporation

Towbar, hitch- 31414773 - V1.3




Volvo Car Corporation Gothenburg, Sweden

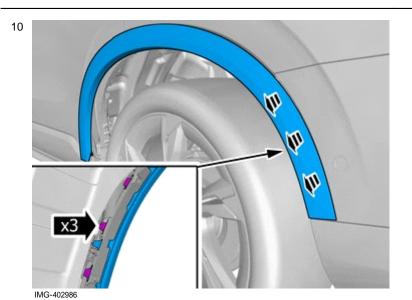

Remove the part carefully

Remove the marked part.

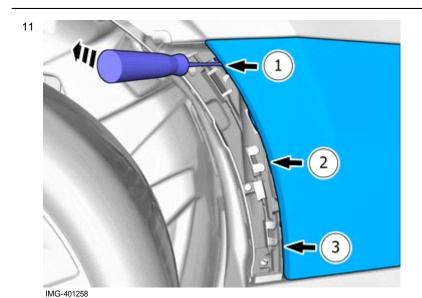

Release the catches.

Remove the part carefully




12


IMG-392800

Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

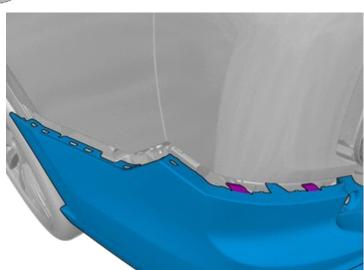

Note!
Orientation view

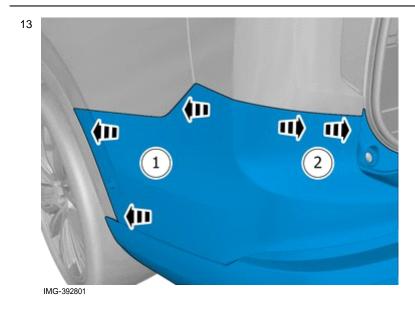

Repeat the steps when removing on opposite side.


IMG-377070

14



Volvo Car Corporation Gothenburg, Sweden

15

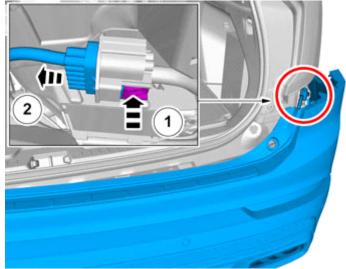


Locate the connector.

Release the connector's catch.

Disconnect the connector.


IMG-381918

16

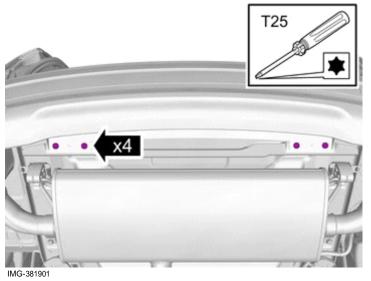

Remove the screws.

17

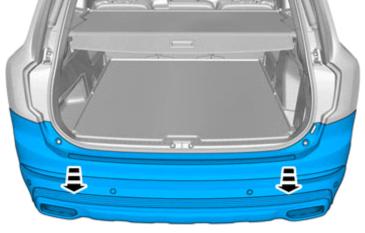

Caution!

Place the Bumper Cover on a suitable surface.

Request the aid of a colleague for this procedure.


Remove the marked part.

IMG-381867 © Volvo Car Corporation

Towbar, hitch- 31414773 - V1.3



Volvo Car Corporation Gothenburg, Sweden

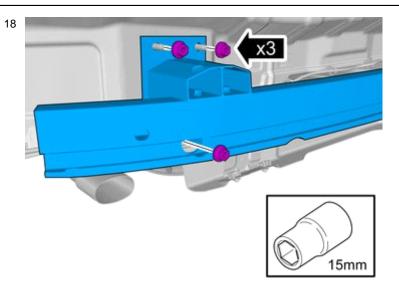


Remove the nuts.

The part is not to be reused.

Repeat on the other side.

IMG-381872

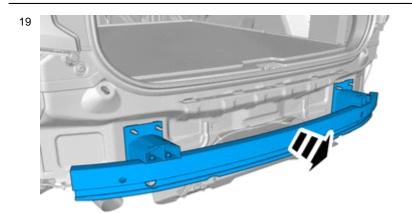

The part is not to be reused.


IMG-381912

Accessory installation



Volvo Car Corporation Gothenburg, Sweden


20

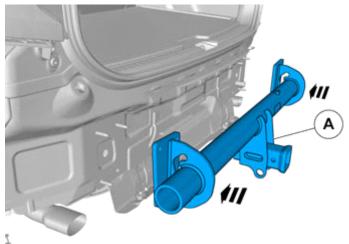

Install component that comes with the accessory kit.

IMG-382024

21

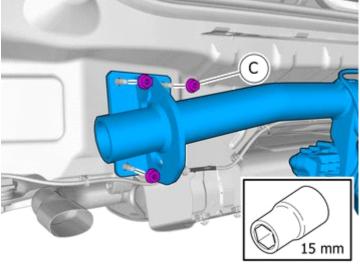


Install the nuts

Repeat on the other side.

IMG-381874

22

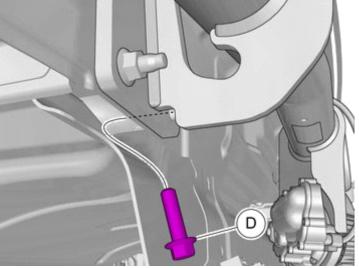

Install the screw.

Repeat on the other side.

IMG-386120



23

IMG-386113


Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

13 mm

Install the nut.


Repeat on the other side.

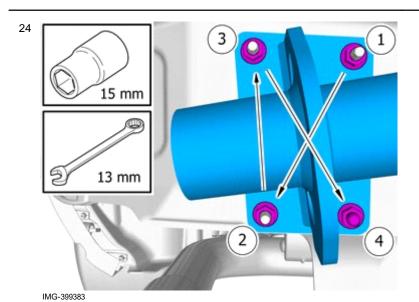

Tightening torque: Tow hitch member mounting to body frame

Stage 1: 50 Nm Stage 2: 30 Degree

Repeat on the other side.

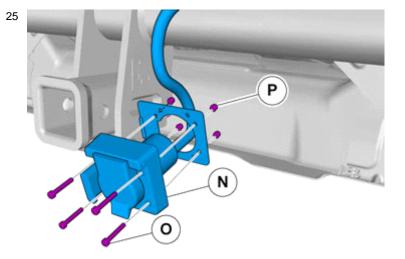

Install component that comes with the accessory kit.


Install the screws.

Install the nuts

IMG-382038 © Volvo Car Corporation




Volvo Car Corporation Gothenburg, Sweden

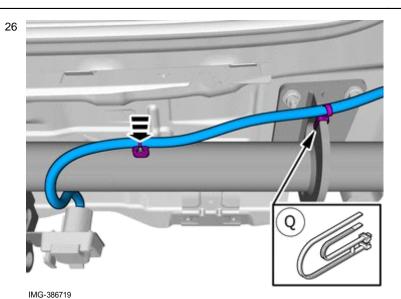

Fasten the wiring harness using the existing clips.

Install component that comes with the accessory kit.

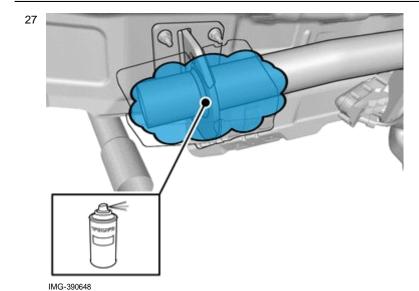

Note!

Make sure that the entire marked area is treated as indicated in graphic.


Use: 30749880, Grease

On both sides.



Volvo Car Corporation Gothenburg, Sweden

28

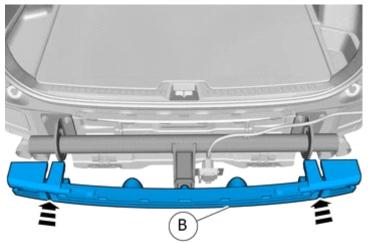

Install component that comes with the accessory kit.

IMG-404149

Removal

29



Remove the marked part.




Volvo Car Corporation Gothenburg, Sweden

30

Remove the marked part.

IMG-394727


31

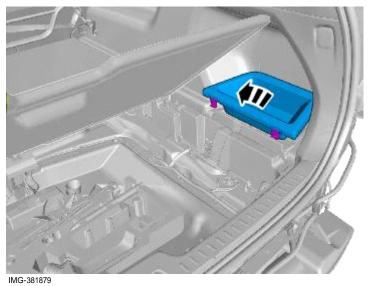

Remove the marked part.

32

Fold the insulation to one side.

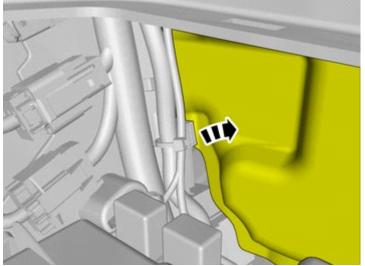


IMG-385592



Volvo Car Corporation Gothenburg, Sweden


33

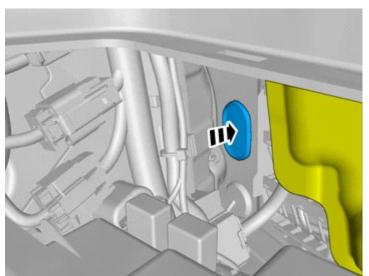

Locate the rubber grommet under the insulation and press it out.

IMG-385593

34

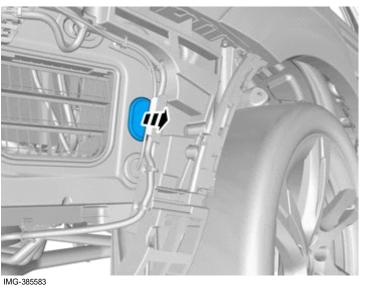

The part is not to be reused.

Accessory installation



Volvo Car Corporation Gothenburg, Sweden

35

Note!

Note the position.


Position/route the cable harness as illustrated.

Route the wiring harness into the passenger compartment.

36

IMG-404145

IMG-358177

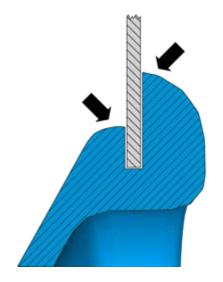

Caution!

Make sure that the rubber grommet seals properly to the body.

Alternative 1


© Volvo Car Corporation Towbar, hitch- 31414773 - V1.3

Page 18 / 38



Volvo Car Corporation Gothenburg, Sweden


37

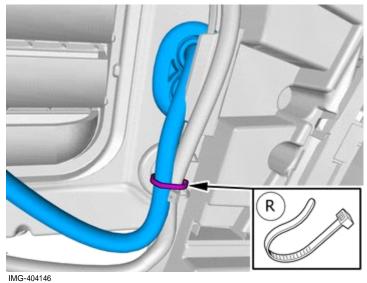

Position/route the cable harness as illustrated.

Install the wiring harness.

Alternative 2

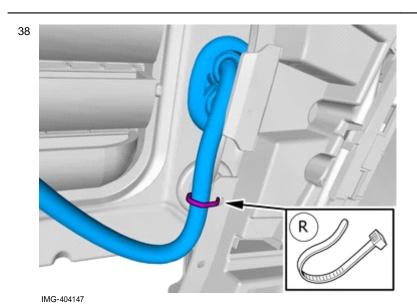

Position/route the cable harness as illustrated.

Install the wiring harness.

All vehicles




39

IMG-404148


Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

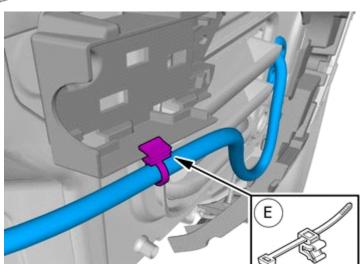

Position/route the cable harness as illustrated.

Install the wiring harness.

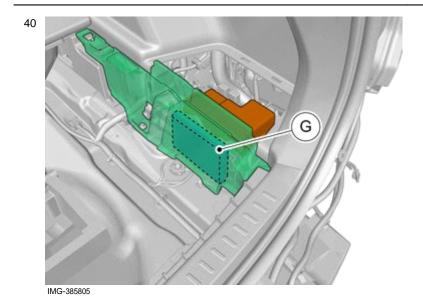

Note!

Orientation view


Removal



41

Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

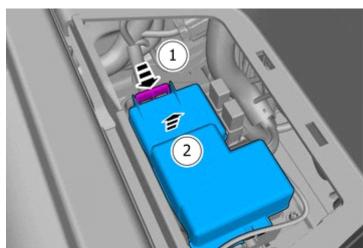

Release the catch.

Remove the marked part.



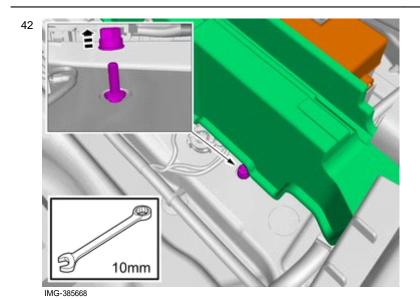

Remove the nut.


Accessory installation



Volvo Car Corporation Gothenburg, Sweden

Route the cable harness to the existing cable harness.

Install the cable.

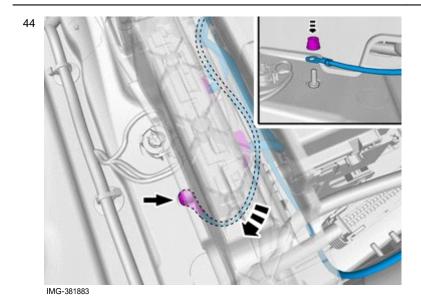


Ground connection

Connect the cable.

Install the nut.

Tightening torque: M6, 10 Nm

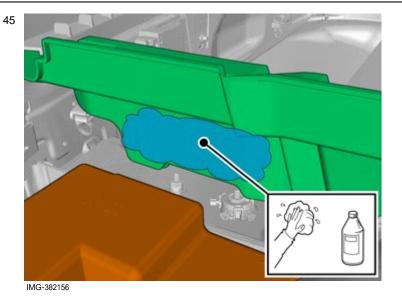

Clean the surface.


Use: 1161721, Isopropanol

Wipe dry.



Volvo Car Corporation Gothenburg, Sweden

46

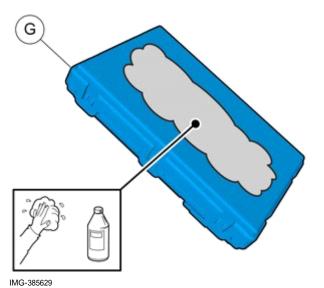


Clean the surface.


Use: 1161721, Isopropanol

Wipe dry.

47

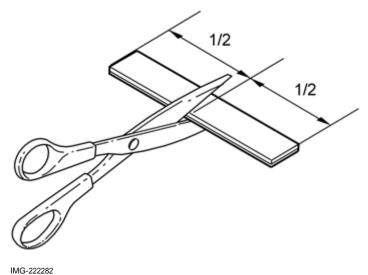


48

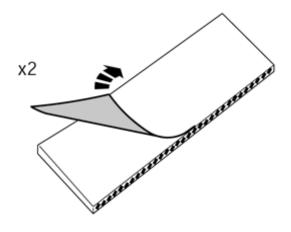




Volvo Car Corporation Gothenburg, Sweden

49

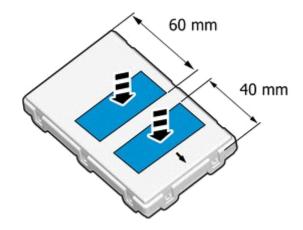

IMG-392341

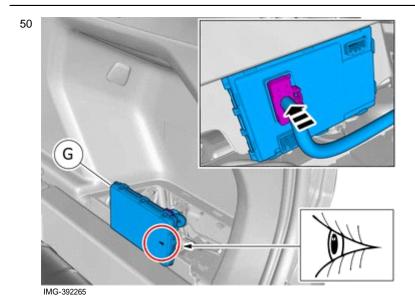

Note

Note the position.

Connect the prerouted cables.




Volvo Car Corporation Gothenburg, Sweden

51


Locate the pre-routed connectors.



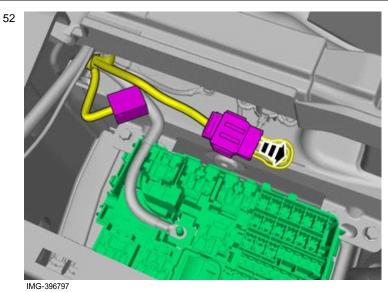

Disconnect the connector.

The part is not to be reused.

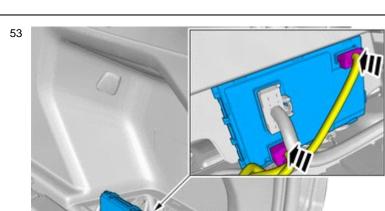


Connect the connectors.

IMG-392270



Volvo Car Corporation Gothenburg, Sweden

54

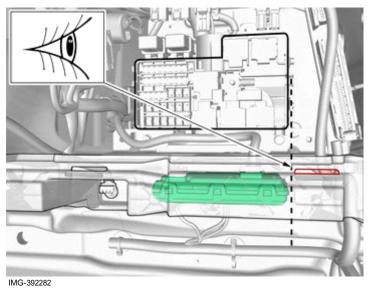

Note!


Orientation view

Note!

Note the position.

55


55

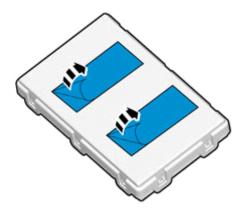

Remove the protective film.

IMG-356352

56

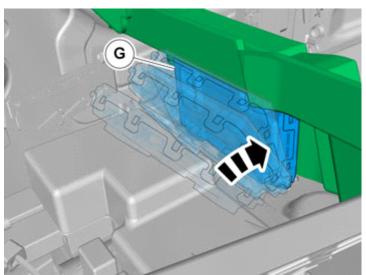

Install component that comes with the accessory kit.


IMG-381889

© Volvo Car Corporation

Towbar, hitch- 31414773 - V1.3



Volvo Car Corporation Gothenburg, Sweden

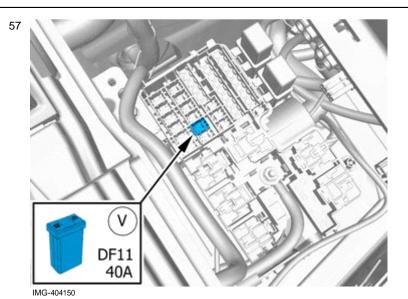


Note!

Note the position.

Install component that comes with the accessory kit.

Alternative 1

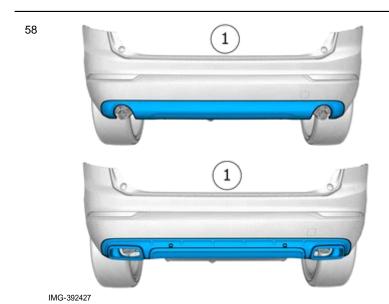

Note!

Orientation view


Alternative 2



Volvo Car Corporation Gothenburg, Sweden

59

Note! Orientation view

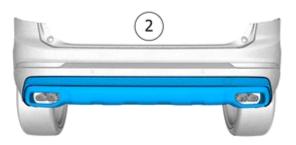

IMG-387079

60

Removal

Alternative 1

Locate relevant marking.


IMG-387018



61


Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

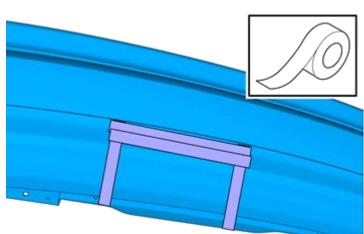

Apply tape to the other side, opposite the marking lines.

IMG-387032

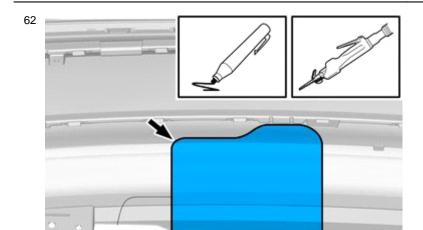


Scribe/mark up

Remove the marked part.

Use: Air-powered keyhole saw

IMG-387035

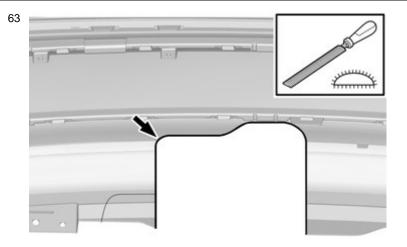

Deburr edges

Remove the tape.

IMG-387036



Volvo Car Corporation Gothenburg, Sweden


Alternative 2

64

Release the catches.

Use: Interior trim remover

Remove the panel.

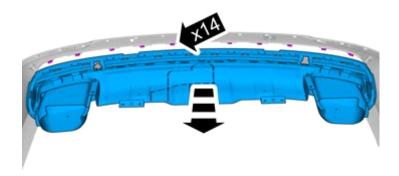


IMG-386794

65

Release the catches.

Use: Interior trim remover

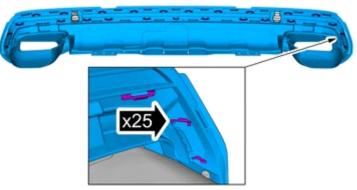

IMG-386814

© Volvo Car Corporation Towbar, hitch- 31414773 - V1.3

Page 30 / 38




Volvo Car Corporation Gothenburg, Sweden

66

Remove the panel.


The part is to be reused.

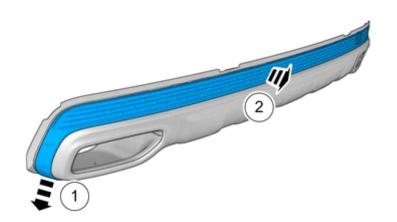

IMG-386819

Accessory installation

67

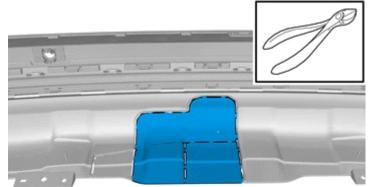

Cut following the dotted lines.

IMG-400605

© Volvo Car Corporation Towbar, hitch- 31414773 - V1.3


Page 31 / 38



Volvo Car Corporation Gothenburg, Sweden




Install component that comes with the accessory kit.

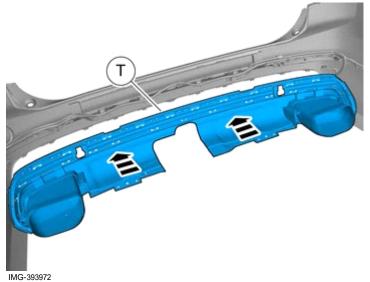

69

Reinstall the removed part.

Repeat on the other side.

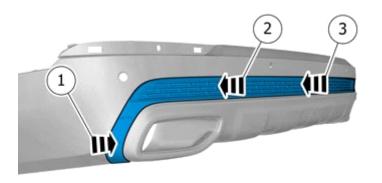


IMG-401050

All vehicles



Volvo Car Corporation Gothenburg, Sweden

70

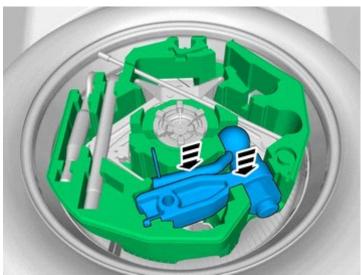


Place the component where indicated in the graphic.

IMG-396067

Installation

71

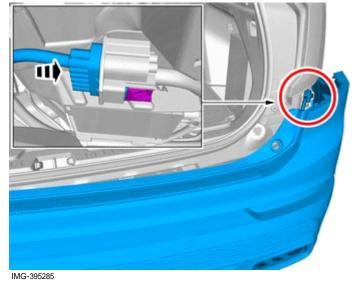

Request the aid of a colleague for this procedure.

Connect the connector.



Volvo Car Corporation Gothenburg, Sweden






Reinstall the bumper.

Request the aid of a colleague for this procedure.

IMG-395286

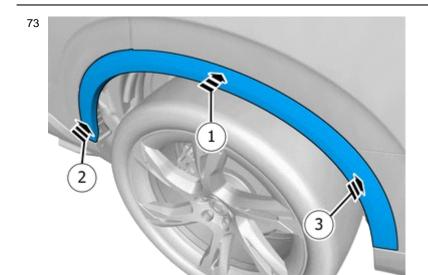

Note!

Make sure to follow the sequence indicated.

Reinstall the removed part.

Ensure that all clips engage.

Repeat on the other side.

74

IMG-402997


Reinstall the removed parts in reverse order.

IMG-377070



Volvo Car Corporation Gothenburg, Sweden

75

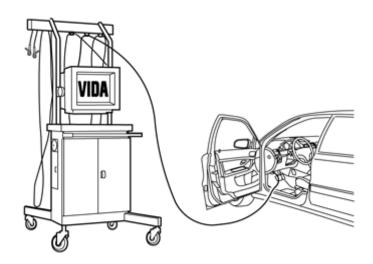


Download software (application) for the accessory's function according to the service information in VIDA. See VIDA or the accessories catalogue for software part number.

Order and download software according to: 31346719

IMG-242268

Check

76

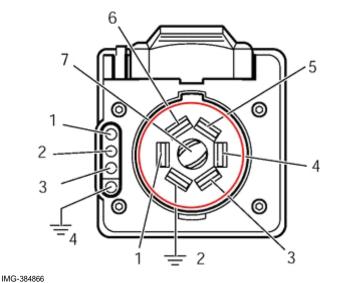

Warning!

Check for correct operation after the installation.

Note!

To activate the trailer module (TRM) at least two light sources (lamps) must be connected. This can be done by connecting test equipment for the trailer connector, or a trailer.

Note

The trailer module (TRM) must be programmed with correct software to function correctly.

7-pin connection

- Brake lamp/Left indicator
- Ground connection
- 3. Spare slot (brake lamp, electrical trailer brake)
- 4. Stop lamp/ Right turn signal lamp
- 5. Charging
- 6. Position lamp
- 7. Spare (back-up light)


The wire for pin 3 for7-pin connection is blue (BL)



Volvo Car Corporation Gothenburg, Sweden

The cable is secured at the wiring approximately 1 metre from the trailer connector.

77

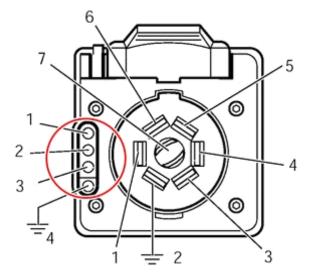


4-pin connection

- 1. Stop lamp/ Right turn signal lamp
- 2. Brake lamp/Left indicator
- 3. Position lamp
- 4. Ground connection

IMG-384862

Accessory installation

78

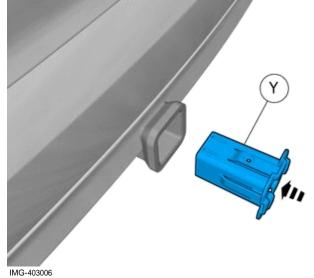


Install component that comes with the accessory kit.



Volvo Car Corporation Gothenburg, Sweden


79

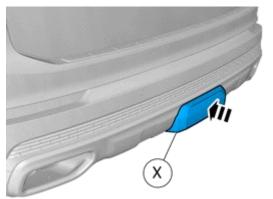

Install component that comes with the accessory kit.

IMG-401080

80

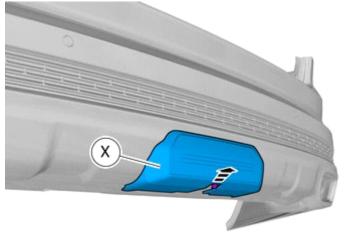


Remove the part carefully

IMG-403008

IMG-403009

81

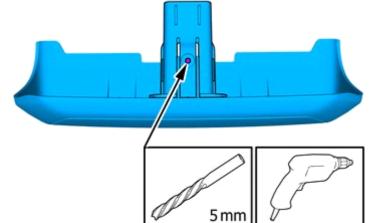

Use a drill with the stated size

© Volvo Car Corporation Towbar, hitch- 31414773 - V1.3


Page 37 / 38



Volvo Car Corporation Gothenburg, Sweden


82

Install component that comes with the accessory kit.

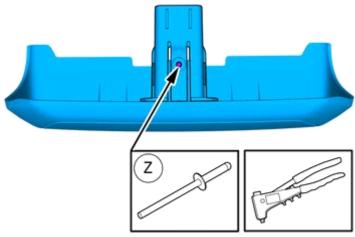

IMG-403011

83

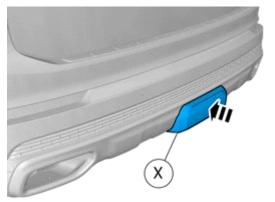

Install component that comes with the accessory kit.

IMG-401080