


Volvo Car Corporation Gothenburg, Sweden

**Instruction No** 30758077

Version 1.0

Part. No. 30756499


# Mesh pocket, cargo compartment, side panel

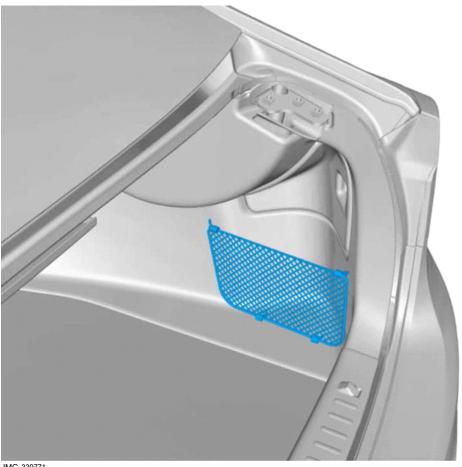

IMG-339771



Volvo Car Corporation Gothenburg, Sweden

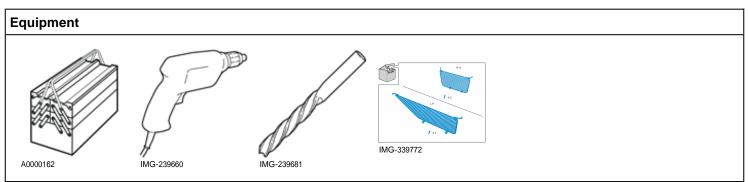



Volvo Car Corporation Gothenburg, Sweden

#### INTRODUCTION


Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.

Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

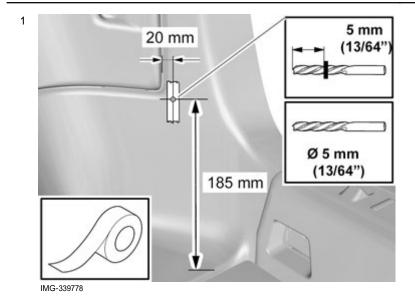

#### Mesh pocket right side

Apply the strips of tape as illustrated.


Make marks for drilling holes for the mesh pocket mountings.

Drill out the hole.




Volvo Car Corporation Gothenburg, Sweden

2

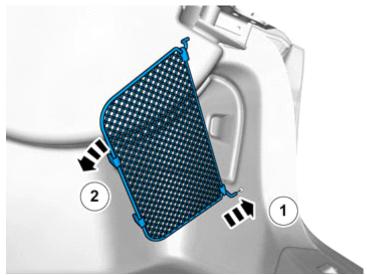


Insert the pocket's rear mounting in the hole in the panel and fold down.

IMG-339785

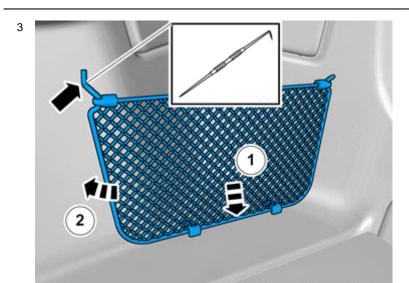

Insert the mesh pocket's front mounting towards the panel and lower end towards the floor.

IMG-339776

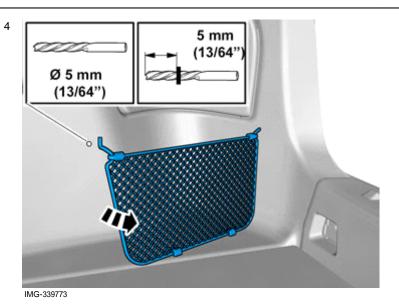


Move the front mounting to one side and drill the hole.

© Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden


5

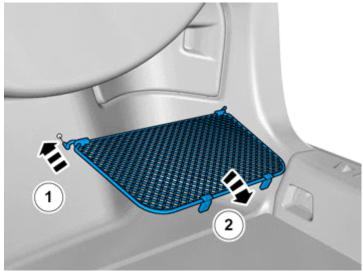

Insert the front mounting in the panel and fold down the mesh pocket.

IMG-339774


6

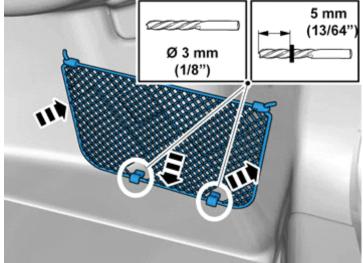

Drill out the holes in the panel through the two clips.

IMG-339775

7

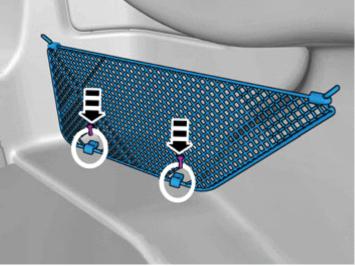

Tighten the mesh pocket's lower end


IMG-339842

© Volvo Car Corporation

Mesh pocket, cargo compartment, side panel- 30758077 - V1.0



Volvo Car Corporation Gothenburg, Sweden

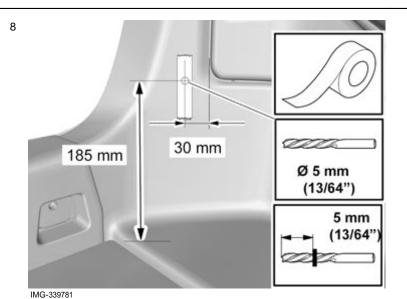


#### Mesh pocket left side

Apply the strips of tape as illustrated.

Make marks for drilling holes for the mesh pocket mountings.

Drill out the hole.

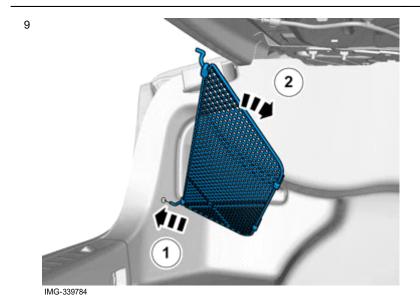


Insert the rear mounting in the panel and fold down the mesh pocket.



Volvo Car Corporation Gothenburg, Sweden

10

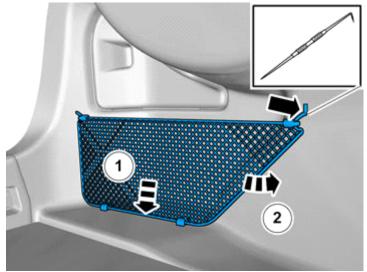


Insert the mesh pocket's front mounting towards the panel and lower end towards the floor.

Mark the hole in the panel level with the middle of the radius of the bent wire frame.

IMG-339783


11

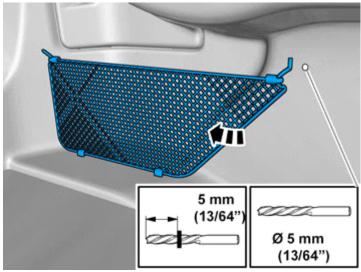

Move the front mounting to one side and drill the hole.

IMG-339779

12

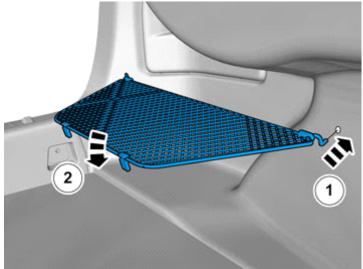


IMG-339782

Insert the front mounting in the panel and fold down the mesh pocket.



Volvo Car Corporation Gothenburg, Sweden

13

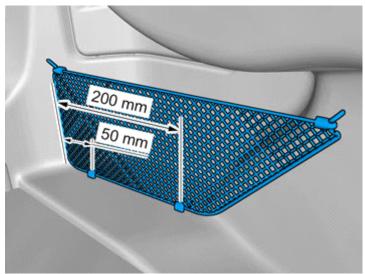


Applies to vehicles with control module for electric handbrake.


Measure and place the clips in the wire frame. Measure between the rear edge panel and centre.

IMG-339805



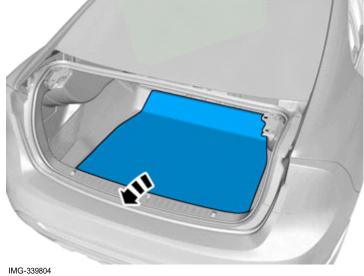

15

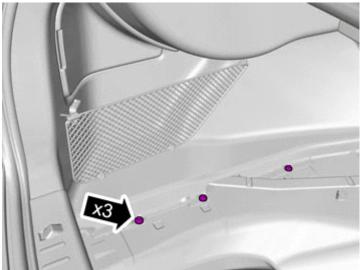


IMG-339802

© Volvo Car Corporation

Remove the clips.



Volvo Car Corporation Gothenburg, Sweden

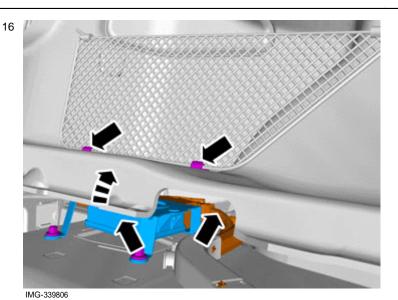


Lift up the panel and check that the clips are positioned so that the control module and cable harness are not drilled. Move the clips if necessary.

Reinstall the panel.






Volvo Car Corporation Gothenburg, Sweden

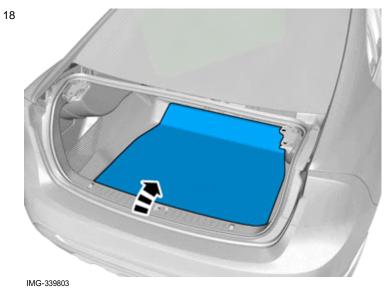

19

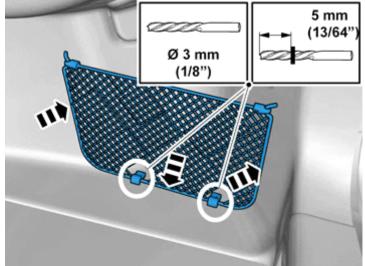


#### Applies to all models

Drill out the holes in the panel through the two clips.

IMG-339775

20

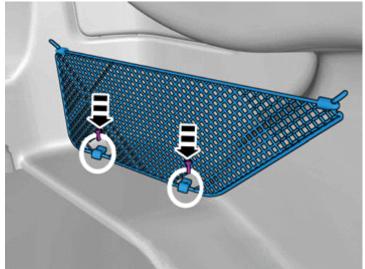

Tighten the mesh pocket's lower end.

IMG-339842



Volvo Car Corporation Gothenburg, Sweden