

Volvo Car Corporation Gothenburg, Sweden


**Instruction No** 31439249

Version 1.0

Part. No.

31439243


# Mudflaps, front

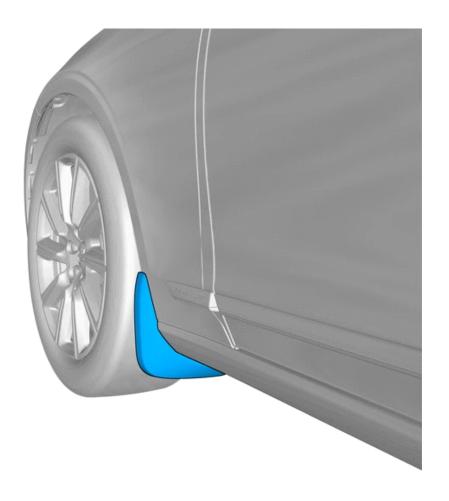


IMG-409662



Volvo Car Corporation Gothenburg, Sweden

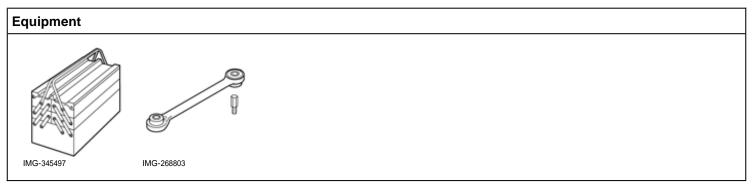

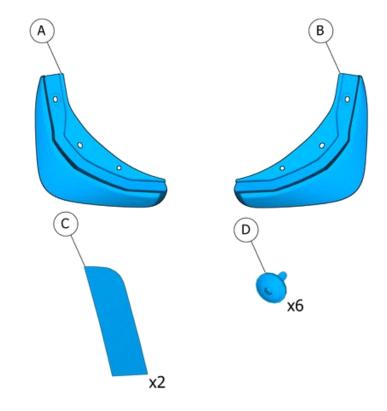

IMG-409666



Volvo Car Corporation Gothenburg, Sweden

#### Information

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.


Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

### Color symbols

2

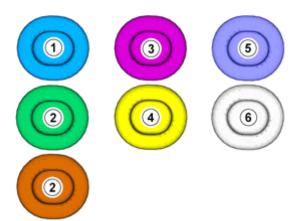

IMG-363036

### Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- Used when the component is not fully removed from the vehicle but only hung to the side.
- Used for standard tools and special tools.
- Used as background color for vehicle components.

### Preparation



Volvo Car Corporation Gothenburg, Sweden

3




Turn the wheel inwards.

IMG-409667

#### Removal

4

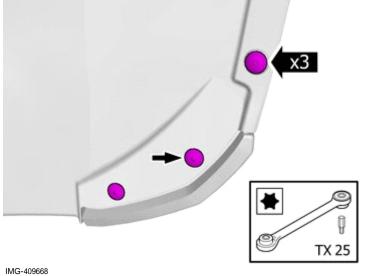

Remove the screws.

Preparation




5


IMG-409669

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

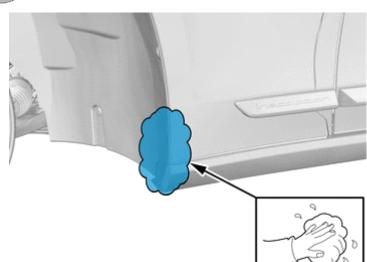

Clean the surfaces.

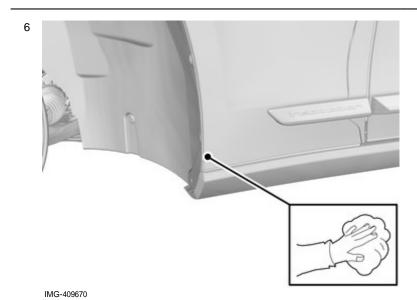

Wipe dry.


**Accessory installation** 




Volvo Car Corporation Gothenburg, Sweden

7


Remove the protective film.

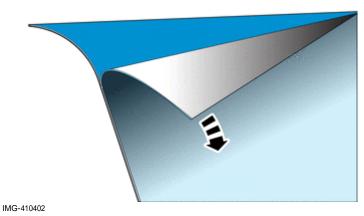

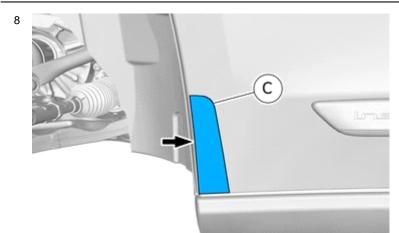

Place the component where indicated in the graphic.



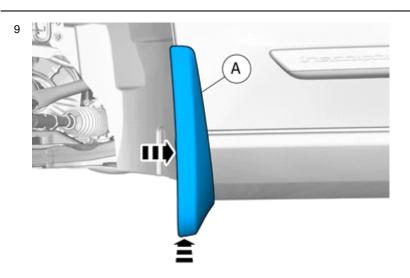

Place the component where indicated in the graphic.


IMG-409673

© Volvo Car Corporation Mudflaps, front- 31439249 - V1.0


Page 6 / 7



Volvo Car Corporation Gothenburg, Sweden

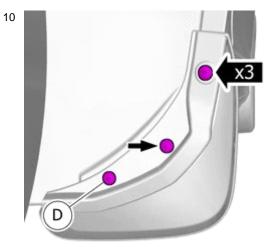

Install the screws.



IMG-409674

11

Repeat all method steps for the other side.