

Volvo Car Corporation Gothenburg, Sweden


Instruction No 31454839

Version 1.0

Part. No.

31439244

Mudflaps, rear

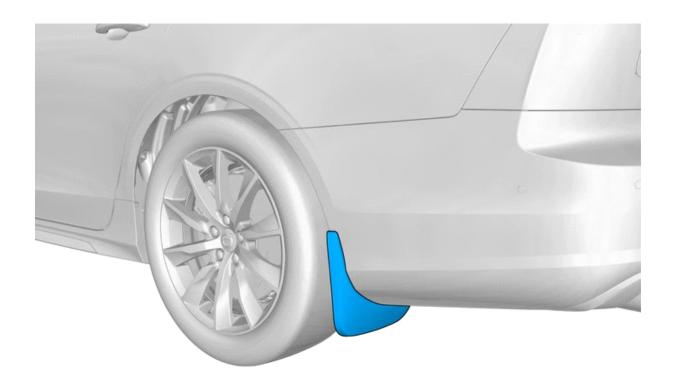



IMG-409585

© Volvo Car Corporation Mudflaps, rear- 31454839 - V1.0



Volvo Car Corporation Gothenburg, Sweden

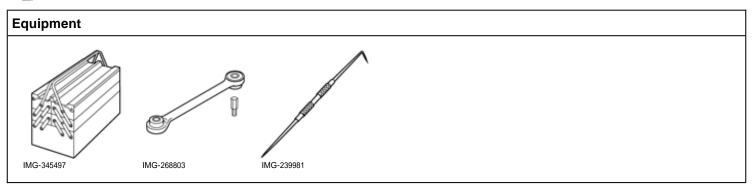

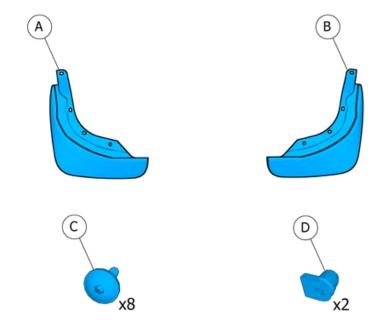

IMG-409510



Volvo Car Corporation Gothenburg, Sweden

Information

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.


Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

Color symbols

2

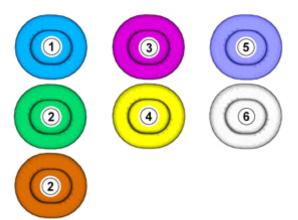

IMG-363036

Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- Used when the component is not fully removed from the vehicle but only hung to the side.
- Used for standard tools and special tools.
- Used as background color for vehicle components.

Removal


© Volvo Car Corporation Mudflaps, rear- 31454839 - V1.0



Volvo Car Corporation Gothenburg, Sweden

3

Remove the screws.

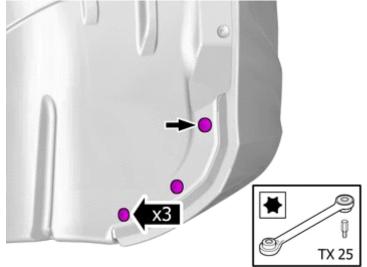

IMG-409505

4

Fold the wing liner to one side.




IMG-409575


Preparation



Volvo Car Corporation Gothenburg, Sweden

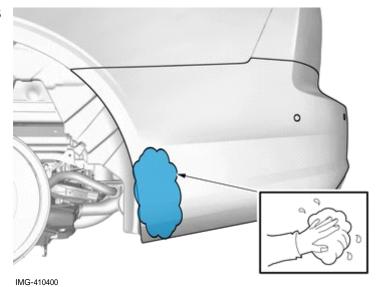

Wipe off

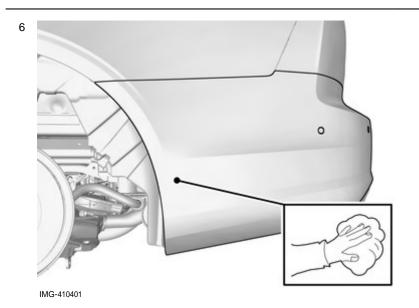

Wipe dry.


Accessory installation

© Volvo Car Corporation Mudflaps, rear- 31454839 - V1.0




Volvo Car Corporation Gothenburg, Sweden

7

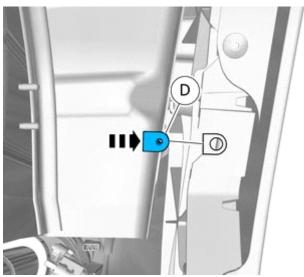


Place the component where indicated in the graphic.



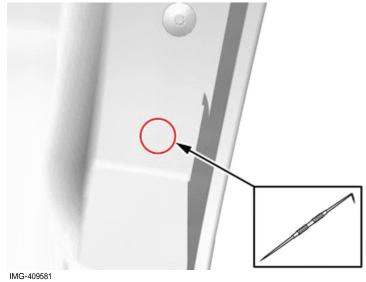

Locate the existing holes.

Make a hole, using the tool indicated.

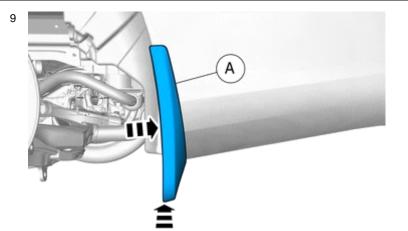


Place the component where indicated in the graphic.


IMG-409582



Volvo Car Corporation Gothenburg, Sweden

10

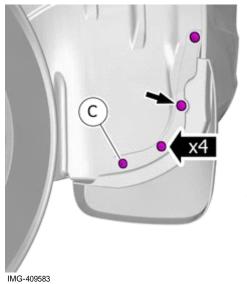



Install component that comes with the accessory kit.

Tighten the bolts.

Repeat all method steps for the other side.

11