

Volvo Car Corporation Gothenburg, Sweden

Instruction No 31454810 Version

Part. No.

1.3


31454540, 31454541


Polestar Performance Interior and Exterior



Volvo Car Corporation Gothenburg, Sweden


Materials	
Designation	Part number
Isopropanol	1161721
Masking tape	
Primer	1161727
Glue	8750060

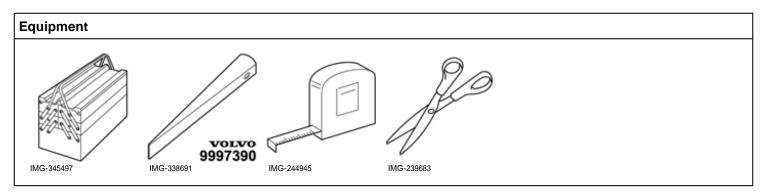

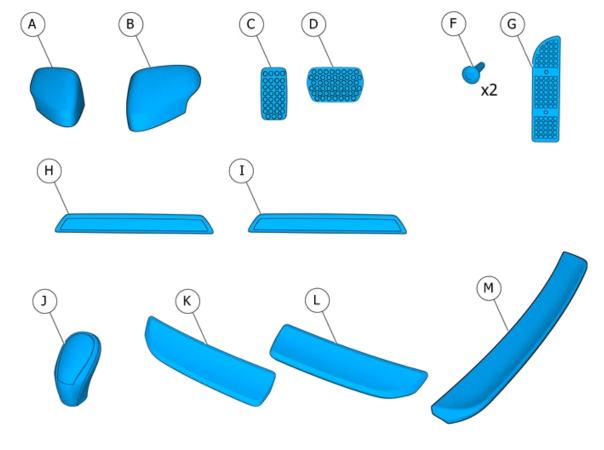



Volvo Car Corporation Gothenburg, Sweden

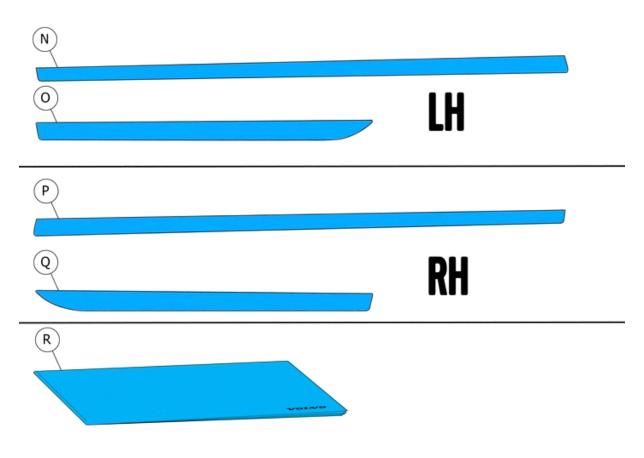



Volvo Car Corporation Gothenburg, Sweden

1

Read through all of the instructions before starting installation.

Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.


Ensure that all tools stated in the instructions are available before starting installation.

Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.

In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.

#### Color symbols

2

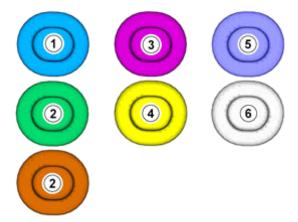

IMG-363036

#### Note!

This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- Used when the component is not fully removed from the vehicle but only hung to the side.
- Used for standard tools and special tools.
- Used as background color for vehicle components.

#### **Further information**



Volvo Car Corporation Gothenburg, Sweden

3




When installing, the car must retain a temperature of 20 degrees C

After installation, the car must not be washed for 48 hours

IMG-400007

#### Removal

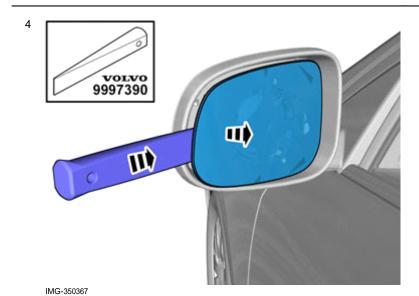

#### Caution!


Observe caution, the glass breaks easily.

Remove the glass from the mirror.




Volvo Car Corporation Gothenburg, Sweden


5

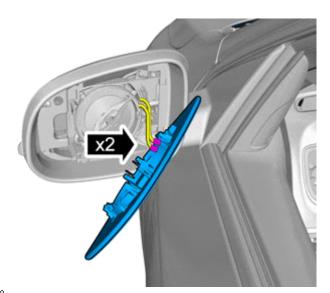

Disconnect the connectors.


IMG-350369

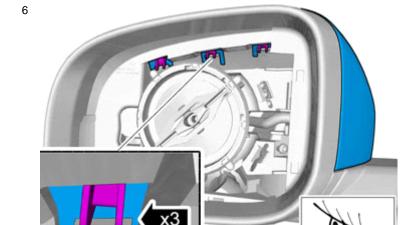

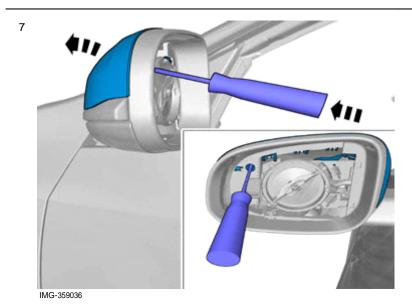




Volvo Car Corporation Gothenburg, Sweden

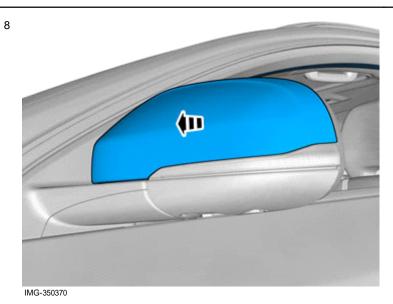

#### **Accessory installation**

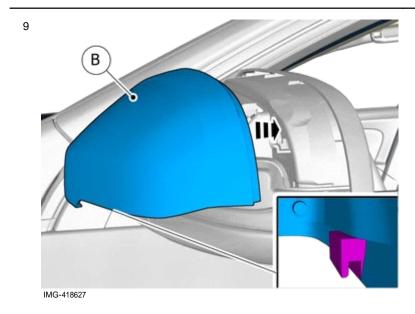




Volvo Car Corporation Gothenburg, Sweden

10



IMG-359046

11

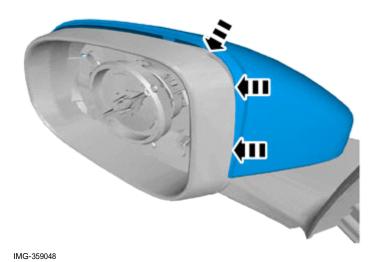

12






Volvo Car Corporation Gothenburg, Sweden

13

Reinstall the removed parts in reverse order.

Repeat all method steps for the other side.

#### Removal

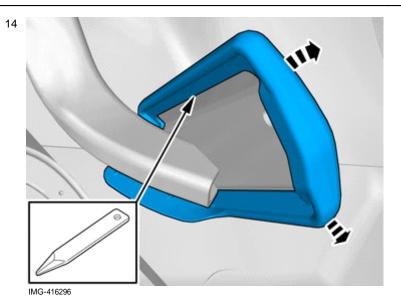


Remove the marked part.

Use: Interior trim remover

15

When removing on right-hand drive cars, perform the procedures on the opposite side and/or mirrored.

#### **Accessory installation**

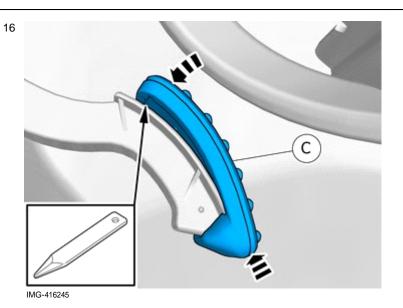

Install component that comes with the accessory kit.


Use: Interior trim remover

© Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden


17

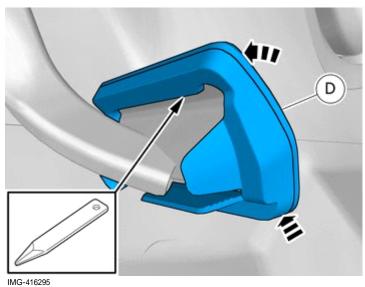

Install component that comes with the accessory kit.


Use: Interior trim remover

18

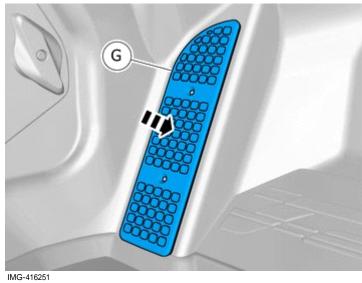

Place the component where indicated in the graphic.

19

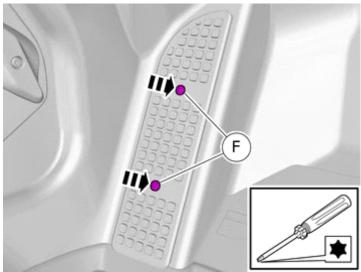

Install the screws.




Volvo Car Corporation Gothenburg, Sweden


20

When installing on right-hand drive cars, perform the procedures on the opposite side and/or mirrored.

#### Removal

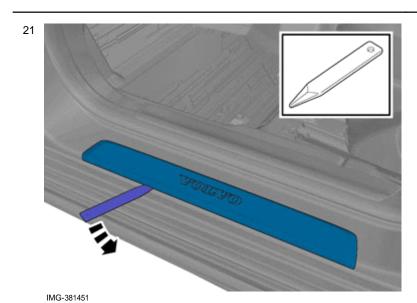

Use: Interior trim remover

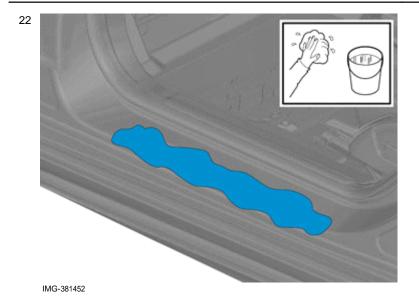

Clean the surface.

Wipe dry.

**Accessory installation** 




23


IMG-414841

# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

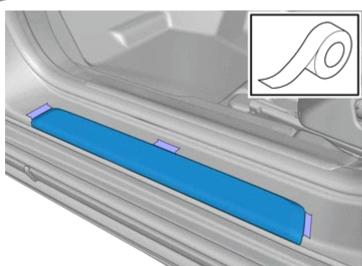

Use appropriate tape to mark the position.

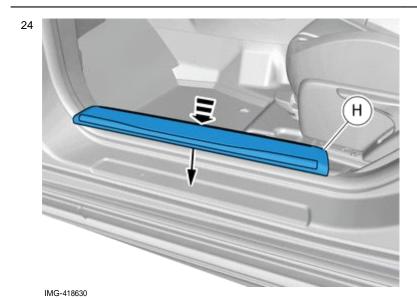

Install component that comes with the accessory kit.

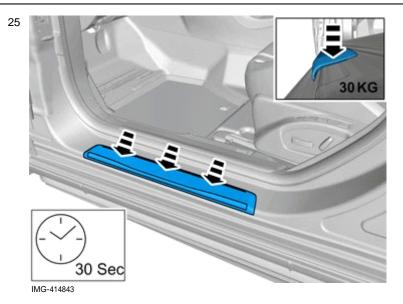

#### Note!

Press and apply pressure to the part over the tape for at least 20 seconds.



Volvo Car Corporation Gothenburg, Sweden

26

Repeat all method steps for the other side.


#### Removal

27



11110-340230

28

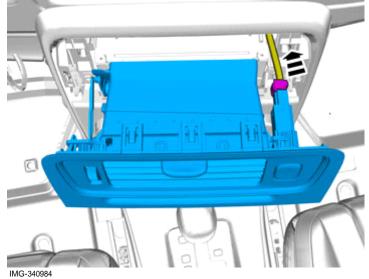


Disconnect the connector.




Volvo Car Corporation Gothenburg, Sweden

29

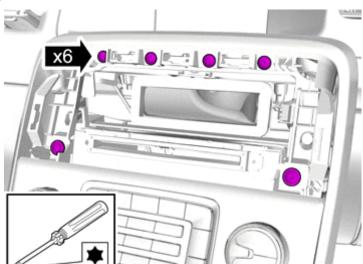


Remove the screws.



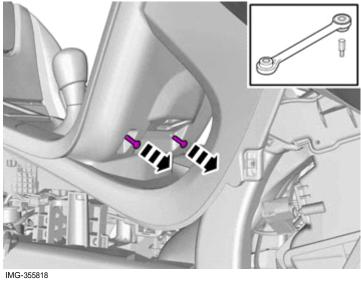

Remove the screws.




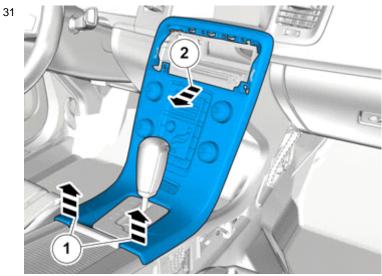




Volvo Car Corporation Gothenburg, Sweden

32

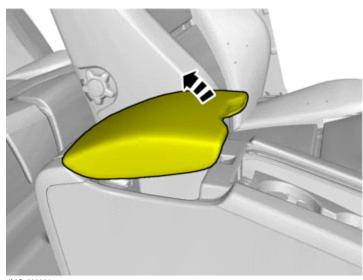


IMG-293021

33

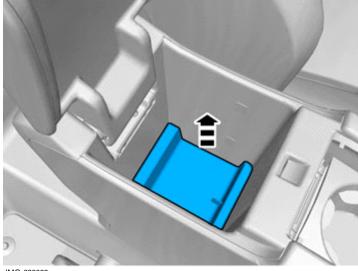

IMG-293022


34

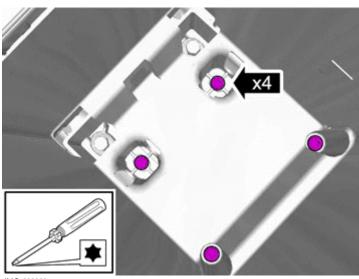


Remove the screws.



Volvo Car Corporation Gothenburg, Sweden

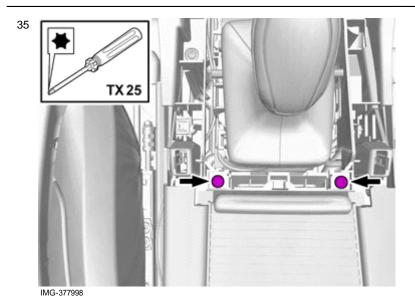


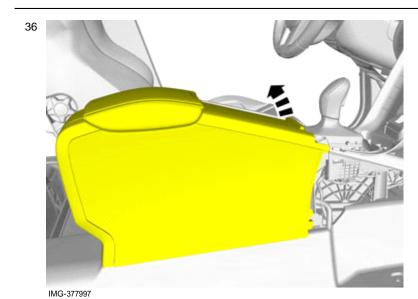




Volvo Car Corporation Gothenburg, Sweden

37

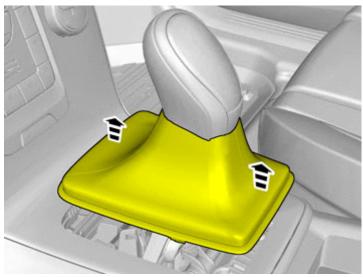

IMG-367797

38

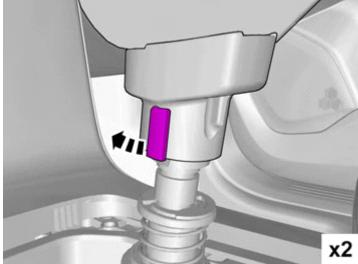


Release the catches.

Repeat on the other side.

Use: Electrician's screwdriver

IMG-367741


39

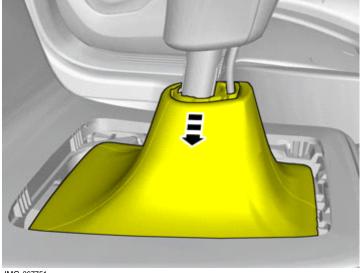

IMG-367751




Volvo Car Corporation Gothenburg, Sweden

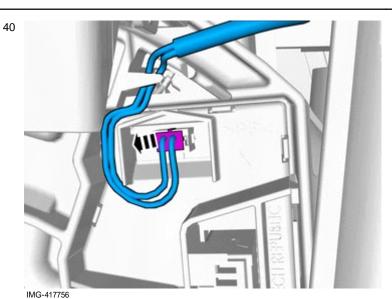

Disconnect the connector.

### **Accessory installation**

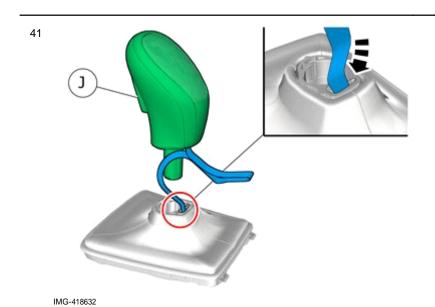

#### Caution!

Take extra care not to damage the wiring harnesses.

Install component that comes with the accessory kit.

Pull the wiring through.



Volvo Car Corporation Gothenburg, Sweden


42



Pull the wiring through.


IMG-367926

43

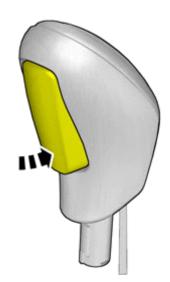

IMG-367983

44

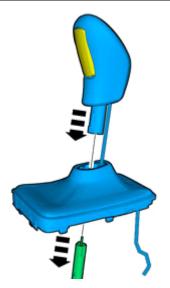

Caution!

Take extra care not to damage the wiring harnesses.




Volvo Car Corporation Gothenburg, Sweden

45

A click confirms that the component is in the correct position.




46

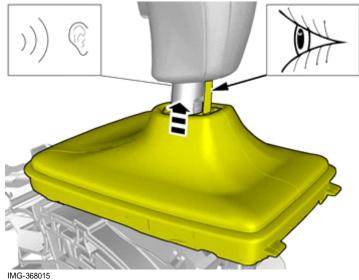

#### Caution!

Make sure that no part of the wiring harness is trapped.

47

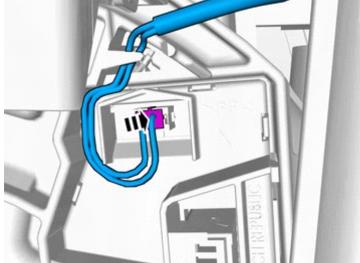

IMG-417758

Connect the connector.

© Volvo Car Corporation

Polestar Performance Interior and Exterior- 31454810 - V1.3




Volvo Car Corporation Gothenburg, Sweden

48

Reinstall the removed parts in reverse order.

#### Applies to unpainted component

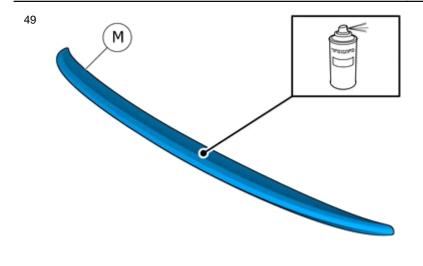


IMG-418633

#### Applies to model S60

#### Preparation

50

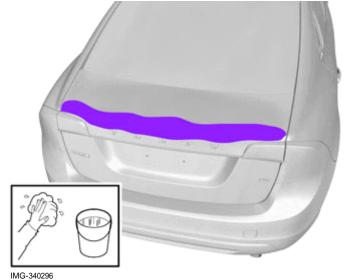

Clean the surface.


Wipe dry.



IMG-340486

# Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

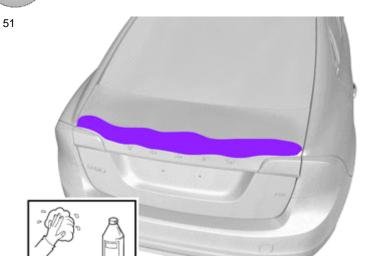

Wipe off

Use: 1161721, Isopropanol

#### **Accessory installation**

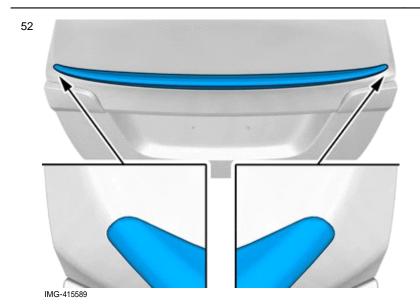

#### Note!

Make sure that the component is centred.


Install component that comes with the accessory kit.



53


# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

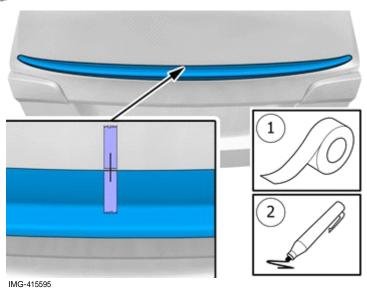


- Use appropriate tape to mark the position.
- Mark using a pen

Use: , Masking tape

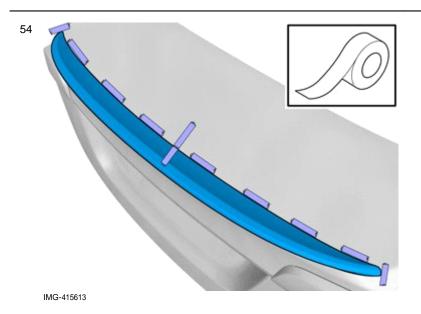

Use appropriate tape to mark the position.

Use: , Masking tape

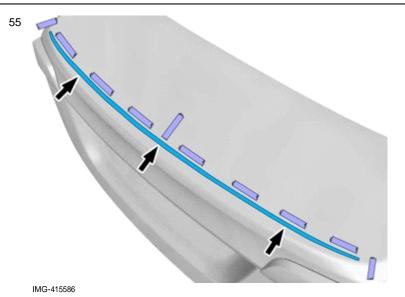

Apply the stated Material on the marked surface.

Apply a thin and even layer.

Use: 1161727, Primer

© Volvo Car Corporation


Polestar Performance Interior and Exterior- 31454810 - V1.3




Volvo Car Corporation Gothenburg, Sweden

56

Fold the protective film forward

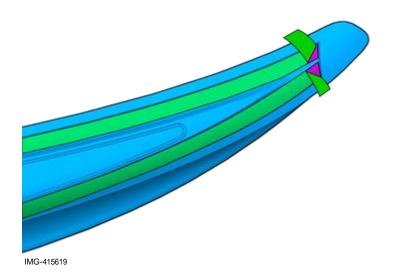




Caution!

Cut carefully to avoid unintentional damage or personal injury.

Cut the component following the instructions in the graphic.

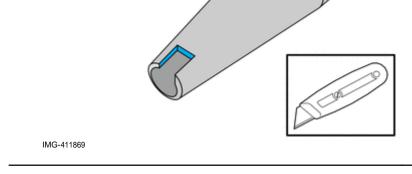

58 Ø 5mm

IMG-415567 © Volvo Car Corporation Apply the stated Material on the marked surface.


Use: 8750060, Glue

Polestar Performance Interior and Exterior- 31454810 - V1.3



Volvo Car Corporation Gothenburg, Sweden


59

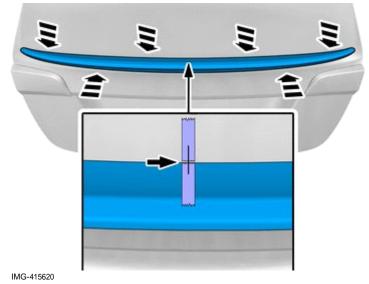

#### Note!

Note the position.

Install component that comes with the accessory kit.

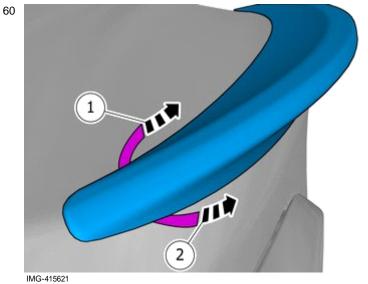

#### Caution!

Pull carefully.

#### Note!


Make sure to follow the sequence indicated.

Remove the protective film.



Volvo Car Corporation Gothenburg, Sweden

61

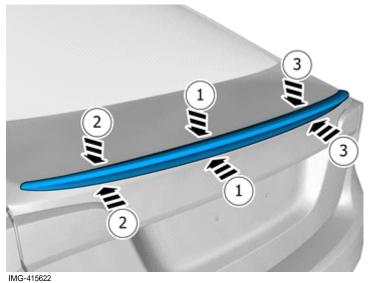

#### Note!


Press and apply pressure to the part over the tape for at least 20 seconds.

#### Note!

Ensure that the tape is fixed to the surface.

#### Applies to V60 models

#### Preparation

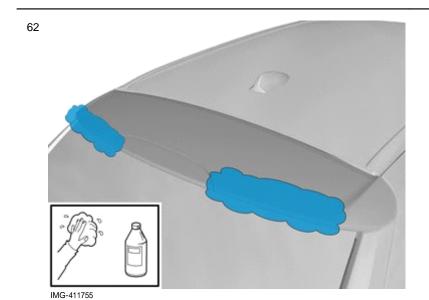


Clean the surfaces.

Use: 1161721, Isopropanol

#### **Accessory installation**




Volvo Car Corporation Gothenburg, Sweden

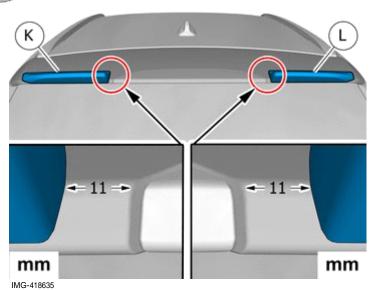


- Place the component where indicated in the graphic.
- Measure

Use: Tape measure

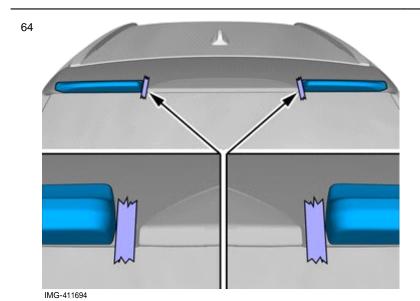

Use appropriate tape to mark the position.

Use: , Masking tape

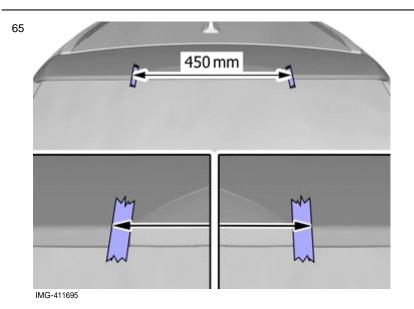

Measure

Use: Tape measure

© Volvo Car Corporation


Polestar Performance Interior and Exterior- 31454810 - V1.3



Volvo Car Corporation Gothenburg, Sweden




Fold the protective film forward

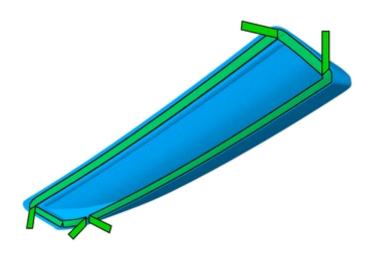


IMG-411756

67

Use: , Masking tape

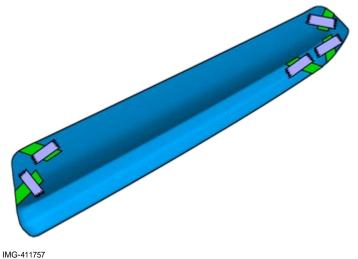

IMG-411/5

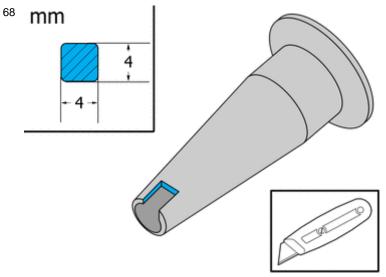

#### Caution!

Cut carefully to avoid unintentional damage or personal injury.

Cut the component following the instructions in the graphic.

IMG-411531
© Volvo Car Corporation

Polestar Performance Interior and Exterior- 31454810 - V1.3




Volvo Car Corporation Gothenburg, Sweden

69

Apply the stated Material on the marked surface.

Use: 8750060, Glue

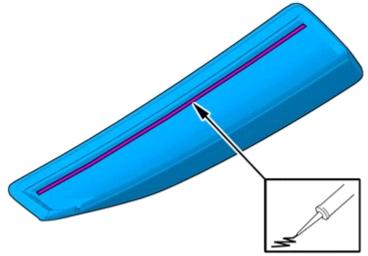

IMG-411707

70

#### Note

Make sure that the mating faces are clean and free of foreign material.


Install component that comes with the accessory kit.

Place the component where indicated in the graphic.



Volvo Car Corporation Gothenburg, Sweden


71

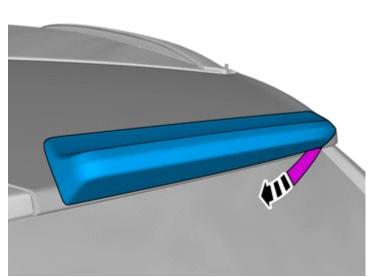

Remove the protective film.

IMG-411761

72

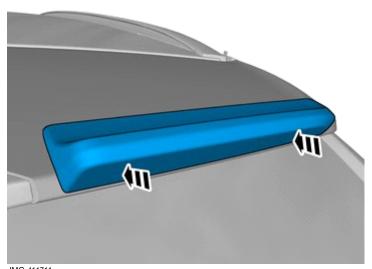


#### Note!

Press and apply pressure to the part over the tape for at least 20 seconds.

IMG-411711

73

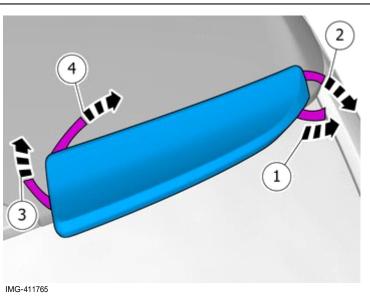


Remove the protective film.

© Volvo Car Corporation



Volvo Car Corporation Gothenburg, Sweden

74

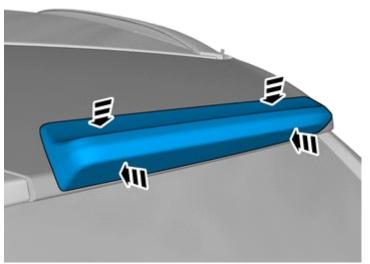

#### Note!

Press and apply pressure to the part over the tape for at least 20 seconds.


IMG-411710

75

Repeat the steps when installing accessories on opposite side.

#### Removal

76

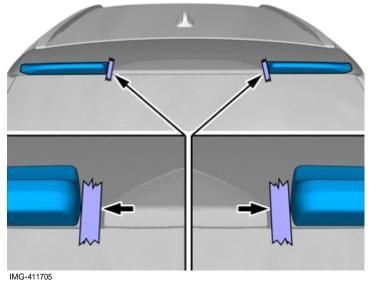

Remove the tape.

All vehicles

#### Preparation



77

# Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden




Clean the surfaces.

Wipe dry.




IMG-413685

IMG-413686

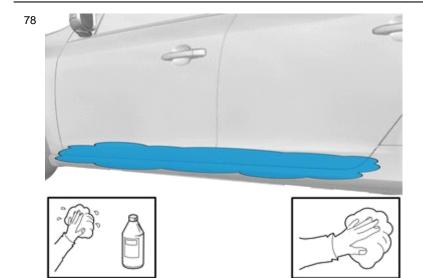

Wipe off

Use: 1161721, Isopropanol

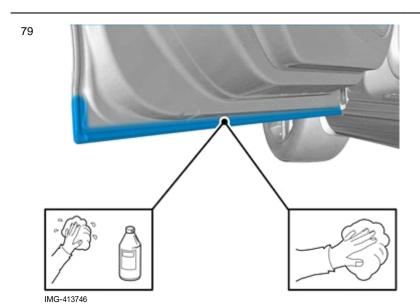


Wipe off

Use: 1161721, Isopropanol




Volvo Car Corporation Gothenburg, Sweden

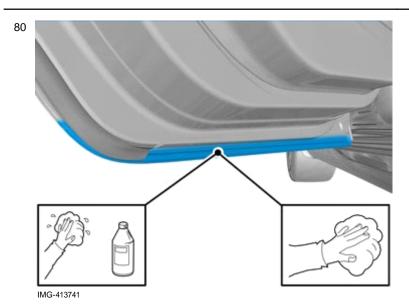

Wipe off

Use: 1161721, Isopropanol

#### **Accessory installation**

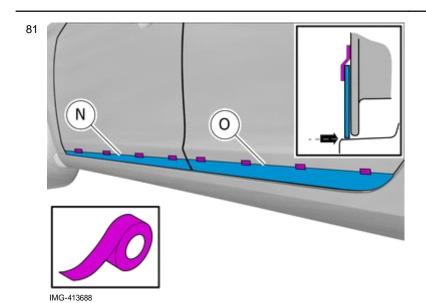

Install component that comes with the accessory kit.


Place the component where indicated in the graphic.

Use: , Masking tape



Volvo Car Corporation Gothenburg, Sweden

82

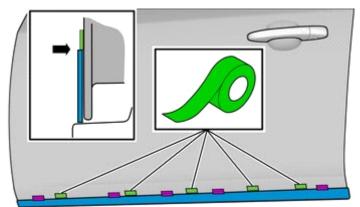


Use appropriate tape to mark the position.

Use: , Masking tape

IMG-413690

83

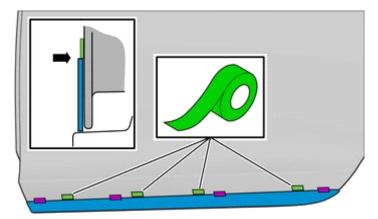


Use appropriate tape to mark the position.

Use: , Masking tape

IMG-413691



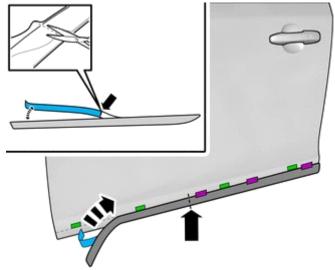


Remove the protective film.




Volvo Car Corporation Gothenburg, Sweden

85

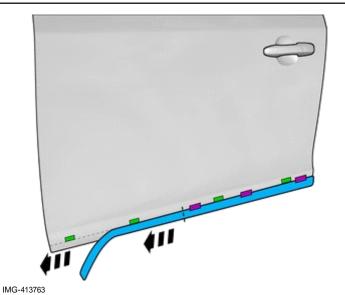

Use suitable tool to squeeze out any trapped air bubbles.


86

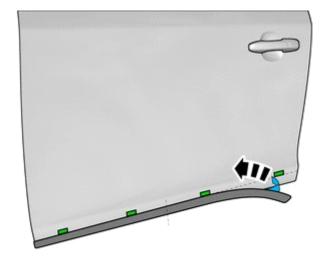

Remove the protective film.

IMG-413761

87

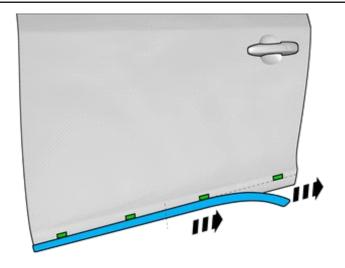


Use suitable tool to squeeze out any trapped air bubbles.

IMG-413762 © Volvo Car Corporation




Volvo Car Corporation Gothenburg, Sweden

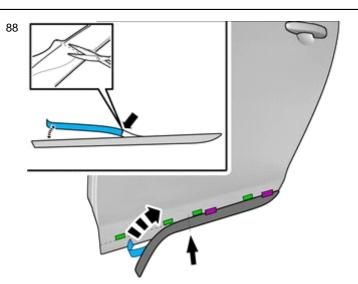

Remove the protective film.

IMG-413705

89

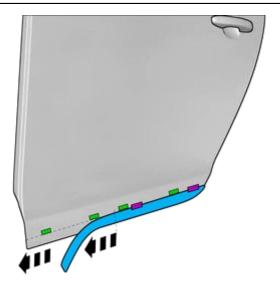

Use suitable tool to squeeze out any trapped air bubbles.



Volvo Car Corporation Gothenburg, Sweden


90



Remove the protective film.

IMG-413707


91

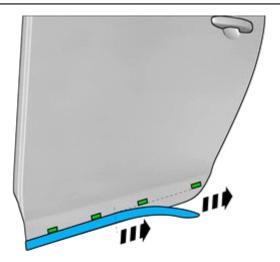

Use suitable tool to squeeze out any trapped air bubbles.

IMG-413708




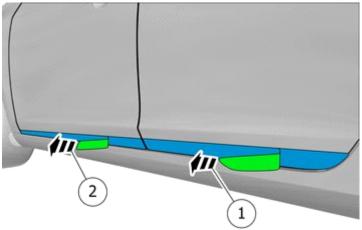

Remove the protective film.



Volvo Car Corporation Gothenburg, Sweden

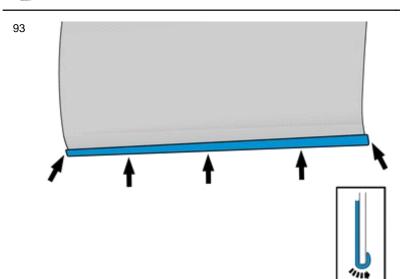


#### Note!

Fold the marked component properly around the edge.

#### Note!

Ensure that the tape is fixed to the surface.

IMG-413712

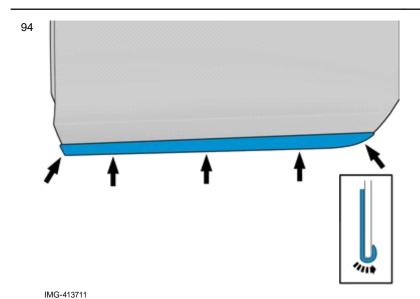

#### Note!

Fold the marked component properly around the edge.

#### Note!

Ensure that the tape is fixed to the surface.

....

95

Repeat the steps when installing accessories on opposite side.



Volvo Car Corporation Gothenburg, Sweden

aa

Place the manual for this accessory in a suitable location in the car.

