

Genuine Accessories



Vehicle Model Multiple
Model Year 2017-
Part No. B1F73 AU000
Language English
Rev. Date 8/10/2016

Accessory: Premium First Aid Kit
Difficulty: (A)

Note: Difficulty stated above reflects the minimum level of expertise required to install the accessory:
 (A) Customer
 (B) Dealer Technician
 (C) Master Technician or Specialist

Instructional Symbols / Definitions

 Denotes warnings that may lead to serious physical injury or vehicle damage	 Denotes quality processes to be checked prior to moving to the next step	Denotes personal protective equipment (PPEs) that may be required for a step. Examples of safety equipment icons noted below:	
 Denotes cautions to be taken to avoid physical injury or electronic component damage	 Denotes specific tools that are necessary to complete a step	 Glasses	 Gloves
 Denotes cautions to be taken to avoid vehicle and component damage	<div style="border: 1px solid black; padding: 2px; text-align: center;"> N O T E </div> Denotes important information to be reviewed during the step	 Mask	 Hearing Protection

Basic Required Tools

None

Part Weight (Gross)

1.52	lbs
0.69	kg

FMVSS 110 Compliance Information

All dealers must determine if the weight they have added in the form of all options or accessories, when added to the weight of all Port/Dealer Installed options or accessories, exceeds the lesser of 1.5% of GVWR or 100 lbs. If the additional weight does exceed the lesser of the indicated thresholds, a "Load Carrying Capacity Reduced" label must be installed. A black, fine-point, indelible marker must be used to write by hand onto the label, the reduced carrying capacity in kilograms or pounds, which is the total weight of all added options and accessories.
Load Label Part Number: NP070 - 09003

Notes to the installer:

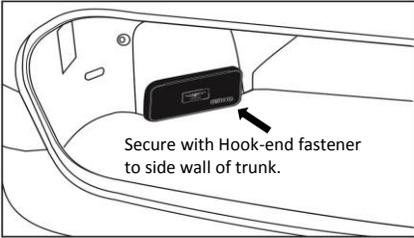
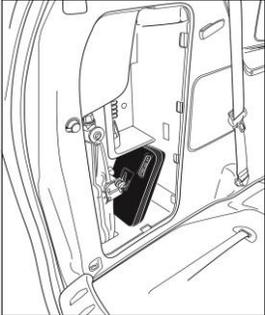
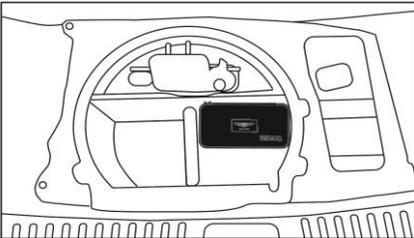
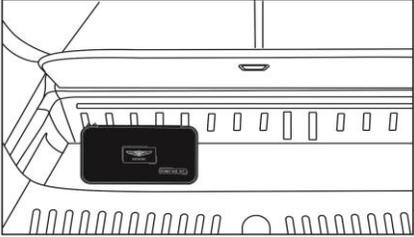
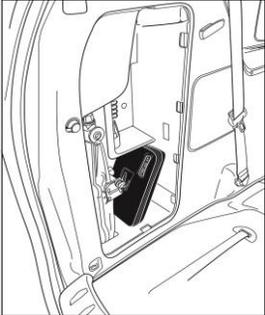
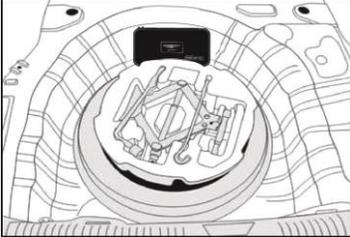
- 1 Read the entire Installation Instructions prior to beginning the installation of the part.
- 2 Make sure the vehicle is completely clean and dry in the area(s) the part is to be installed.
- 3 Ensure the vehicle is properly protected in the area(s) that the accessory is to be installed.
- 4 NEVER place tools on painted surfaces, seating surfaces, dash pad, console or floor carpet/mats.
- 5 Always wear appropriate personal protective equipment, including gloves, safety glasses, etc., when required.

Genuine Accessories

Kit Overview



No.	Qty	Description
1	1	First Aid Kit

1		
<div style="display: flex; justify-content: space-between;"> <div style="width: 30%;">  <p>Secure with Hook-end fastener to side wall of trunk.</p> </div> <div style="width: 30%; text-align: center;">  </div> <div style="width: 30%;">  </div> </div> <div style="display: flex; justify-content: space-between; margin-top: 10px;"> <div style="width: 30%;">  </div> <div style="width: 30%; text-align: center;">  </div> <div style="width: 30%;">  </div> </div>		
N O T E	<ol style="list-style-type: none"> 1. Confirm the part and inspect for damage. 2. Place the First Aid Kit in a secured location of the vehicle; including the Sub-floor Storage, Spare Tire Well, Tire Mobility Kit Tray, Side Wall Cargo Storage Area, or Side Wall of Trunk. 3. Ensure all Compartments, Liners and Covers can close without interference from the First Aid Kit. 4. For Side Wall installation, place the First Aid Kit on the Side Wall of Trunk, so that the Genesis Logo is visible and in a readable orientation. 5. Press and rotate the First Aid Kit firmly to adhere the Hook-End Fastener to the Side Wall. 6. Ensure the First Aid Kit is securely attached to the Trunk Wall. 	
	<p>CAUTION Install First Aid Kit per instructions to avoid sliding and shifting. In a sudden stop or collision, unsecured cargo could cause personal injury.</p>	

Genuine Accessories

Visual Check

Item to be Checked		Result	
	Use care when handling and placing the First Aid Kit to avoid dirt.	No dirt or fingerprints on the First Aid Kit.	
	Confirm proper placement of the First Aid Kit.	The First Aid Kit should be in a secured position with the Genesis logo in a readable orientation.	
	Confirm all storage areas are closed and secure.	Storage areas are closed and secure.	

Genuine Accessories

Care & Cleaning

Put this page in the customer's glovebox, for future reference.

Cleaning Instructions for:

Multiple

Premium First Aid Kit

Spot clean with a damp cloth as needed (do not use chemical based cleaners).