



INSTALLATION INSTRUCTIONS

Accessory

SELECT KNOB
P/N 08U92-TX4-200

Application

2014 RDX

Publications No.


BII 48868

Issue Date

MARCH 2013

PARTS LIST

Select knob



2 Screws



TOOLS AND SUPPLIES REQUIRED


Phillips screwdriver

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

Plastic Trim Tool (T/N SILTRIMTL10)

Torque screwdriver (T/N CDI401SM)

Illustration of the Select Knob in the Vehicle

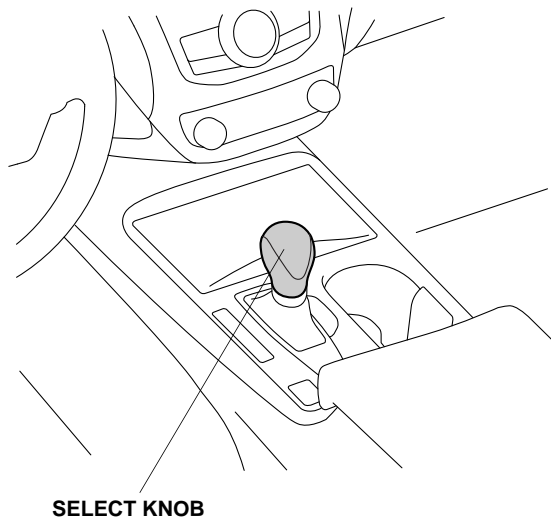

INSTALLATION


Client Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:


- Be careful not to damage the paint finish.
- Before removing any parts, note their location and how they are installed so they can be reinstalled in the original positions.

Installing the Select Knob


1. Remove the cover. Insert the key into the opening, push on the key, and move the select knob to the S position.

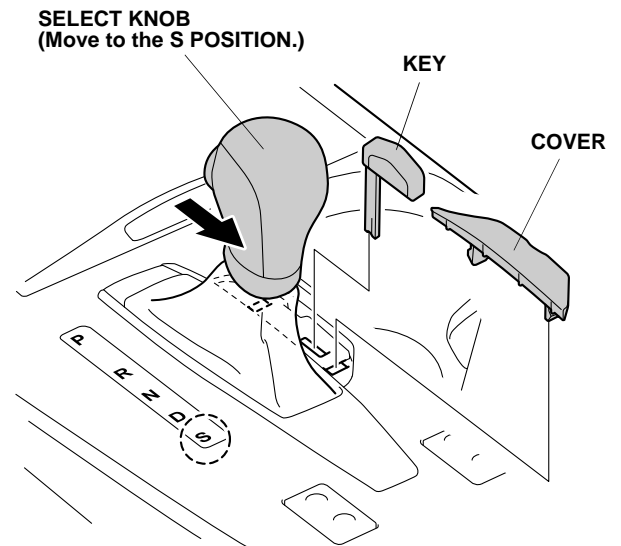


2. Lower the shift boot by pushing on the two tabs in the positions shown.

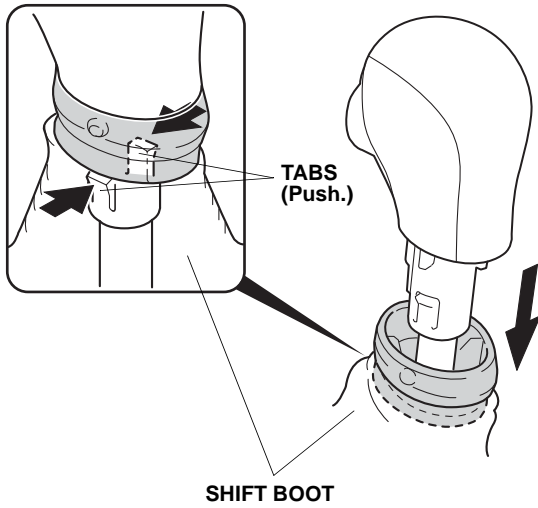


3. Pry on the bottom of the select knob cover and remove the cover.

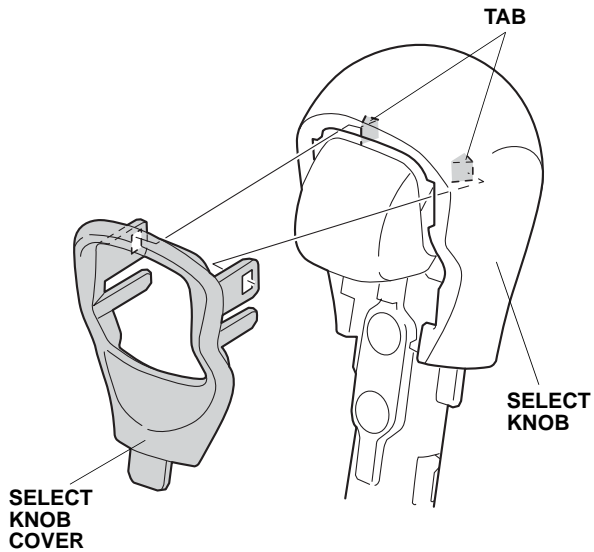


4. Remove the two screws from the select knob. Remove the select knob by pulling it up.

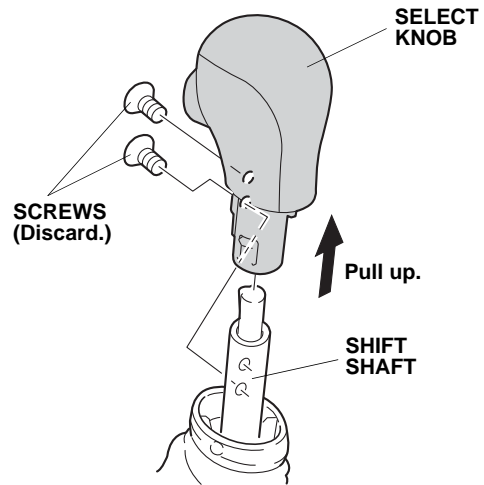


5. Install the new select knob with new screws. Using a torque screwdriver, torque the screws to 1.57 N-m (1.2 lbf-ft). Do not overtighten the screws.

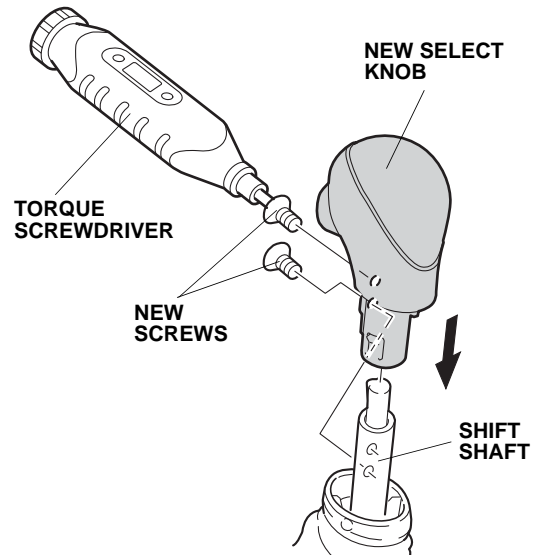

6. Install the select knob cover on the new select knob.
NOTE: Make sure the cover is properly seated.

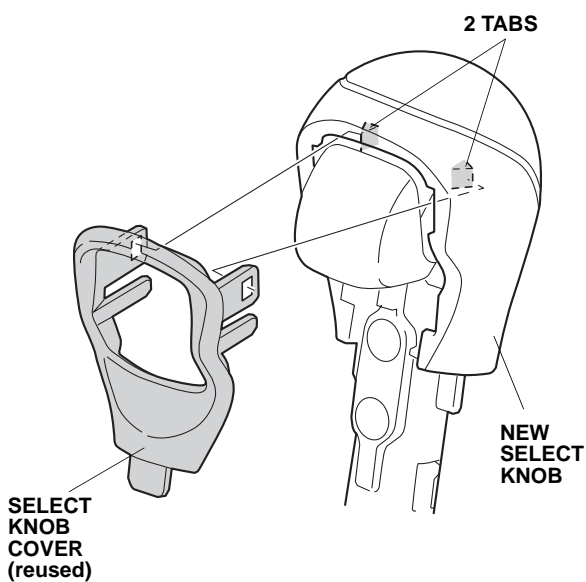

7. Pull up the shift boot and seat it in the original position.

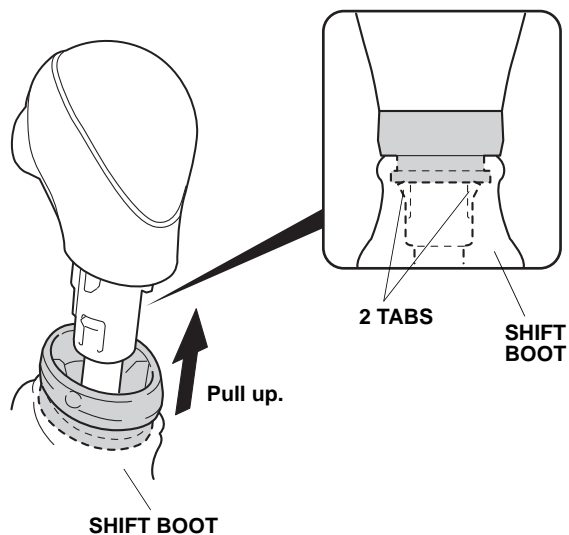

USE AND CARE

- Use a sponge or cloth and a solution of mild liquid dishwashing soap and water to clean the select knob.
- Rinse the knob with water, then dry it with a towel.
- Never use organic solvents such as benzene, thinner, or gasoline to clean the select knob.