


INSTALLATION


NOTE: Do not damage the finished surfaces of the body when installing the bicycle carrier.

Installing the Bicycle Attachment


1. Position the lower bracket assembly into the upright and bicycle arm bracket assembly as shown.

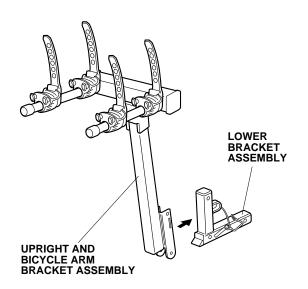


2. Install the 8 x 70 mm bolt, two 8 mm washers, and 8 mm nut as shown. Tighten the bolt securely.

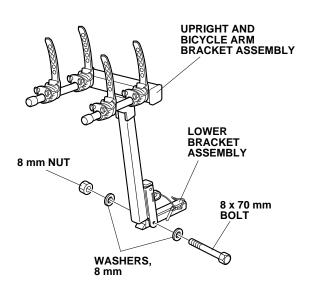

3. Install the pin and safety hook as shown.

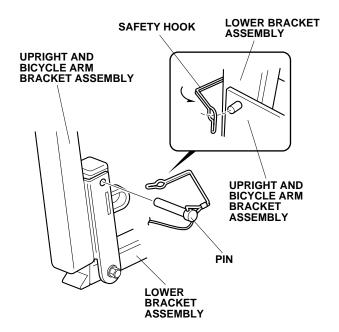


4. Slide the lower bracket assembly into the trailer hitch receiver until the hole in the bracket lines up with the receiver hole. Install the 12 x 40 mm bolt with a lock washer and a 12 mm washer through the receiver hole. Tighten the bolt securely.

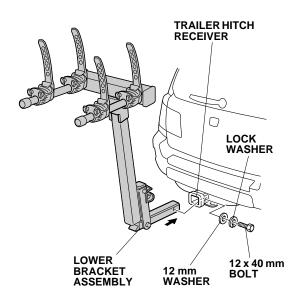


Loading the Bicycles


NOTE: Carry no more than 2 bicycles on the bicycle rack.

1. Place the heaviest bicycle onto the inner cradle. The cradles can be rotated or shifted on the bars to accommodate different styles of bicycles.

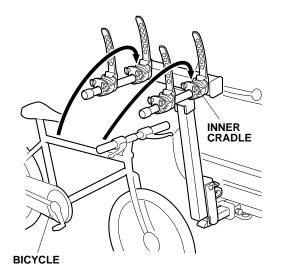


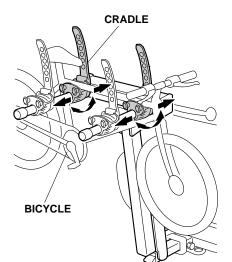


2. Install the two anti-sway cage assemblies to the bicycle arms as shown.

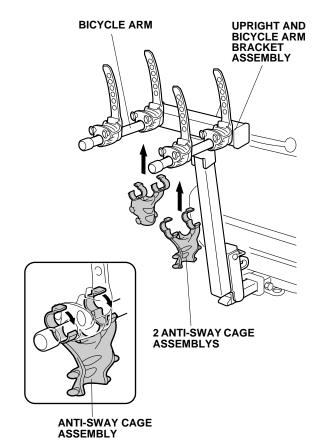

3. Tighten the bicycle arm straps securely around the bicycle frame.

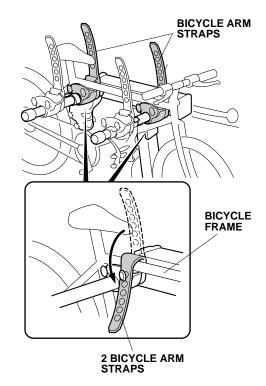


4. Install the two anti-sway straps and tighten each anti-sway strap securely around the bicycle frame.

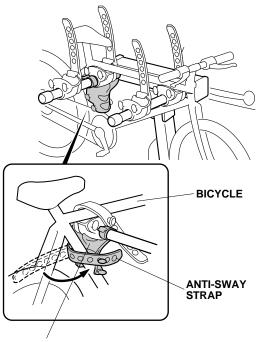


ANTI-SWAY CAGE ASSEMBLY

5. Using the strap provided, secure the bicycle wheels. Secure the strap buckle as shown.

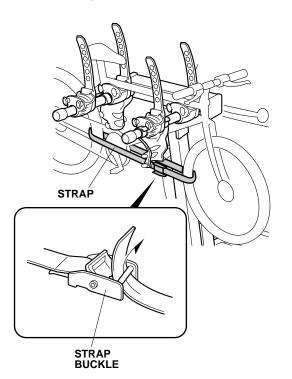


NOTE: After loading the bicycle(s), confirm that the view of the vehicle's rear lights is not blocked.

6. When loading two bicycles, alternate the direction of the bicycles.

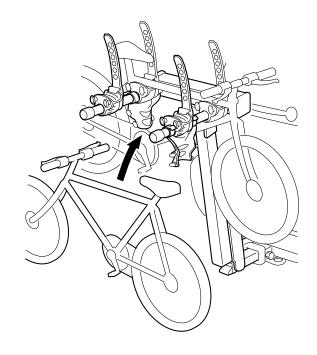


With No Bicycles Loaded

1. Release the safety hook by pulling outward to remove it from the pin. Support the bicycle arm bracket assembly and slide the pin out. Gently lower the bicycle arm bracket assembly to the stop position.

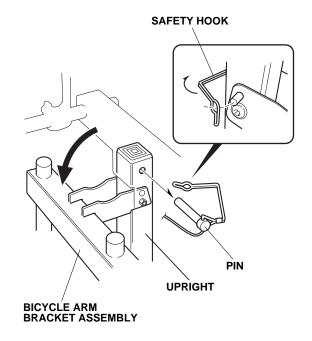


2. Reinstall the pin and safety hook as shown.

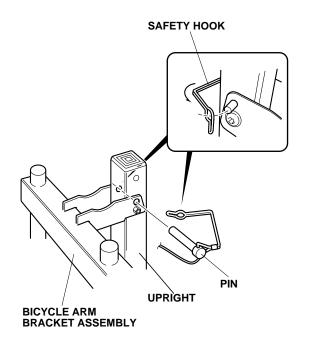

Opening the Tailgate

 All bicycles must be removed. Release the safety hook by pulling outward to remove it from the pin. Support the upright and bicycle arm bracket assembly, then slide the pin out

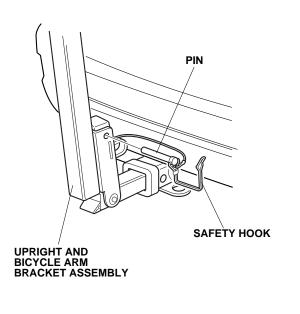

2. Gently lower the upright and bicycle arm bracket assembly to the stop position.

