



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Instruction No	Version	Part. No.
31454807	1.0	31454590, 31454591, 31650299, 31650300

Polestar chassis kit



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Special tools

	951 2945 Puller Tool number:951 2945 Tool description:Puller Tool boards:61
	999 7076 Lever Tool number:999 7076 Tool description:Lever Tool boards:46
	999 7088 Expander Tool number:999 7088 Tool description:Expander Tool boards:61
	951 2911 Hydraulic piston Tool number:951 2911 Tool description:Hydraulic piston Tool boards:70
	951 2914 Claw (size 2, for hydraulic piston 9512911) Tool number:951 2914 Tool description:Claw (size 2, for hydraulic piston 9512911) Tool boards:70
	999 7477 Wire Tool number:999 7477 Tool description:Wire Tool boards:70
	999 5500 SOCKET UPPER NUT REAR SHOCK ABSORBER Tool number:999 5500 Tool description:SOCKET UPPER NUT REAR SHOCK ABSORBER Tool boards:70



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden


951 2913 Claw (size 1, for hydraulic piston 9512911)

Tool number:951 2913

Tool description:Claw (size 1, for hydraulic piston 9512911)

Tool boards:70

Equipment




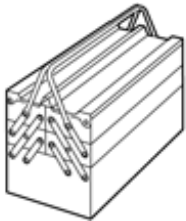


IMG-345497



IMG-239664

Nm
lbf.ft

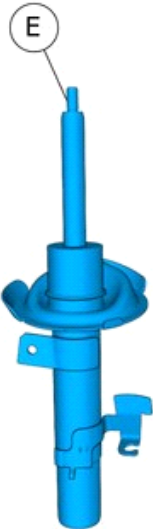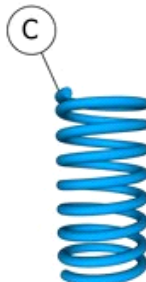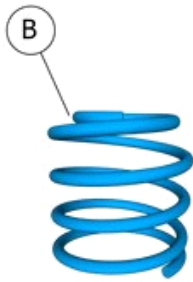

x2



x2

IMG-417590



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

Information

1	<p>Read through all of the instructions before starting installation.</p> <p>Notifications and warning texts are for your safety and to minimise the risk of something breaking during installation.</p> <p>Ensure that all tools stated in the instructions are available before starting installation.</p> <p>Certain steps in the instructions are only presented in the form of images. Explanatory text is also given for more complicated steps.</p> <p>In the event of any problems with the instructions or the accessory, contact your local Volvo dealer.</p>
---	---

Color symbols

2	<div></div> <p>IMG-363036</p>	<div><p>Note! This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.</p><ul style="list-style-type: none">Used for focused component, the component with which you will do something.Used as extra colors when you need to show or differentiate additional parts.Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.Used when the component is not fully removed from the vehicle but only hung to the side.Used for standard tools and special tools.Used as background color for vehicle components.</div>
---	-------------------------------	--

Removal


3	<p>Raise the car.</p>
---	-----------------------



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

4

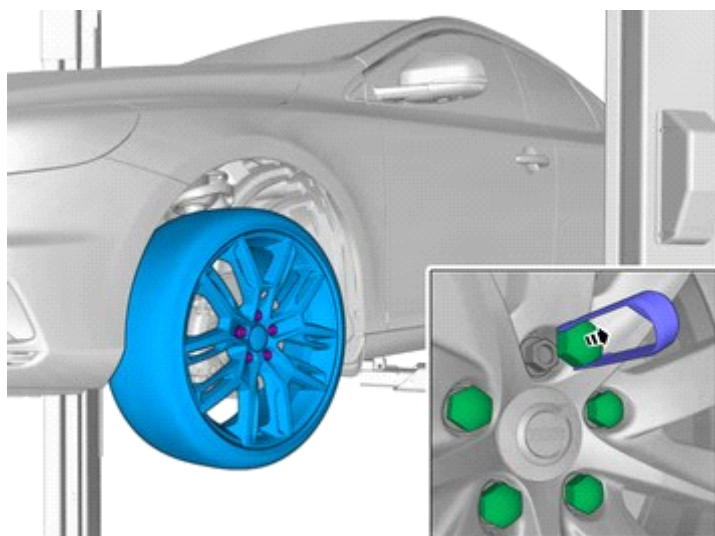

IMG-417562

Remove the nuts.


Remove the marked part.

Tightening torque: Wheel to wheel hub

Stage 1: 20 Nm

Stage 2: 140 Nm

5

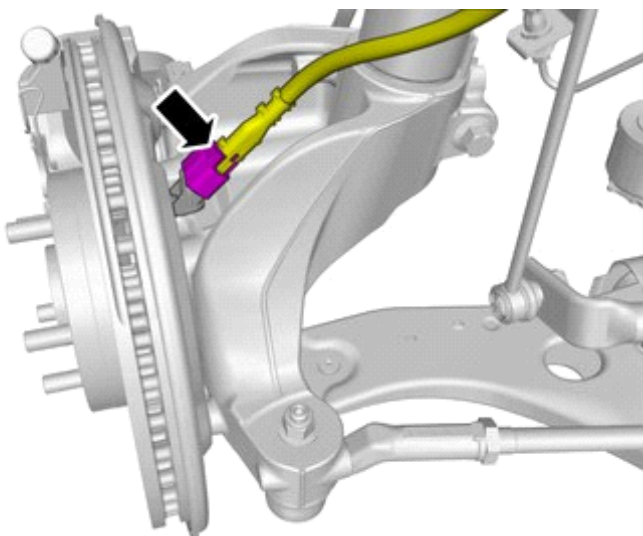

IMG-417390

Disconnect the connector.


Applies to the right-hand side



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

6

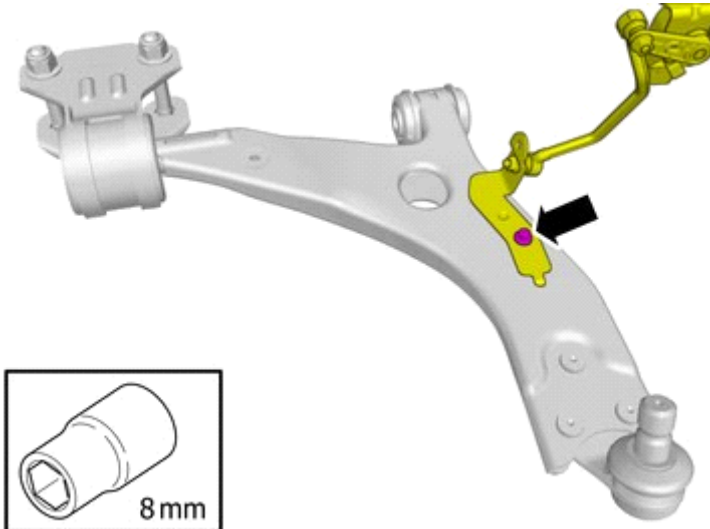


IMG-417712

Remove the screw.

Tightening torque: Headlamp levelling position sensor to control arm , 6 Nm

7

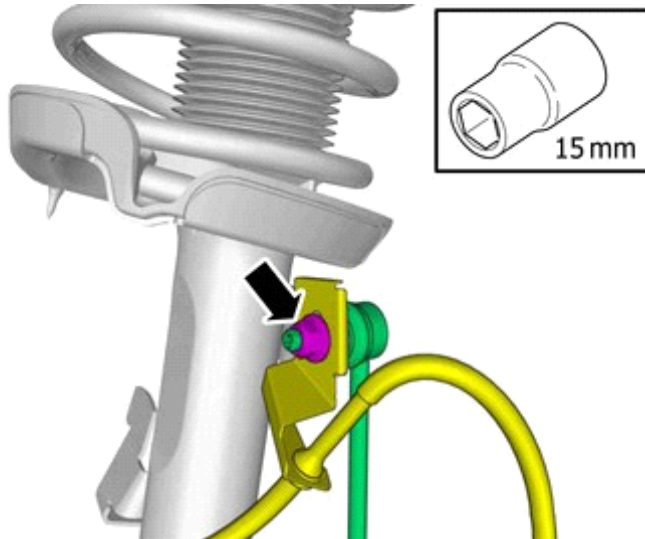


IMG-417395

Remove the nut.

Fold marked part to one side.

Tightening torque: Front stabilizer bar link to strut and spring assembly , 55 Nm

8

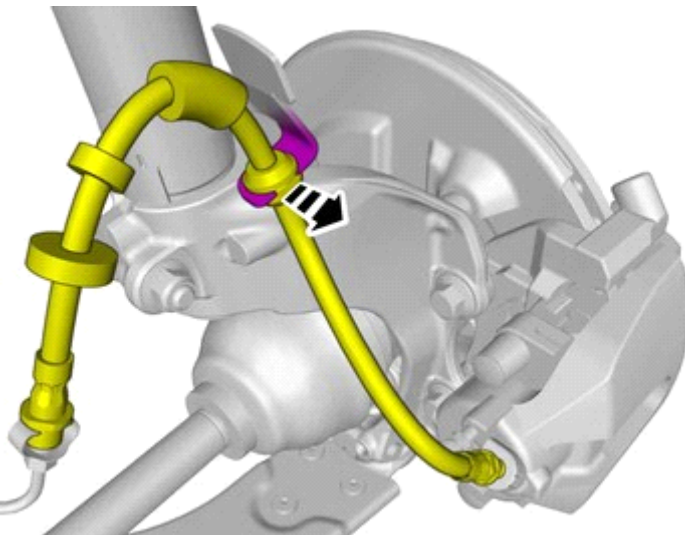

IMG-417400


Remove the part carefully



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

9

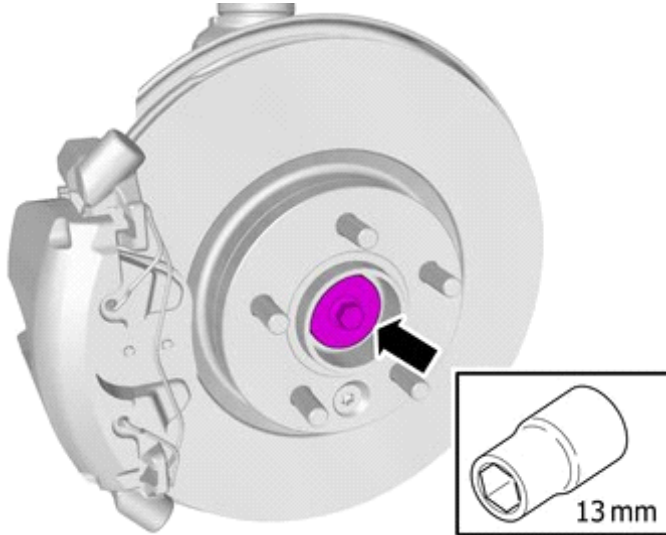

IMG-417403

Warning!

Make sure that a new bolt is installed.


Remove the screw.

Tightening torque: Driveshaft to wheel hub (front)

Stage 1: 35 Nm

Stage 2: 90 degree

10

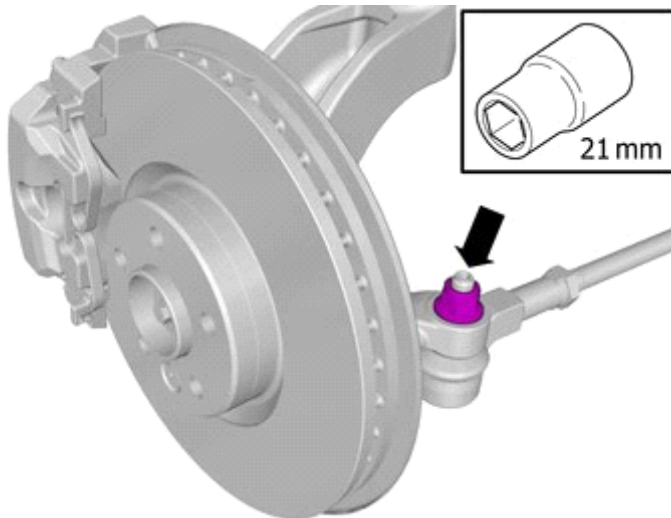


IMG-418169

Remove the nut.

Tightening torque: Tie rod end to wheel knuckle , 80 Nm

11

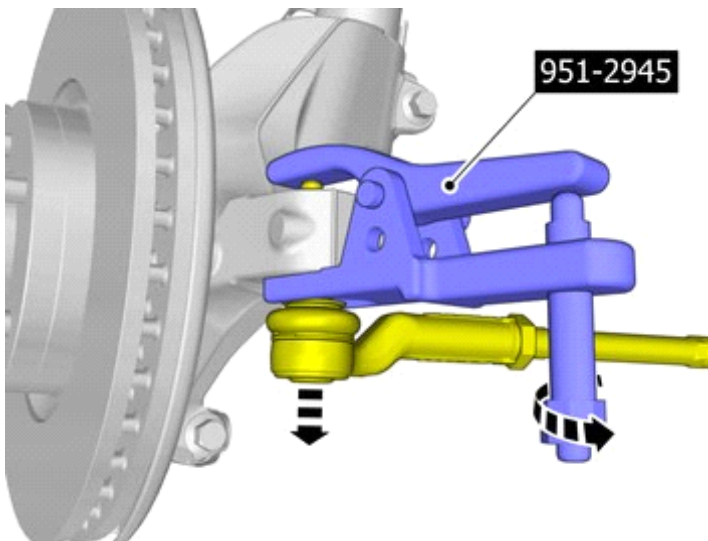

IMG-417406


Use special tool: T9512945, Puller



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

12

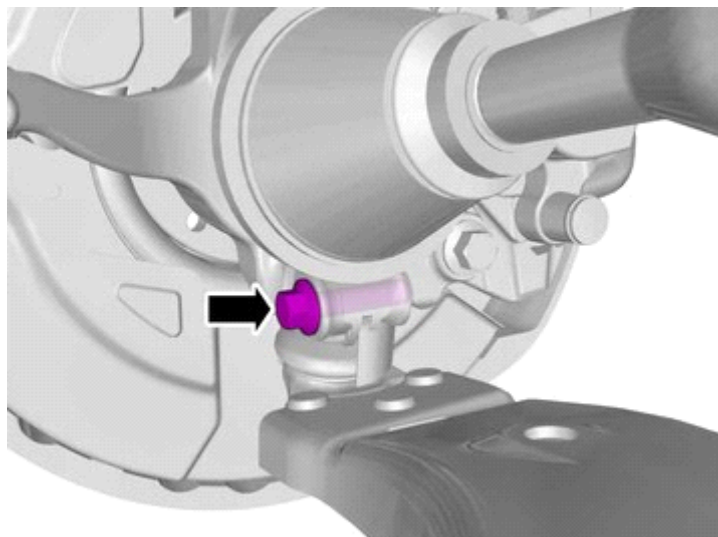


IMG-418502

Remove the screw.

Tightening torque: Ball joint to wheel knuckle , 110 Nm

13

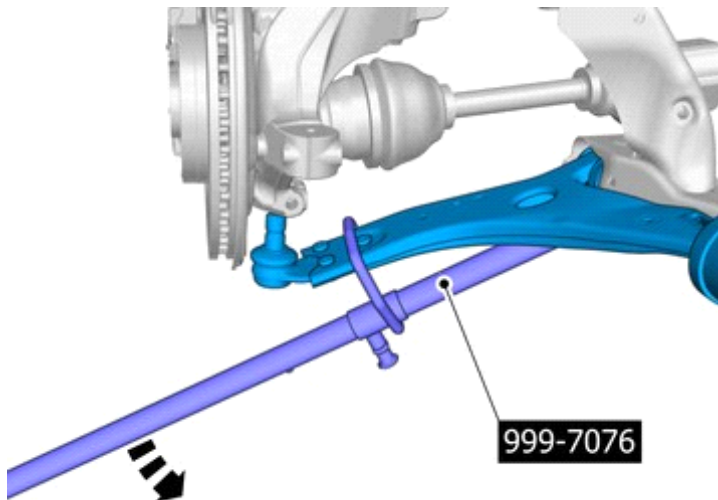

IMG-418235


Use special tool: T9997076, Lever



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

14

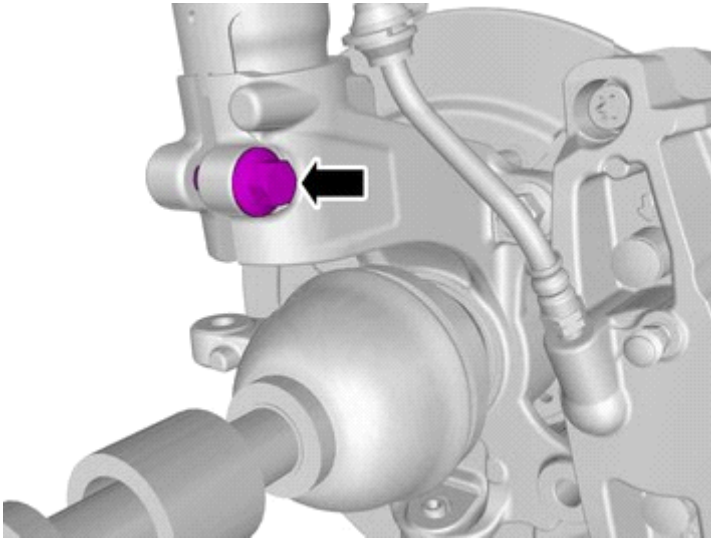


IMG-418221

Remove the screw.

Tightening torque: Wheel knuckle to strut and spring assembly , 110 Nm


15

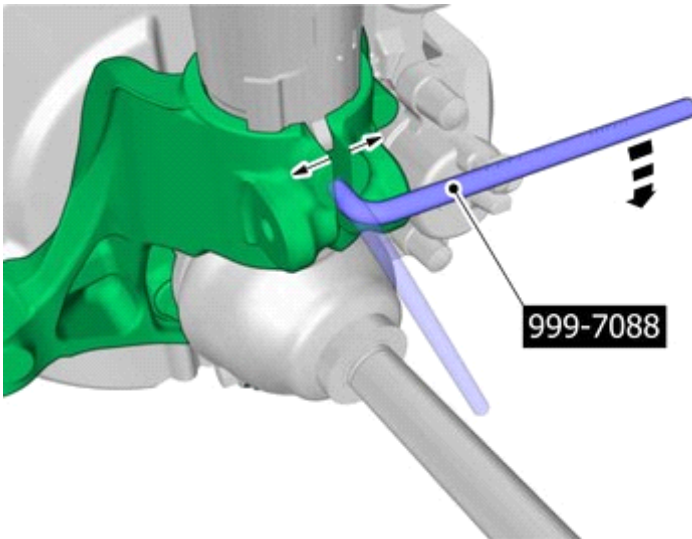

IMG-417433

Use special tool: T9997088, Expander

16

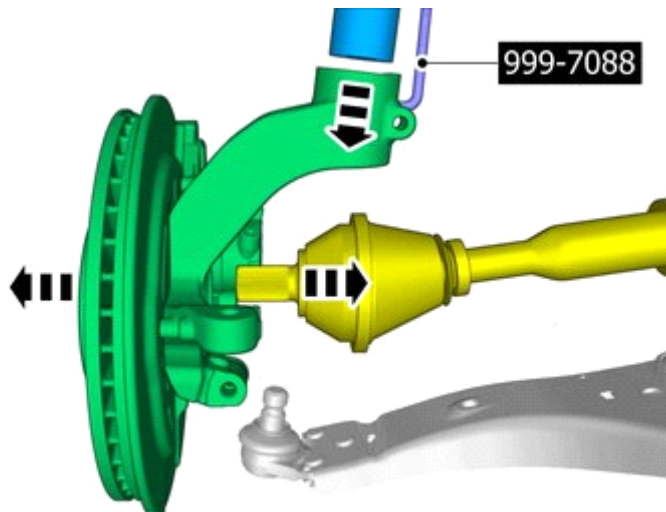

IMG-418244

Warning!

Make sure that no load is placed on the brake hose.

Caution!

Make sure that the inner constant velocity (CV) joint does not separate.




Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

17

Repeat the steps when removing on opposite side.


18

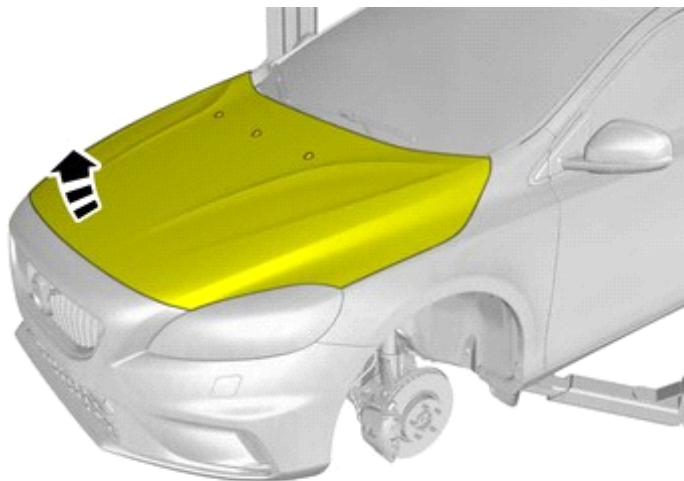

Open the hood.

IMG-417486

19

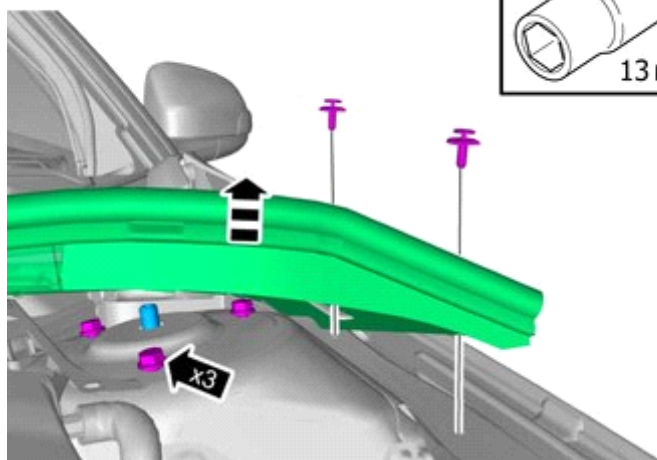

IMG-418276

Loosen the clips.

Remove the screws.


Tightening torque: Strut and spring assembly to strut and spring assembly turret , 30 Nm



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

20

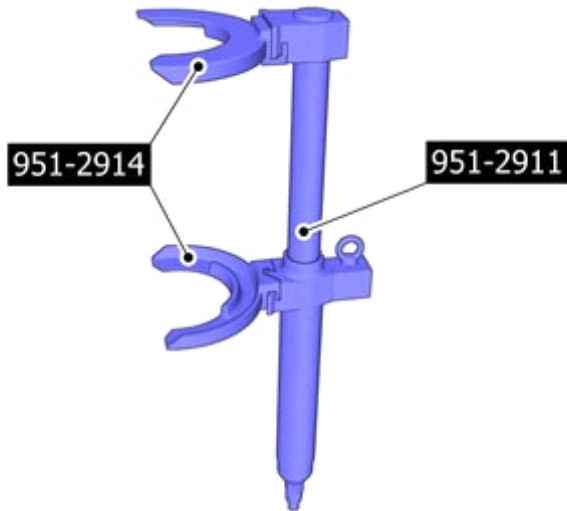


IMG-418282

Use special tool: T9512911, Hydraulic piston

Use special tool: T9512914, Claw (size 2, for hydraulic piston 9512911)

21

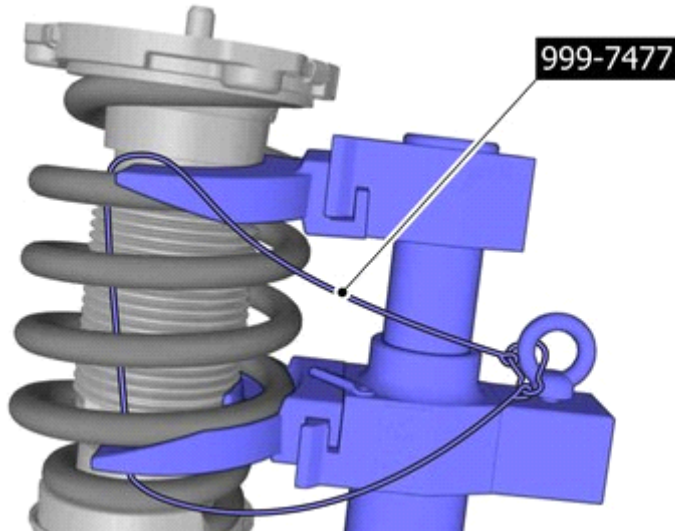


IMG-417552

Warning!

The safety wire must be installed while the spring is compressed.

Use special tool: T9997477, Wire

22

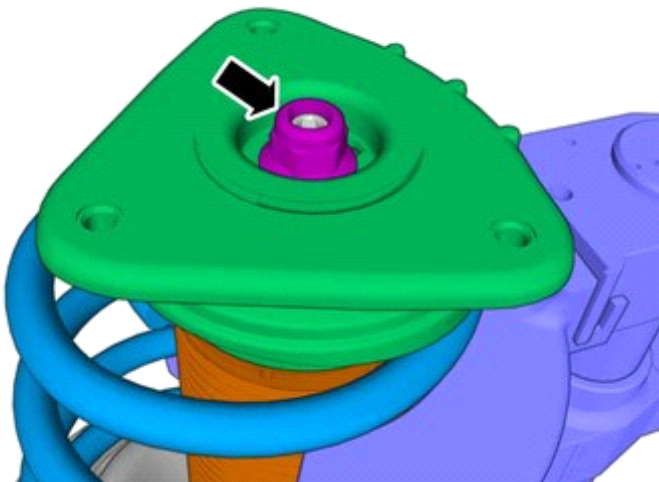

IMG-417561

Warning!


Make sure that a new nut is installed.



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

23

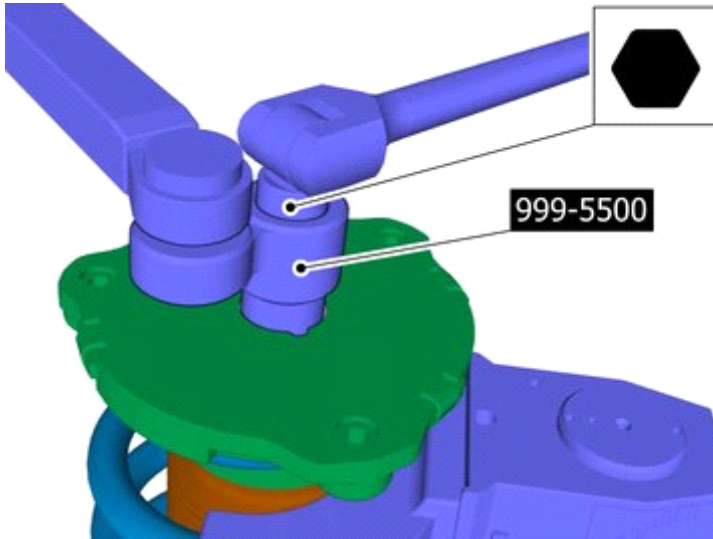

IMG-417560

Remove the nut.


Use special tool: T9995500, SOCKET UPPER NUT REAR SHOCK ABSORBER

Tightening torque: Bearing front shock absorber to shock absorber , 50 Nm

24

Repeat the steps when removing on opposite side.

25

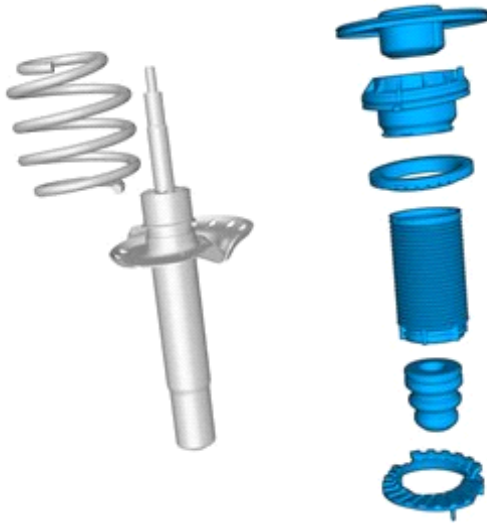

IMG-418326

Reuse existing parts.

Reinstall the removed parts in reverse order.


Accessory installation



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

26

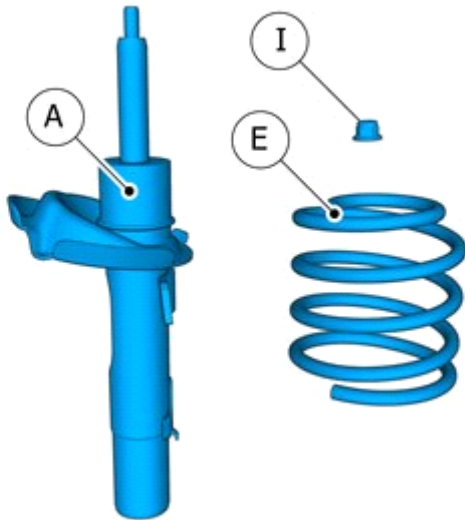


Warning!

Take extra care when handling the compressed spring.

IMG-417600


27

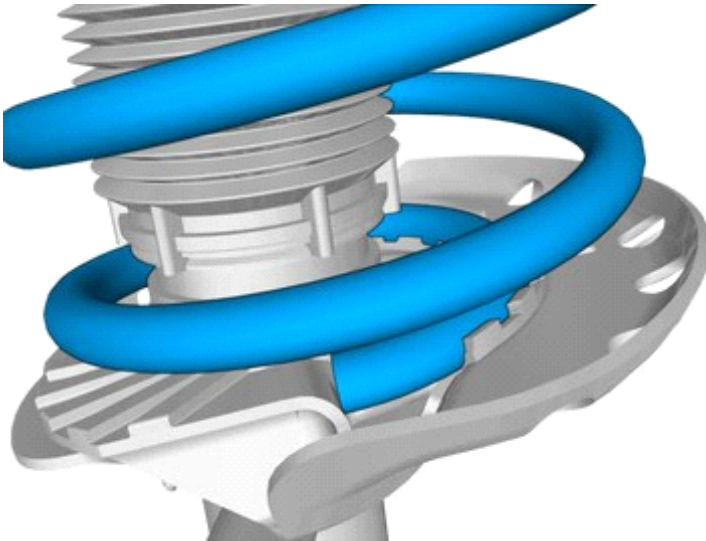

Place the component where indicated in the graphic.

IMG-418284

28

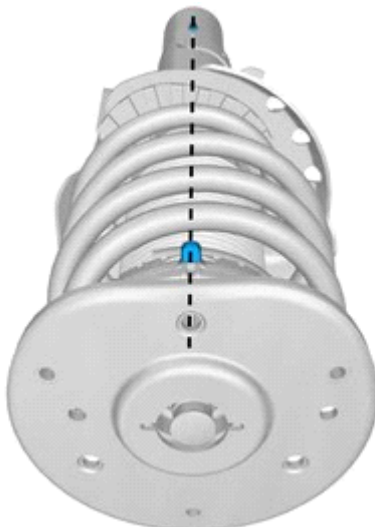

Caution!

Make sure that the components are positioned correctly.

IMG-418370



Installation instructions, accessories


Volvo Car Corporation Gothenburg, Sweden

29

Reinstall the removed parts in reverse order.

Removal

30

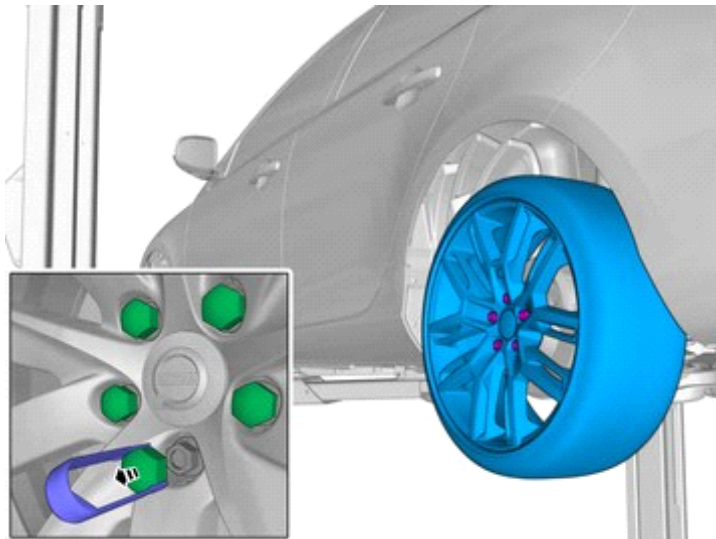

IMG-417646

Remove the nuts.


Remove the marked part.

Tightening torque: Wheel to wheel hub

Stage 1: 20 Nm

Stage 2: 140 Nm

31

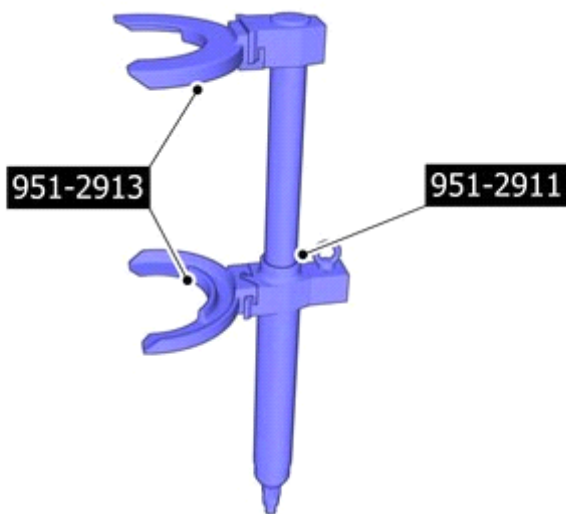

IMG-418371

Use special tool: T9512911, Hydraulic piston


Use special tool: T9512913, Claw (size 1, for hydraulic piston 9512911)



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

32

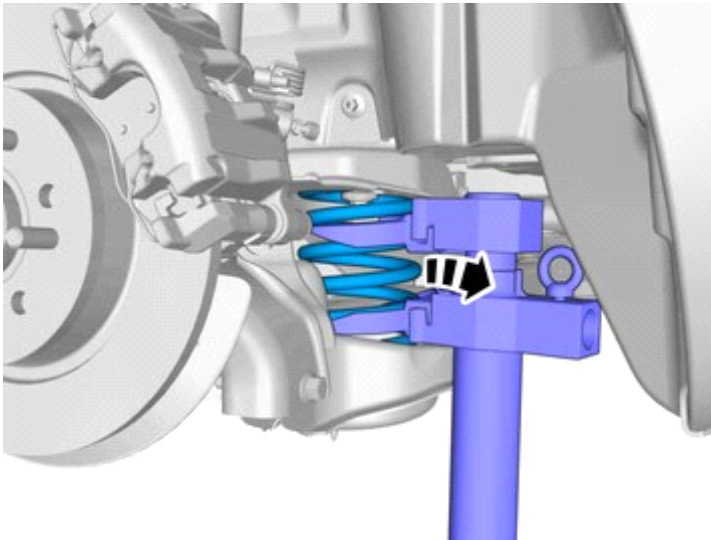

IMG-417700


Warning!

The safety wire must be installed while the spring is compressed.

Remove the marked part.

Use special tool: T9997477, Wire


33

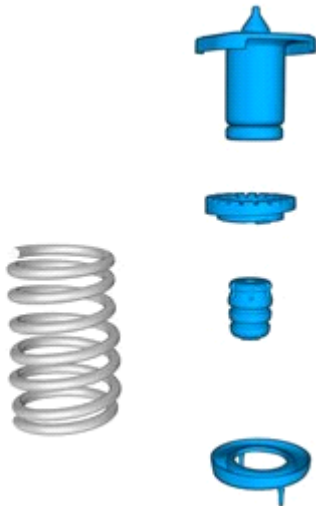

IMG-418501

Reuse existing parts.

34

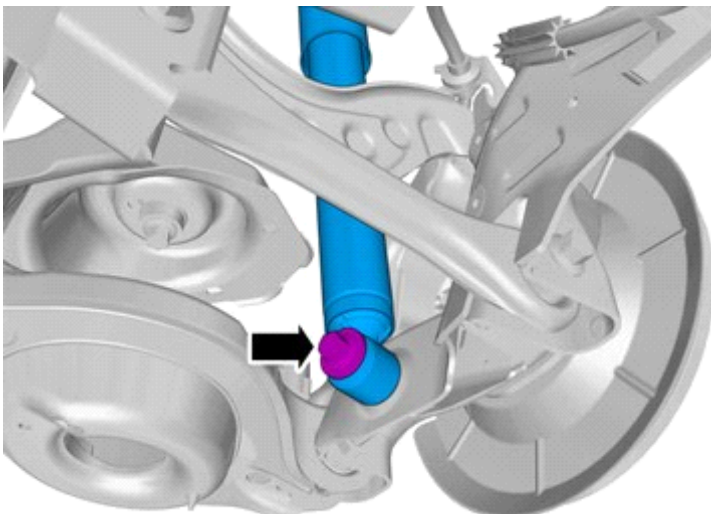

IMG-417706


Remove the screw.



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

35

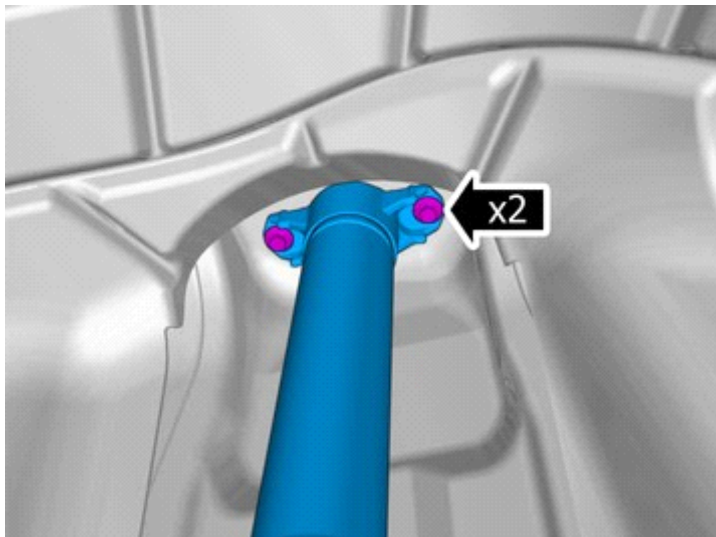

IMG-417707

Remove the screws.


Remove the marked part.

36

Repeat the steps when removing on opposite side.

Accessory installation

37

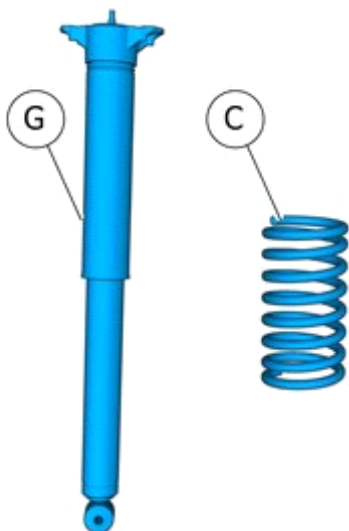

IMG-417710

Warning!


Take extra care when handling the compressed spring.



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

38

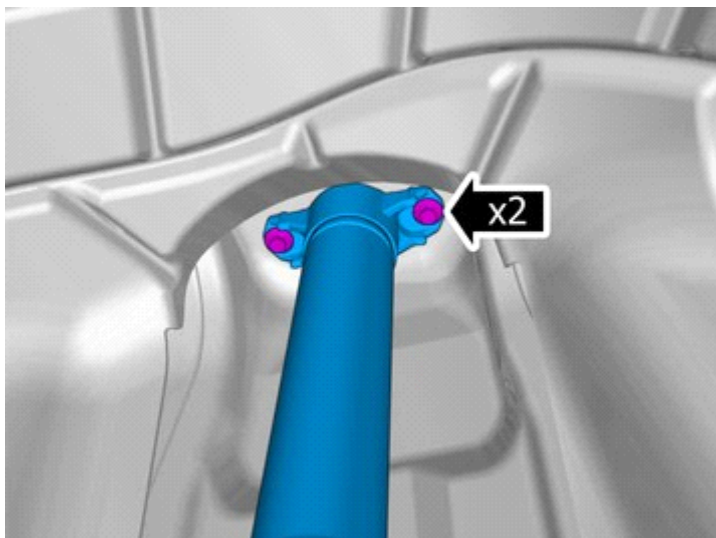


IMG-417707

Install component that comes with the accessory kit.

Tightening torque: M8 , 24 Nm

39

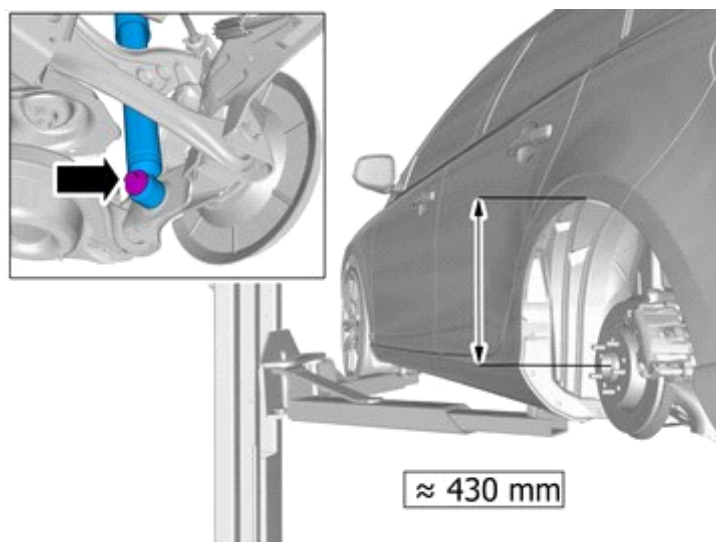

IMG-418559

Tighten the screw.

Tightening torque: Rear shock absorber to wheel knuckle , 175 Nm

40


Repeat the steps when installing accessories on opposite side.



Installation instructions, accessories

Volvo Car Corporation Gothenburg, Sweden

41

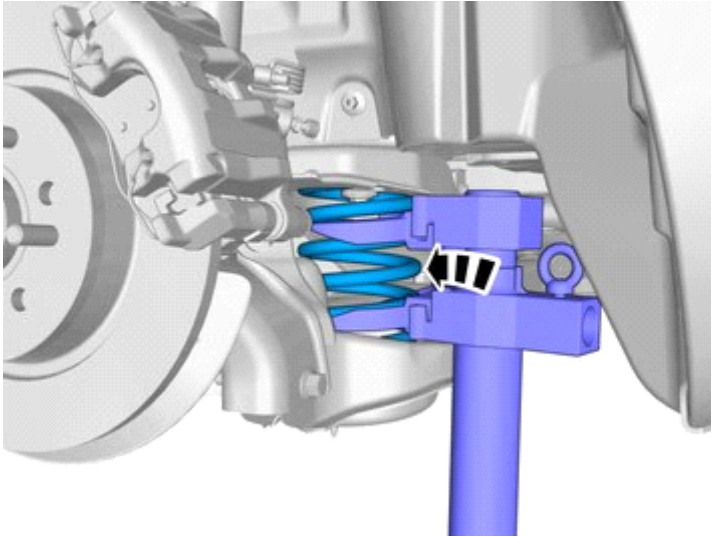

IMG-417711

Install component that comes with the accessory kit.

Repeat the steps when installing accessories on opposite side.

42

Carry out wheel alignment.

43

Calibrate according to: DIAGNOSTICS/CAR
COMMUNICATION/Advanced/HCM/Calibrating position sensor

44

In the event of any problems with the instructions or the
accessory, contact your local Volvo dealer.